


DETAIL #:
AVM-0520-2582-P

AVM SYSTEM 520

AUSSIE MEMBRANE 520

Metal Straps at Plywood Joints Detail
for Topping Slabs Waterproofing on
Plywood Substrates
AVM AUSSIE MEMBRANE 520
Fluid Applied Waterproofing.

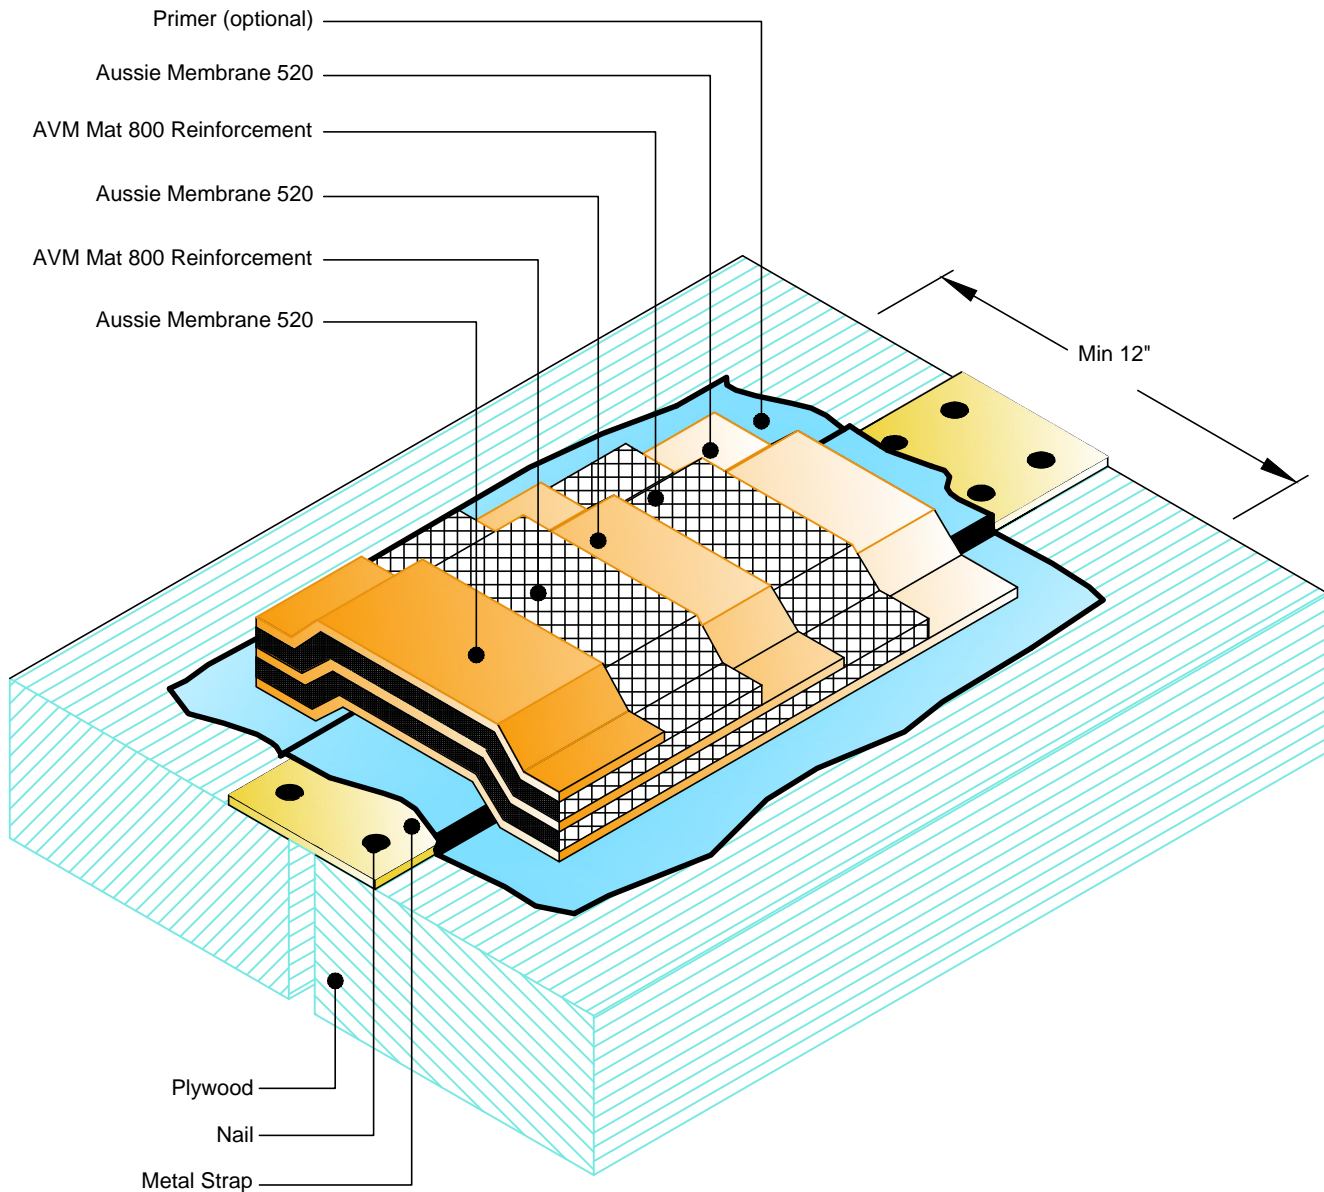

NOTES:

1. This detail may not be applicable or needed if installing metal lath and AVM Crete 6400 over the plywood substrates before installing the Aussie Membrane. (See Detail # AVM-520-2502-P)
2. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
3. For proper membrane thickness and drainage / protection requirements, refer to other "Topping Slab on Plywood" Details.
4. Make sure all nails are flush with the plywood surface or slightly sunken in below it. (Nails protruding above the plywood surface may puncture the membrane)
5. Remove/grind/repair as necessary any other protrusions, sharp edges, etc that may puncture or damage the membrane.
6. Metal straps must be reinforced with Aussie Membrane 520 and a single layer of Mat 800 to prevent damage to the membrane. For extra protection, double reinforce as shown. (use two layers of Mat 800)
7. After preparing the metal straps and surrounding plywood surfaces, apply a liberal coat of Aussie Membrane 520 before installing the first layer of fabric to ensure the strap edges and nail heads will not cut into or damage the fabric.

AVM Industries, Inc.
8245 Remmet Ave, Canoga Park, CA 91304

Quality Waterproofing Products

888.414.1041 818.888.0050
www.avmindustries.com