


DETAIL #:  
**AVM-550-2550**  
 AVM System 550  
**Aussie Skin 550**

Grade Beam Detail: Aussie Skin Over  
 Grade-Beam - Moderate Risk - A

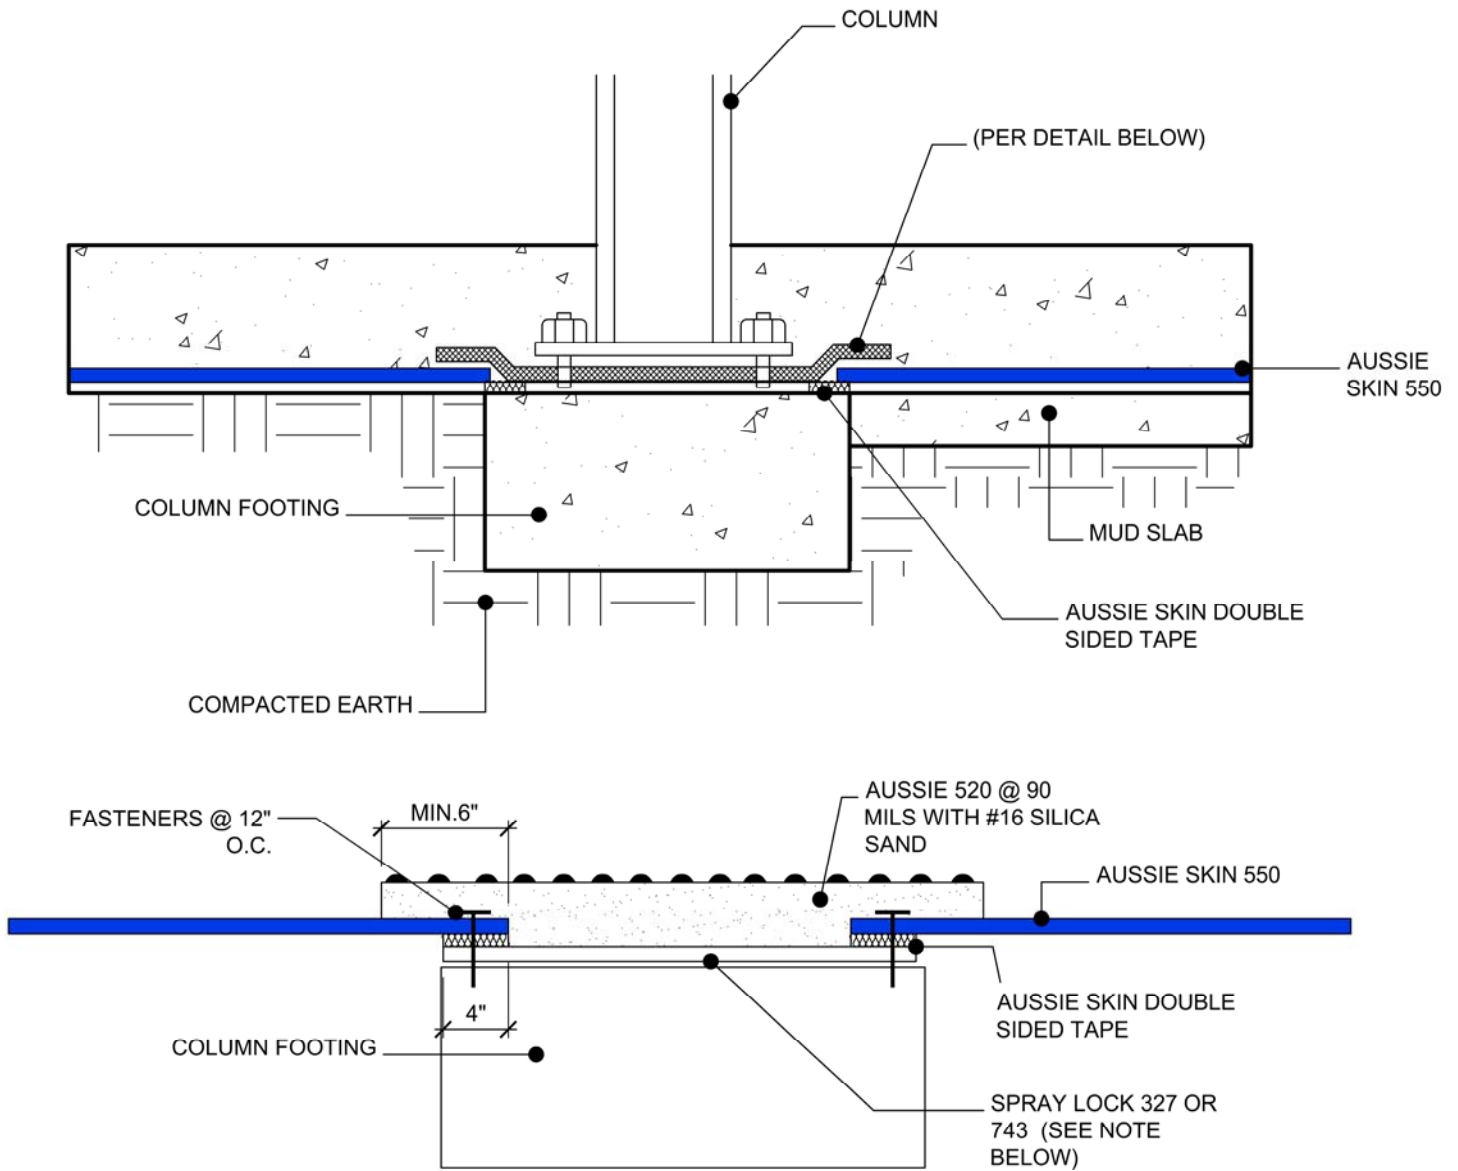

- NOTES:
1. Aussie Skin 550 is a Heavy, Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
  2. Use Spray-Lock 327 for Green Concrete or Spray-Lock 743 for Cured Concrete. Apply per Spray-Lock's Installation Instructions. See [www.spraylock.com](http://www.spraylock.com)
  3. Spraylock Moisture Barrier required if Aussie 520 fails to properly bond or bubble without it. Test to verify.