
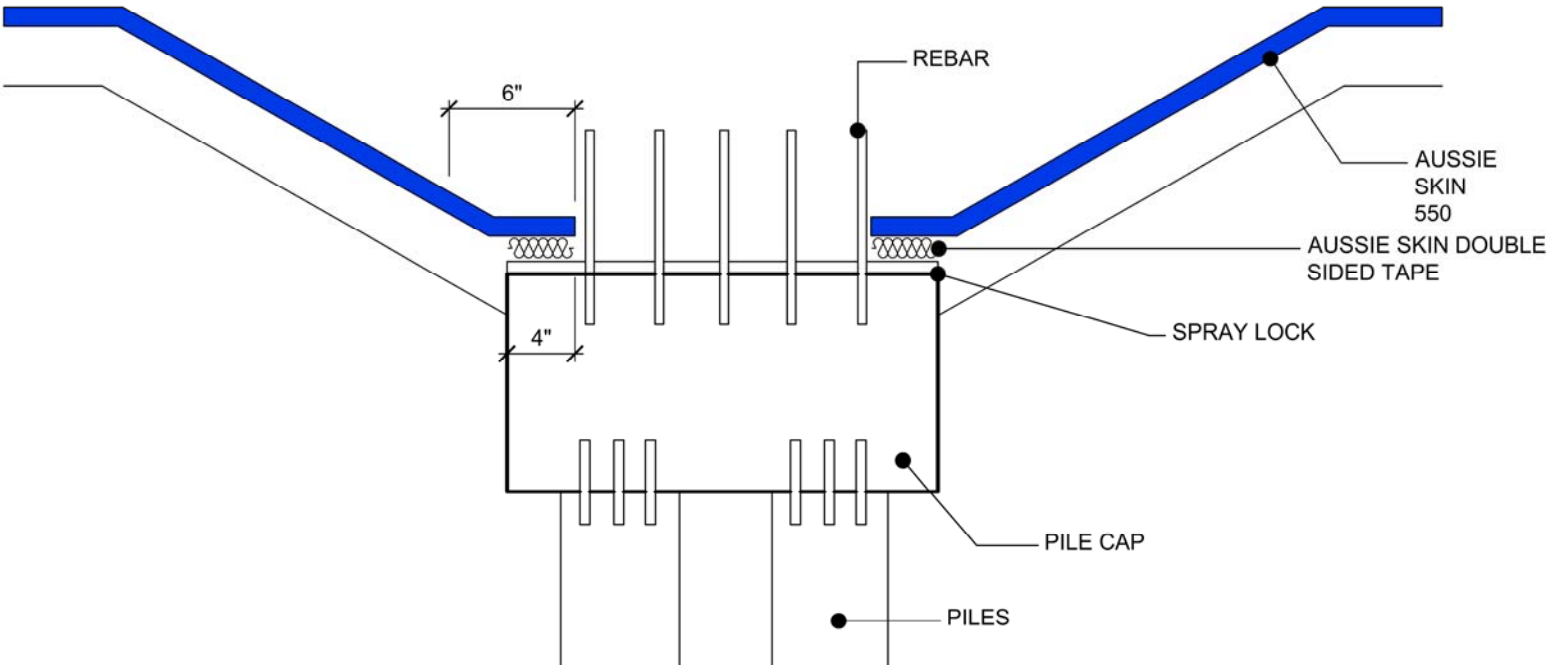


DETAIL #:
AVM-550-2630
 AVM System 550
Aussie Skin 550

Pile Cap Detail - Low Risk

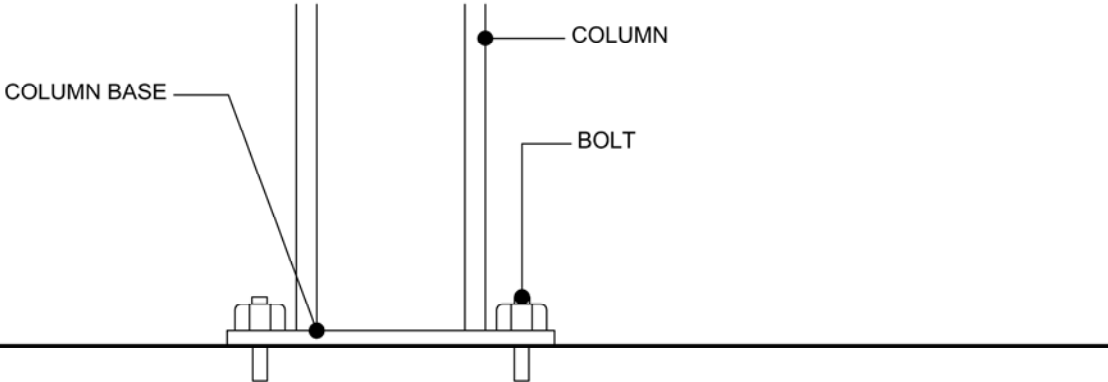

- NOTES:
1. Aussie Skin 550 is a Heavy, Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
 2. Concrete Surface must be free of dirt, debris, release agents and anything else that might inhibit bonding.
 3. Concrete surface must be structurally sound, uniform and finished with a light broom finish.
 4. Use Spray-Lock 327 for Green Concrete or Spray-Lock 743 for Cured Concrete. Apply per Spray-Lock's Installation Instructions.

Below Water Table Installations

101 For Aussie Skin installations below the water table, contact AVM to verify ALL details!