


DETAIL # :  
AVM-502-3002-C  
Aussie Membrane 502

VIEW TYPE:  
Cut Sheet

## Pavers on Concrete Substrate over Aussie Membrane 502 Fluid Applied Waterproofing

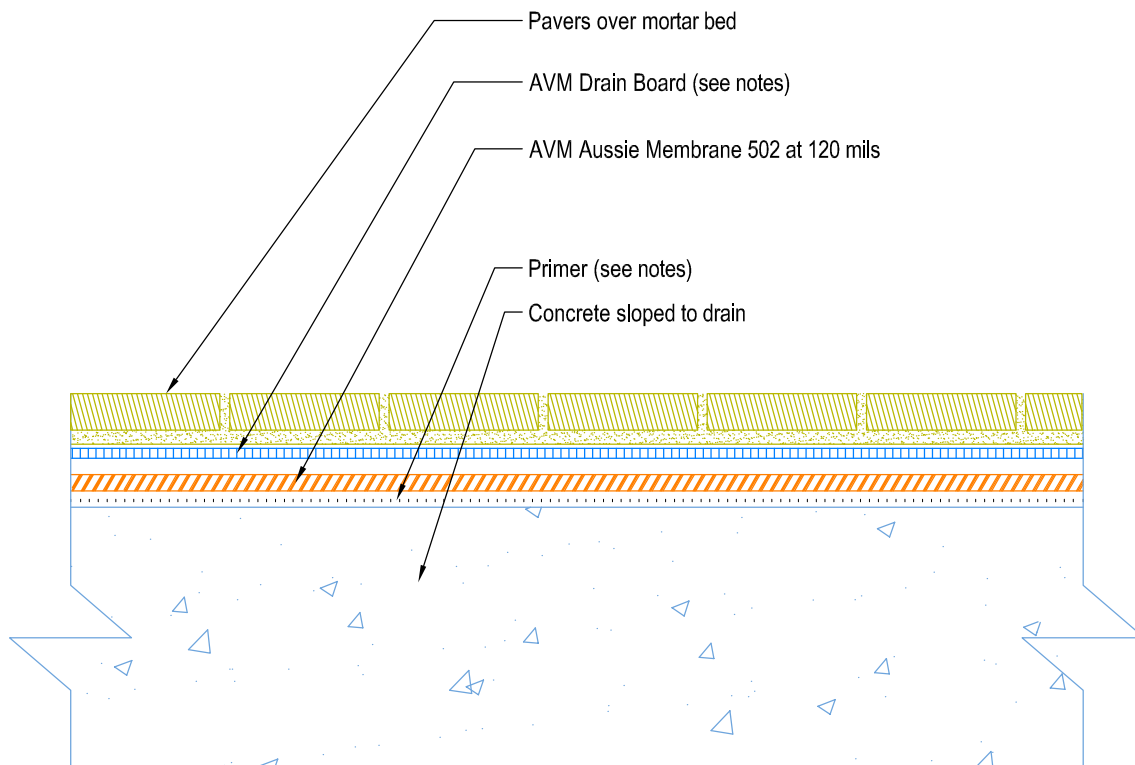

### Notes:

1. Aussie Membrane 502 is a two-component, Water-Based Bitumen Membrane (Spray Applied) for Below-Grade, Lagging, Between-Slab, Planters, Roof-Gardens, Paver Systems and similar type Waterproofing.
2. Topping slabs for pedestrian traffic use AVM Drain Board 6000
3. Topping slabs above 4" thick or for vehicular traffic use AVM Drain Board 9000
4. For extra protection, use asphaltic panels below the drainage boards.
5. All corners require fabric reinforced detail coat. All inside corners also require min 2"x2" mortar or 3/4" sealant (Aussie Seal M) cant prior to installing the detail coat.
6. Verify concrete wall absorbs water. If not, prime with AVM Adhesive 501. Otherwise, prime surfaces with Aussie Membrane 502 Resin.