


DETAIL #:  
**AVM-550-2540**

AVM System 550  
**Aussie Skin 550**

## Aussie Skin Over Grade-Beam - Hydrostatic

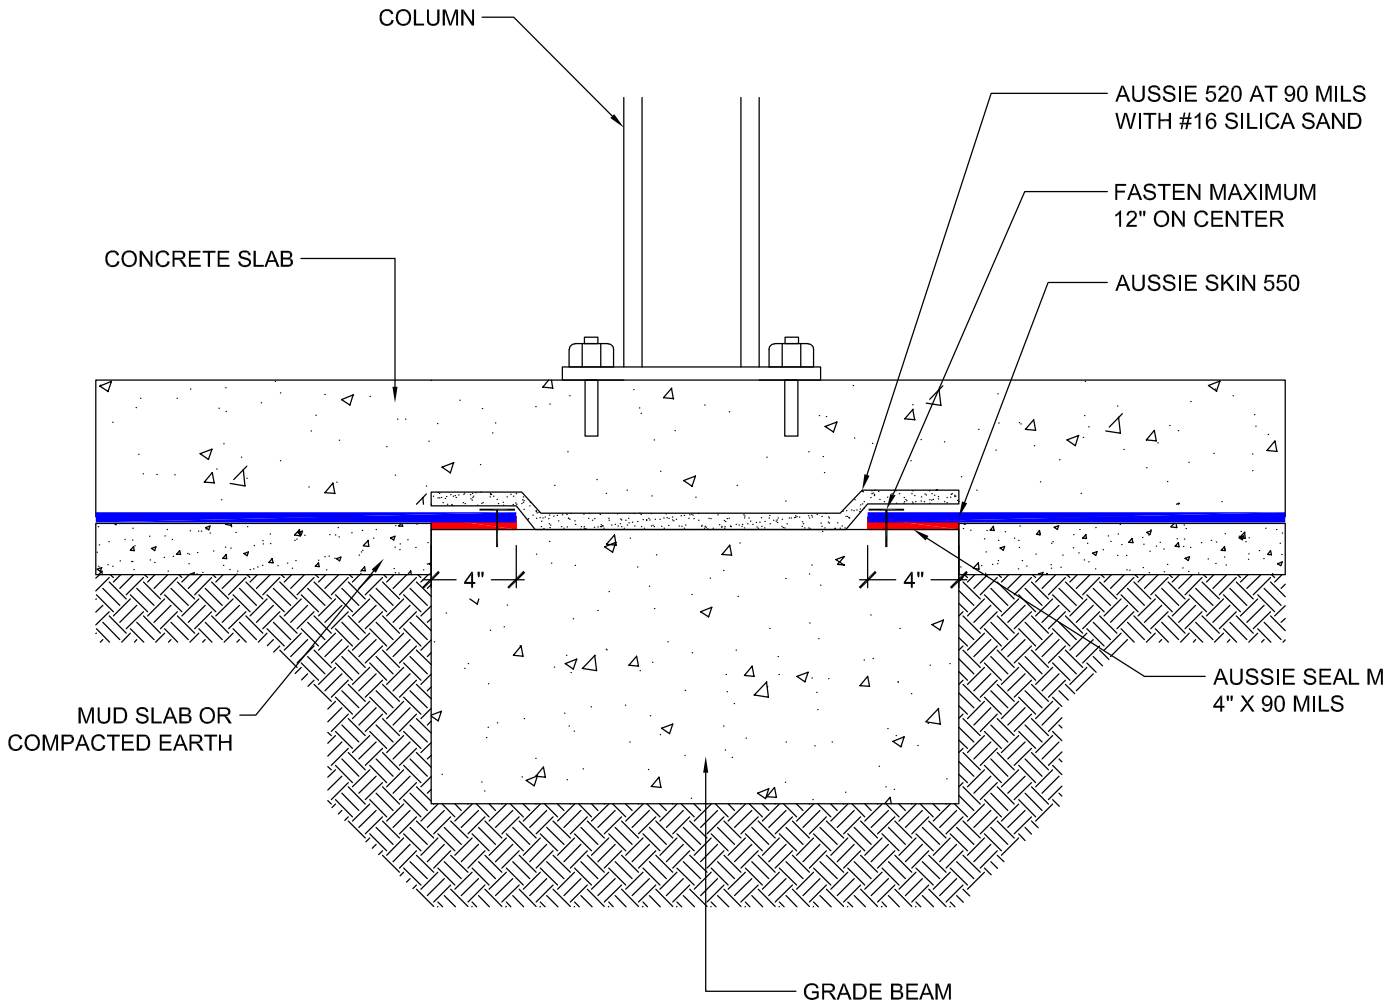

### NOTES:

1. Aussie Skin 550 is a Heavy, Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
2. Concrete must cure min 7 days.
3. Aussie Membrane 520 must cure 24 hours prior to concrete placement.