


DETAIL #:  
**AVM-550-6260**  
 AVM System 550  
**Aussie Skin 550**


Outside Corner Detail - at Bottom of Wall

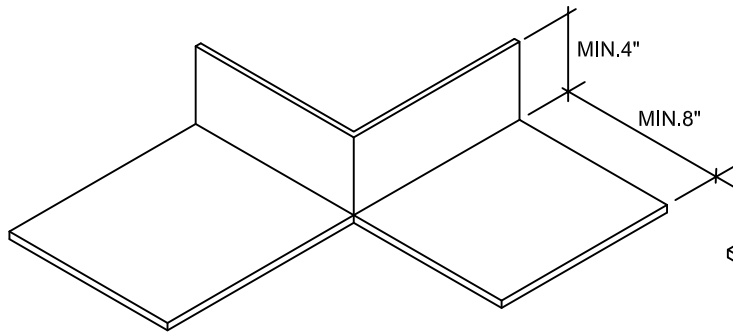


PIECE #1




PIECE #2

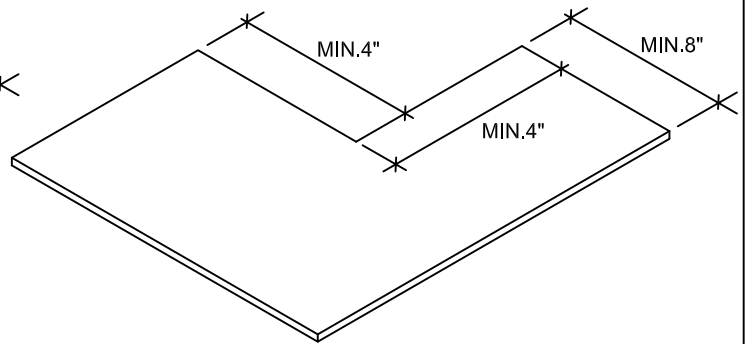

STEP 1

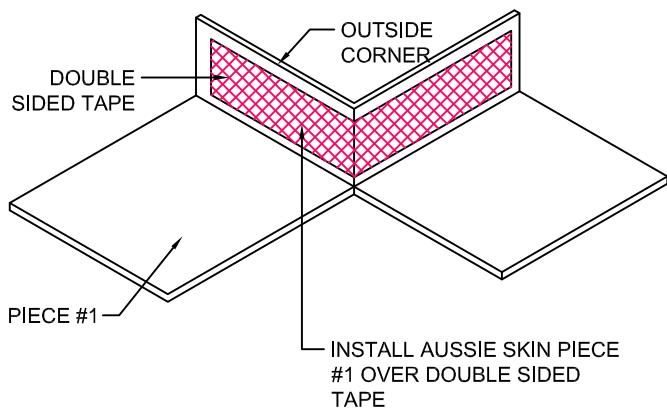

STEP 2

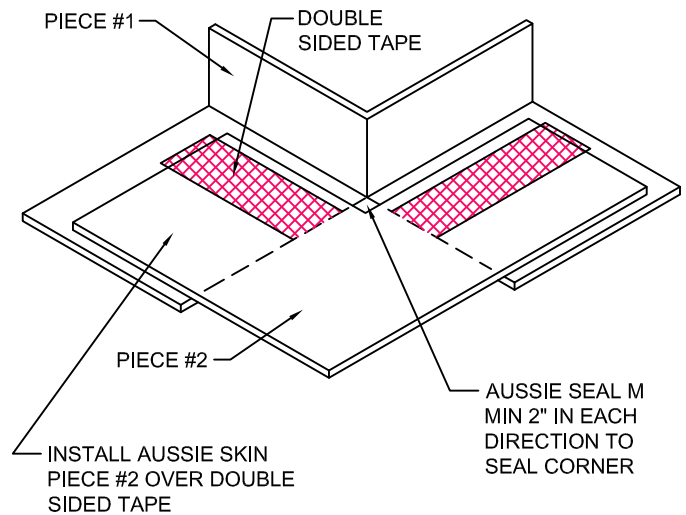

NOTES:

1. Aussie Skin 550 is a Heavy, Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
2. All surfaces must be clean and sound before installing the lap joints. (Remove excess sand before applying double sided tape)