


DETAIL # :	AVM-502-7002-C
	Aussie Membrane 502
VIEW TYPE:	Cut Sheet

Area Drain Detail

Aussie Membrane 502

Fluid Applied Waterproofing

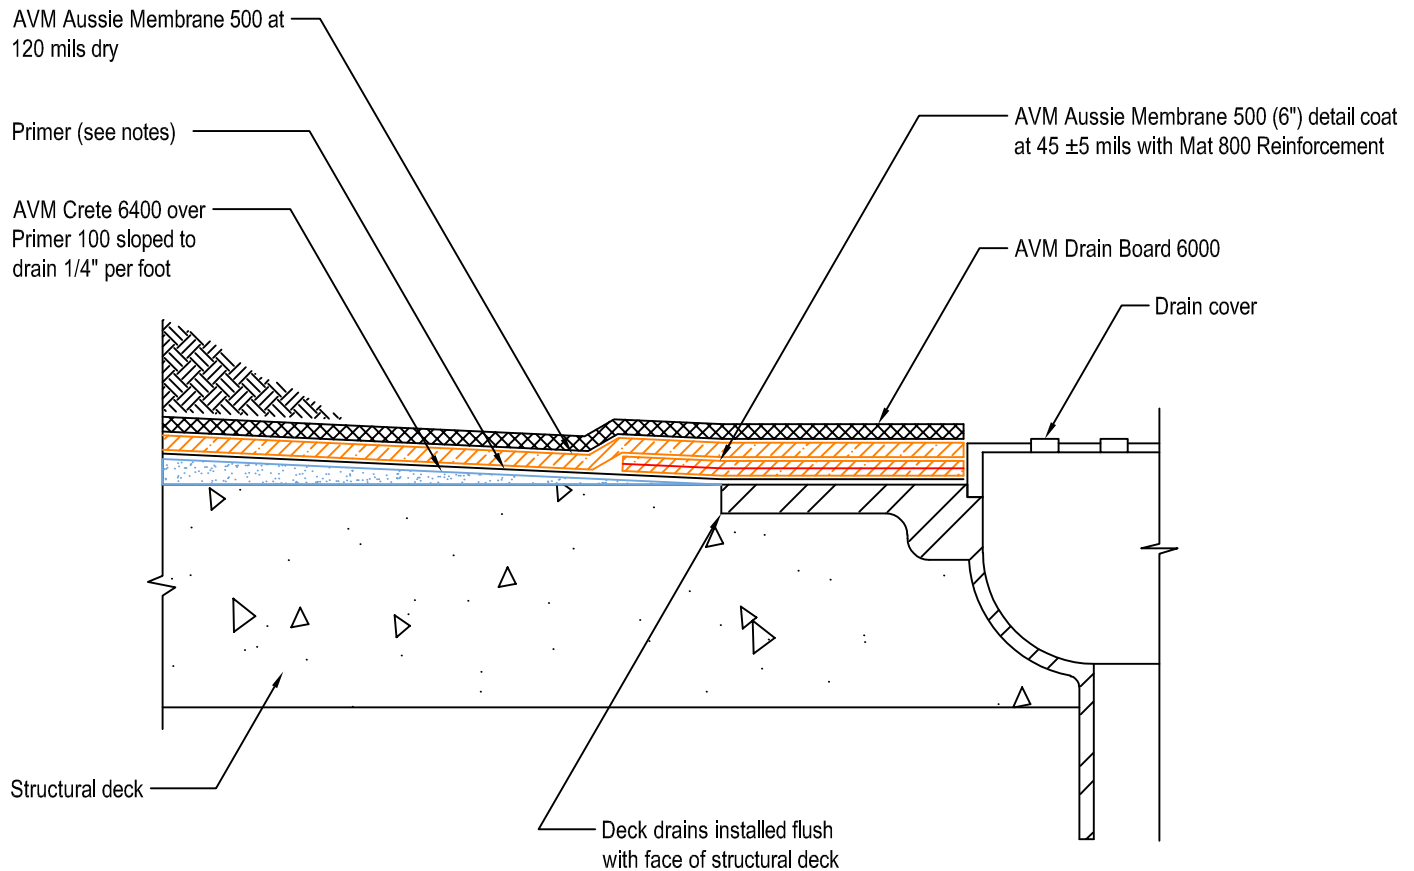

Notes:

1. Aussie Membrane 502 is a two-component, Water-Based Bitumen Membrane (Spray Applied) for Below-Grade, Lagging, Between-Slab, Planters, Roof-Gardens, Paver Systems and similar type Waterproofing.
2. Contact AVM if no drain board or protection board is specified.
3. Topping slabs for pedestrian traffic use AVM Drain Board 6000
4. Topping slabs above 4" thick or for vehicular traffic use AVM Drain Board 9000
5. All corners require fabric reinforced detail coat. All inside corners also require min 2"x2" mortar or 3/4" sealant (Aussie Seal M) cant prior to installing the detail coat.
6. Verify concrete wall absorbs water. If not, prime with AVM Adhesive 501. Otherwise, prime surfaces with Aussie Membrane 502 Resin.