DETAIL #:


AUSSIE-MATE-1502-C

AVM SYSTEM 580/582/585

**AUSSIE MATE®** 

Planter Basic Detail AVM AUSSIE MATE® Bituminous Sheet Waterproofing.



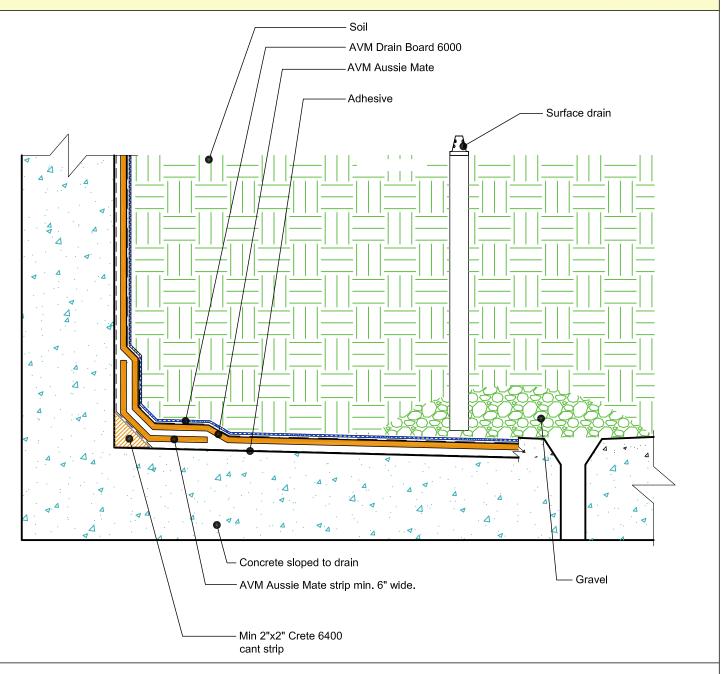

## NOTES

- 1. Aussie Mate® Membranes are heavy duty bituminous waterproofing sheet membranes for Below-Grade waterproofing applications. Aussie Mate® 580-AL and 582-AL are UV stable, 60-mil membranes with an aluminum protection layer. Aussie Mate® 585-CW is a cold weather membrane that can be installed at temperatures as low as 25°F (-4°C).
- 2. For appropriate drainage/protection, use AVM Drain Board 6000.
- 3. Contact AVM if no drain board or protection board is specified.
- 4. Only AVM approved liquid adhesives or primers may be used. (water-based and solvent-based adhesives/primers are available)
- 5. All Aussie Mate overlaps must be minimum 2.5".
- 6. Planters must have sufficient slope, sufficient drains and proper drainage systems to effectively evacuate excessive water.
- 7. Planters must be sloped to drains before membrane installation. (Min 1/4" per foot) Use AVM Crete 6400/6460 or other approved concrete.
- 8. Crete 6400/6460. Refer to the Crete 6400 or Crete 6460 Tech Data Sheets or Installation Instructions for more information.

AVM Industries, Inc.

8245 Remmet Ave, Canoga Park, CA 91304

**Quality Waterproofing Products** 

888.414.1041 818.888.0050 www.avmindustries.com

Revision Date: 2/19/2018 | Protected by Copyright @ AVM Industries, Inc.