


DETAIL #:  
**AVM-550-2540**  
AVM System 550  
**Aussie Skin 550**

## Aussie Skin Over Grade-Beam - Hydrostatic

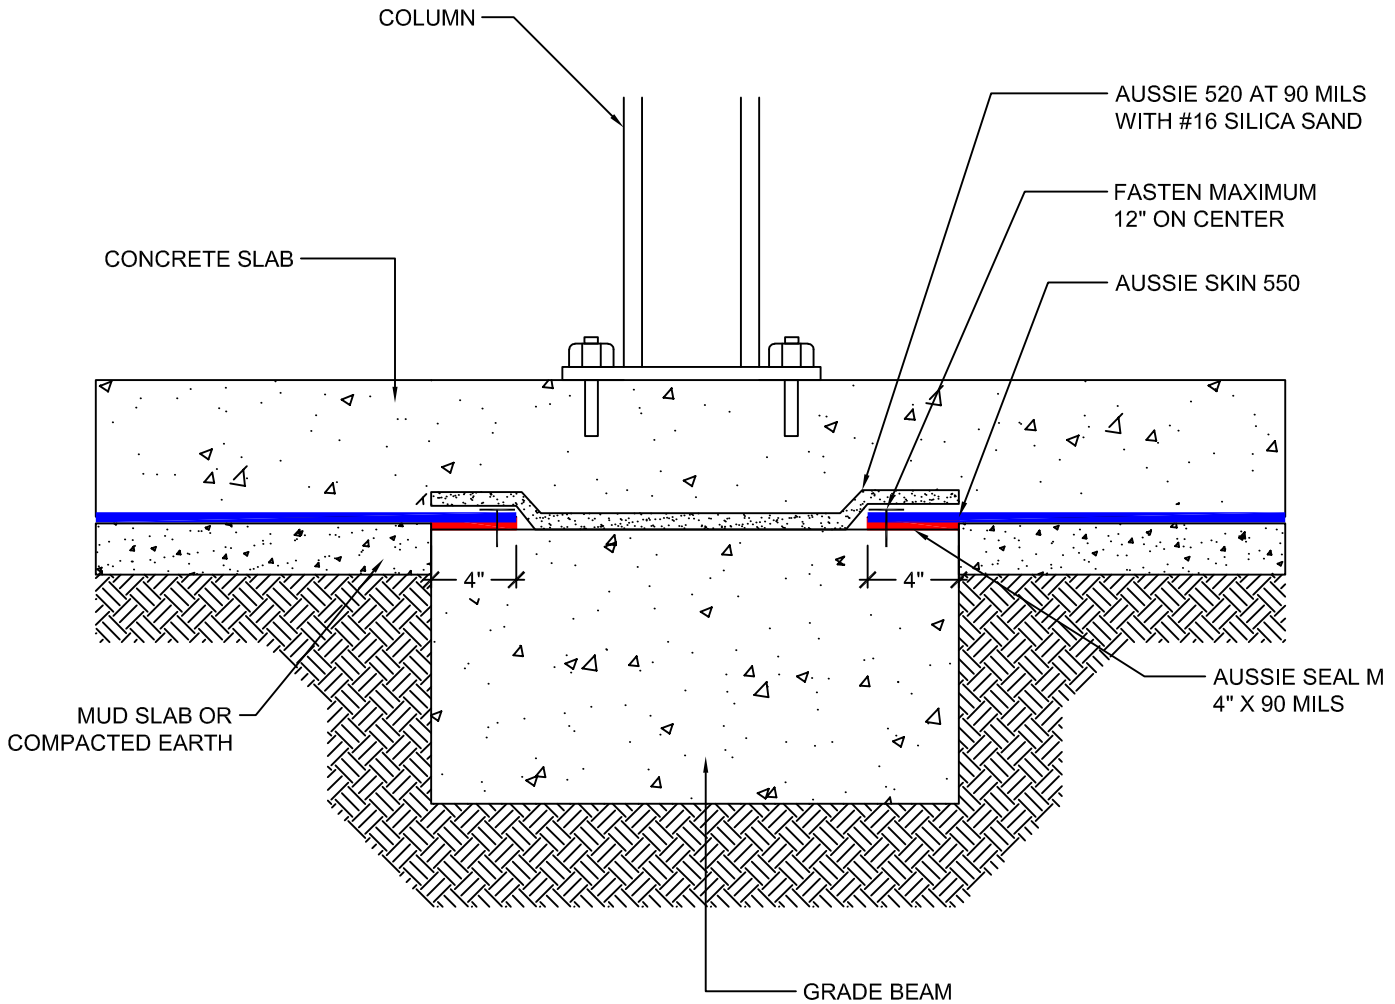

- NOTES:
1. Aussie Skin 550 is a Heavy, Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
  2. Concrete must cure min 7 days.
  3. Aussie Membrane 520 must cure 24 hours prior to concrete placement.