


## Pipe Bank Pitch Pan

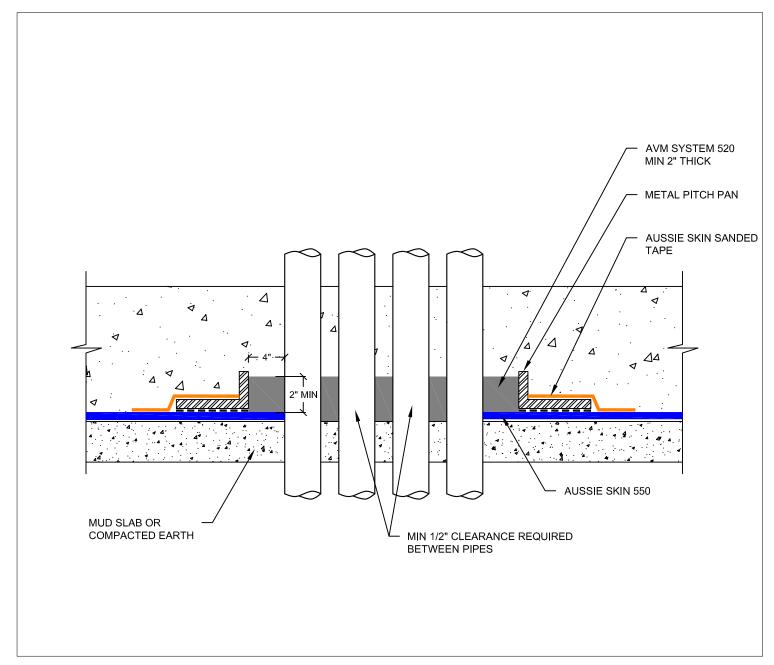



## NOTES:

- 1. Aussie Skin 550 is a Heavy, Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
- 2. Aussie Membrane 520 should be cured prior to concrete placement which may take up to 72 hours. Please consult AVM if scheduling does not allow this.

## **Below Water Table Installations**

101 For Aussie Skin installations below the water table, contact AVM to verify ALL details

AVM Industries, Inc. 8245 Remmet Ave, Canoga Park, CA 91304

Quality Waterproofing Products 888.414.1041 818.888.0050