



DETAIL #:
AVM-550-6002
AVM System 550
Aussie Skin 550


T-Lap Detail

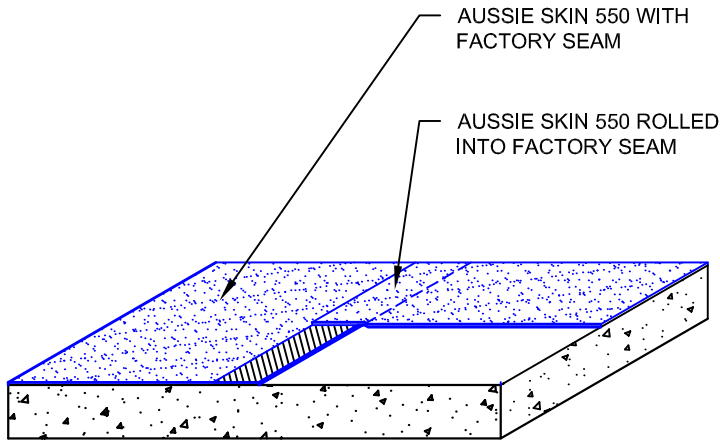


Step #1

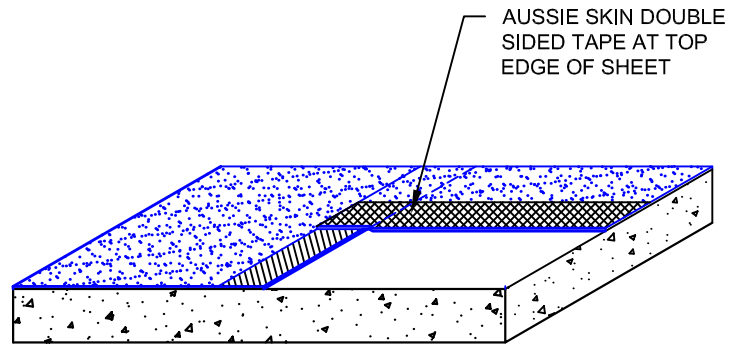

Step #2

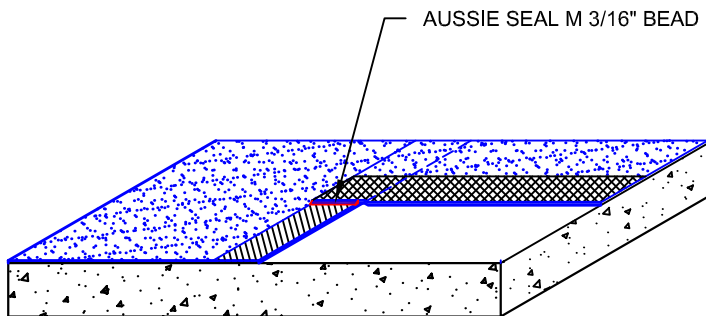

Step #3

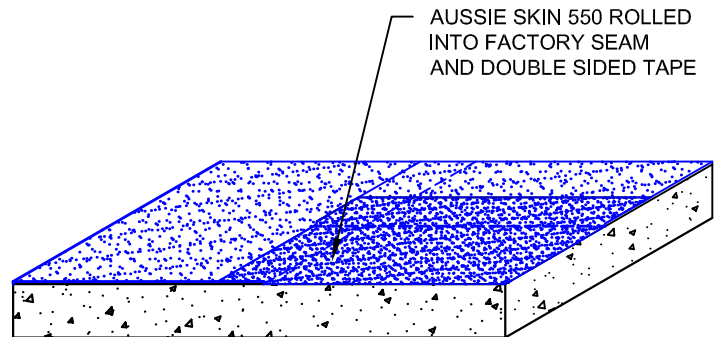

Step #4

Notes:

1. Aussie Skin 550 is a Heavy, Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.

Below Water Table Installations

101 For Aussie Skin installations below the water table, contact AVM to verify ALL details