

DETAIL #:


**AVM-560-1510**

Aussie Skin 560

Exterior Wall to Mat Slab Transition

**Aussie Skin 560**

Waterproofing and Methane Barrier

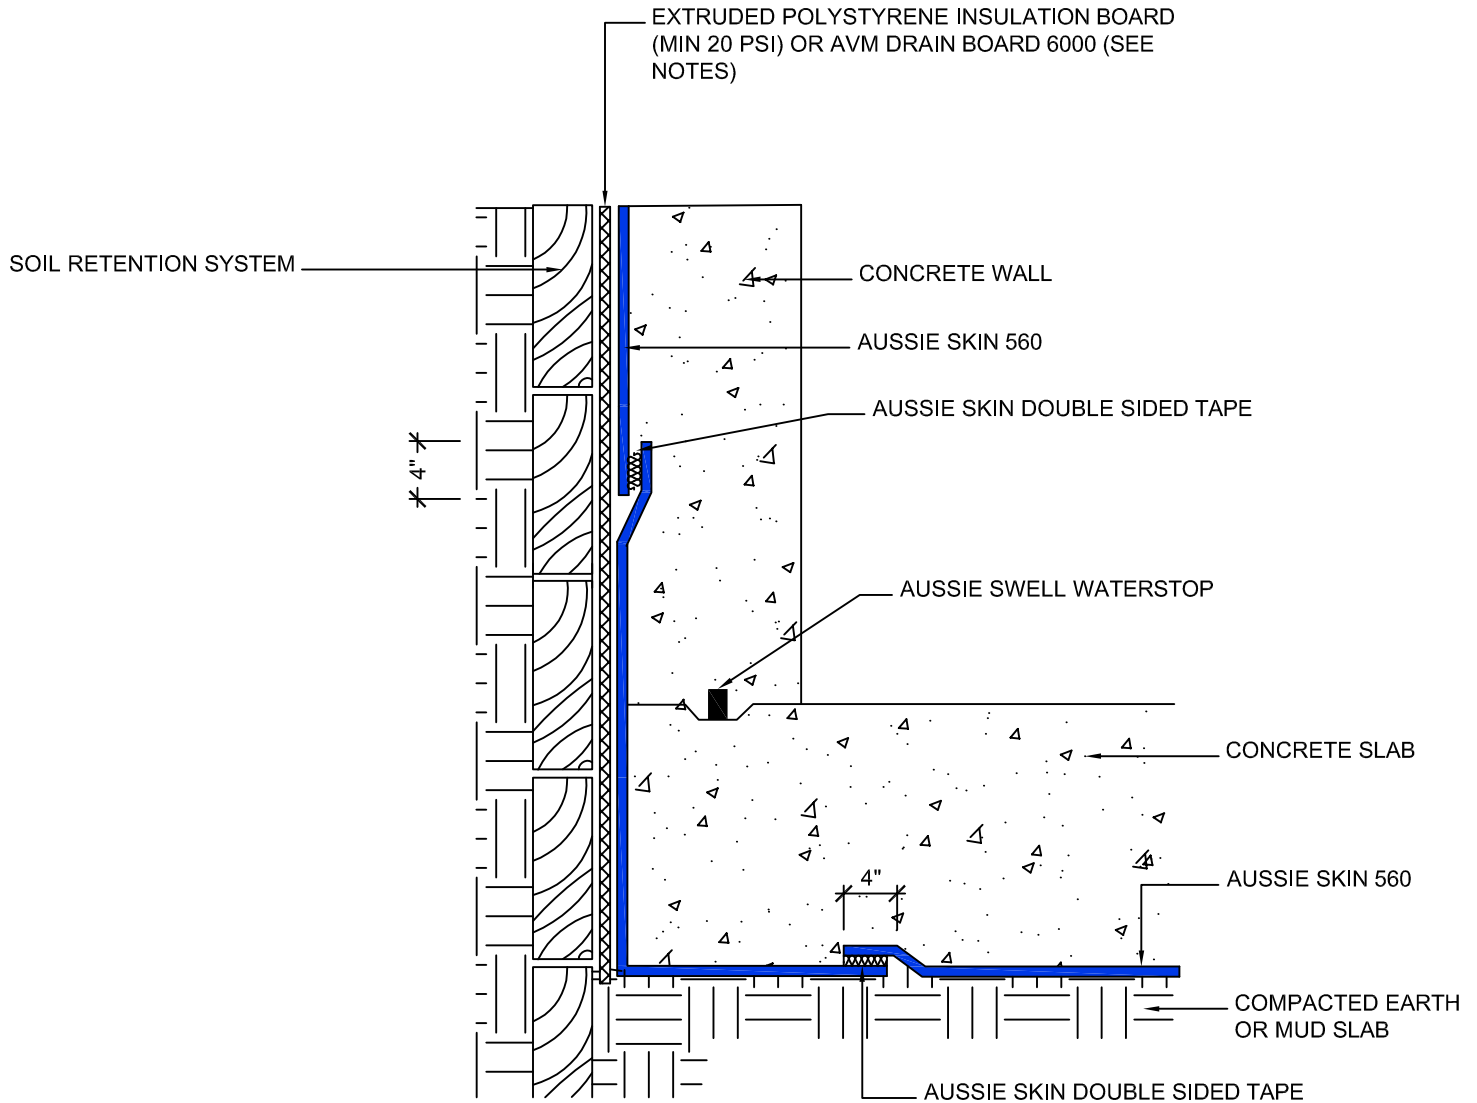

NOTES:

1. Aussie Skin 560 is a Methane and Shotcrete Approved Heavy Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
2. Contact AVM if no drain board or protection board is specified.
3. All nails, screws etc used to hang the Aussie Skin above the water table must be non-rusting and sealed with AVM approved Sealant.
4. Not approved for shot-crete below the water table.
5. Drain board must be connected to a permanent dewatering system if used in hydrostatic conditions.