
DETAIL #: AVM-560-1530

Aussie Skin 560

Metal Tie-Back Cover
Aussie Skin 560
Waterproofing and Methane Barrier

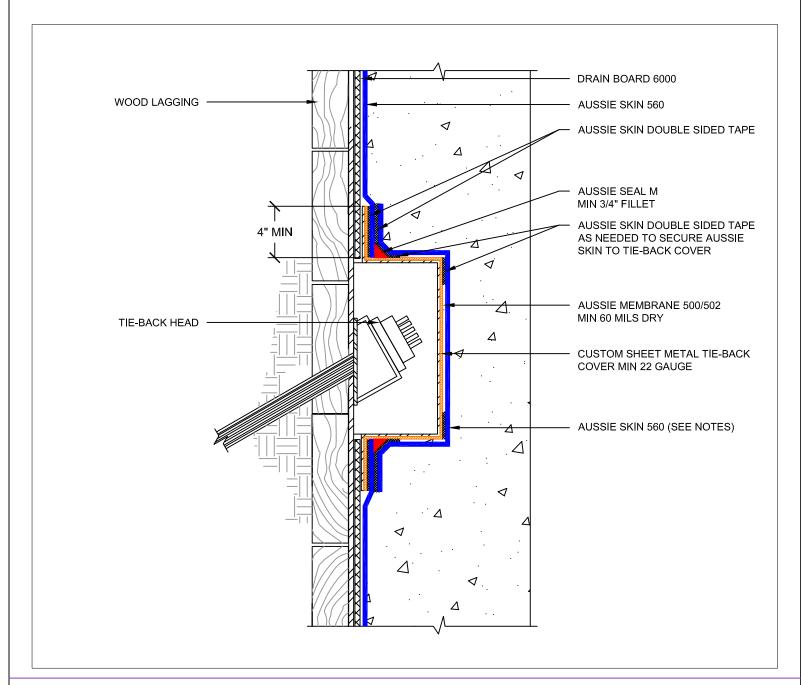



Notes:

- 1. Aussie Skin 560 is a Methane and Shotcete Approved Heavy Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
- 2. Contact AVM if no drain board or protection board is specified.
- 3. Relief cuts may be needed to form Aussie Skin around tie-back cover. All relief cuts should be covered with Sanded Tape.
- 4. All nails, screws etc used to hang the Aussie Skin above the water table must be non-rusting and sealed with AVM approved Sealant.
- 5. Not approved for shotcrete below water table.

FILE NAME: 0560-1530