


DETAIL #:
AVM-560-1531
 Aussie Skin 560

Detensioned Tie-Back Box-out
Aussie Skin 560
 Waterproofing and Methane Barrier

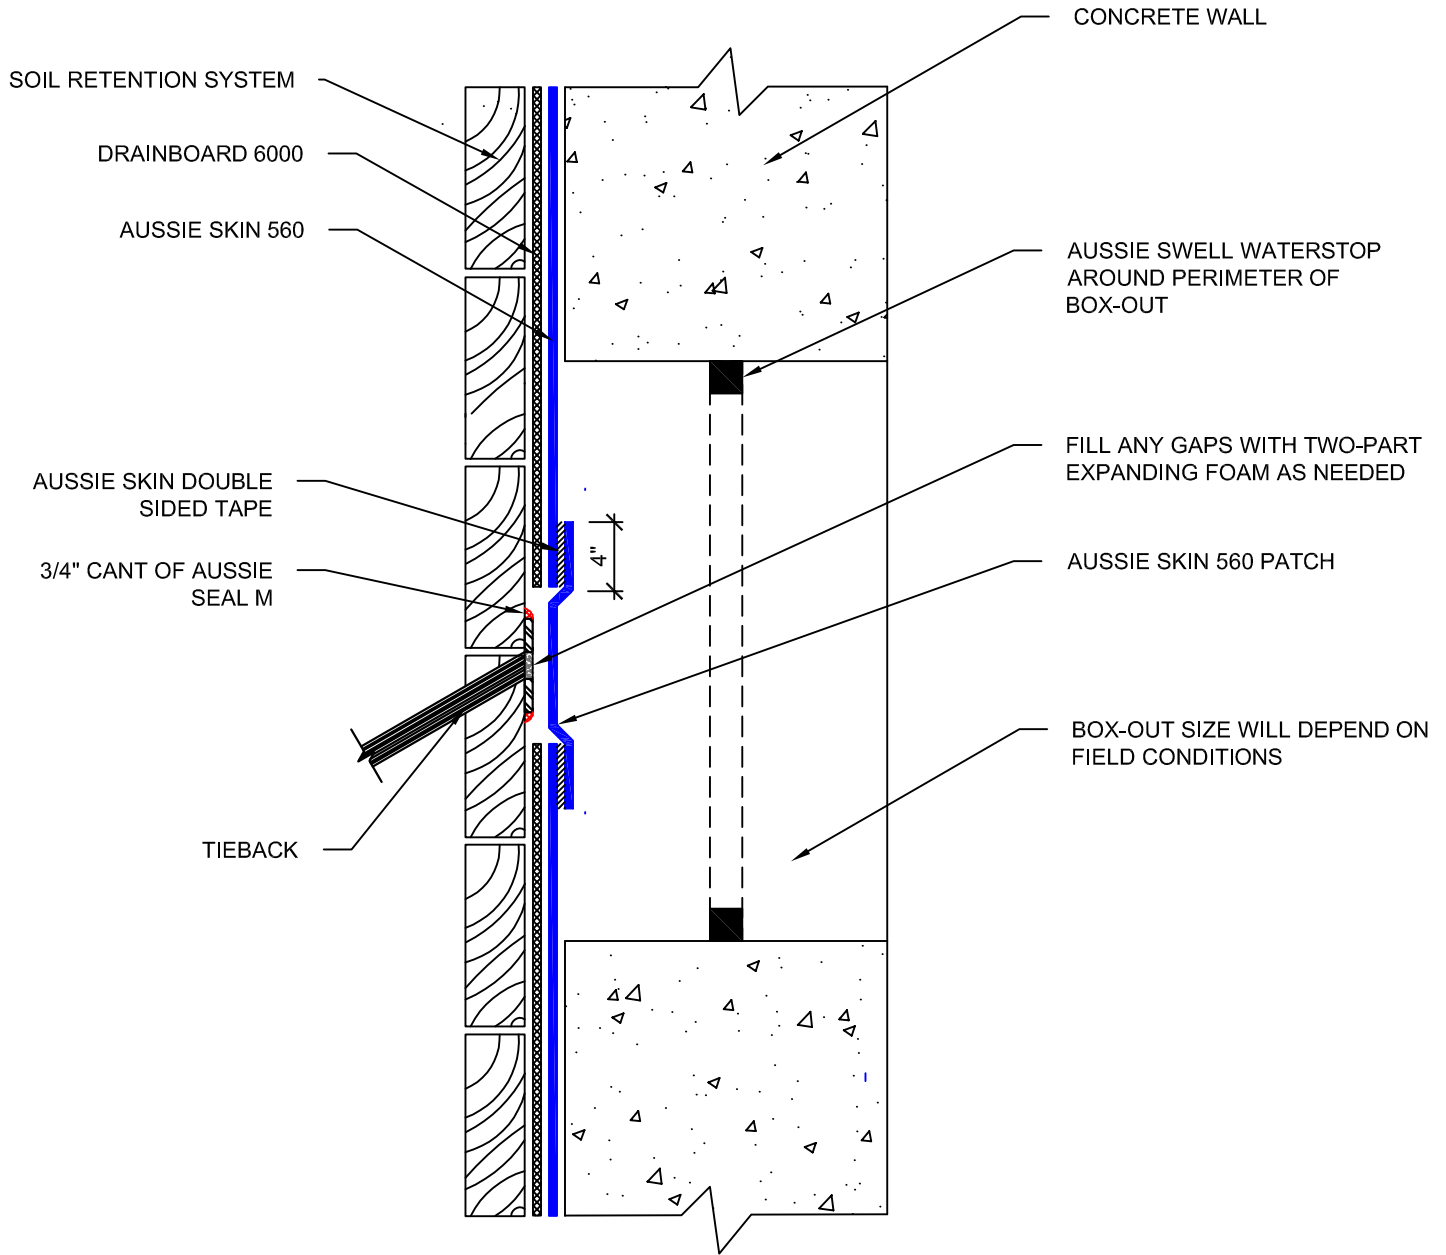

NOTES:

1. Aussie Skin 560 is a Methane and Shotcrete Approved Heavy Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
2. Contact AVM if no drain board or protection board is specified.
3. All nails, screws etc used to hang the Aussie Skin above the water table must be non-rusting and sealed with AVM approved Sealant.