


DETAIL #:  
**AVM-560-4100**  
Aussie Skin 560

Rebar Tie  
**Aussie Skin 560**  
Waterproofing and Methane Barrier

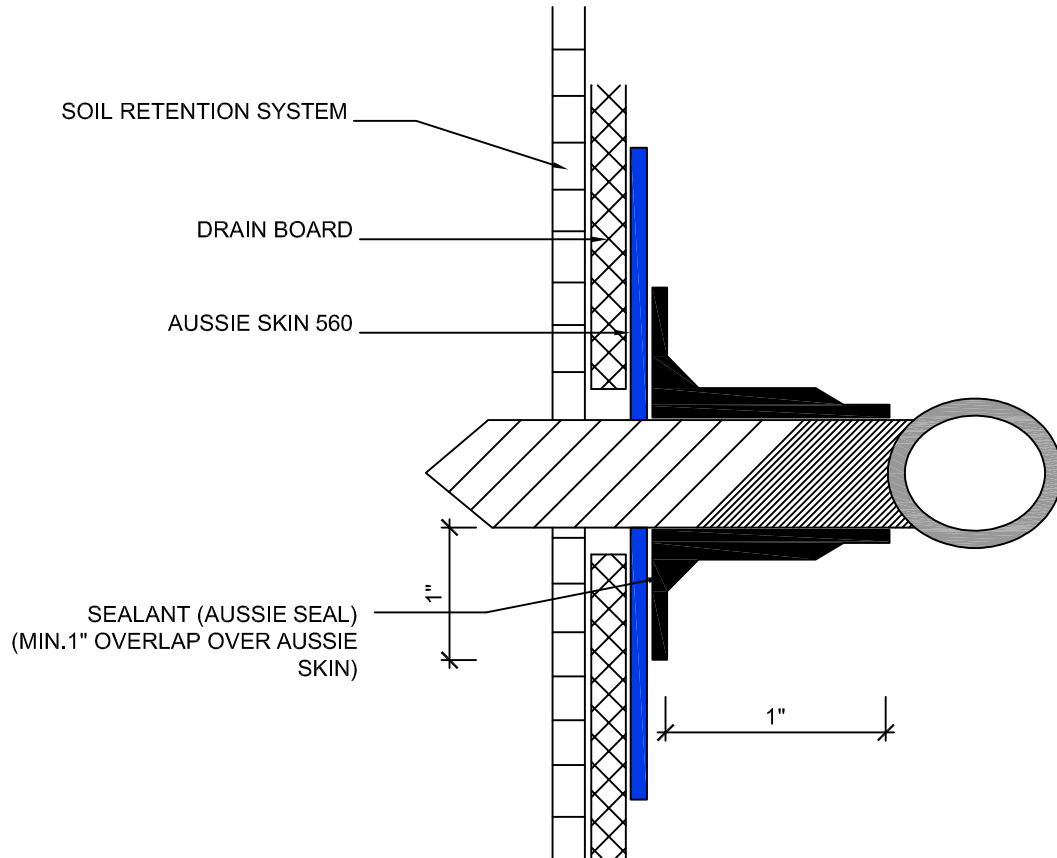

- NOTES:
1. Aussie Skin 560 is a Methane and Shotcrete Approved Heavy Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
  2. Contact AVM if no drain board or protection board is specified.
  3. All nails, screws etc used to hang the Aussie Skin above the water table must be non-rusting and sealed with AVM approved Sealant.