



DETAIL #:  
**AVM-560-6002**  
 Aussie Skin 560


T-Lap Detail  
**Aussie Skin 560**  
 Waterproofing and Methane Barrier

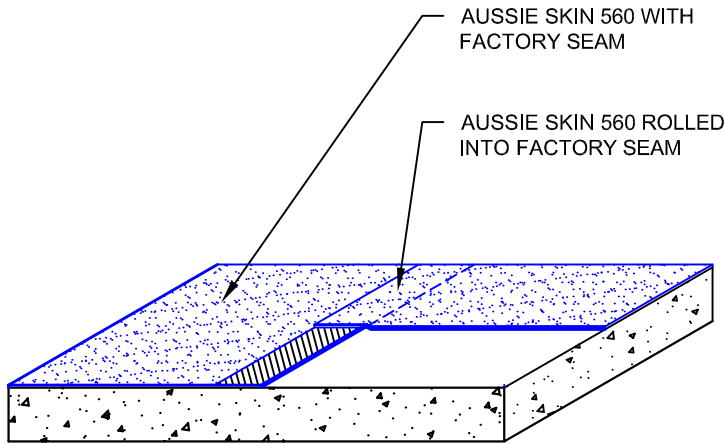


Step #1

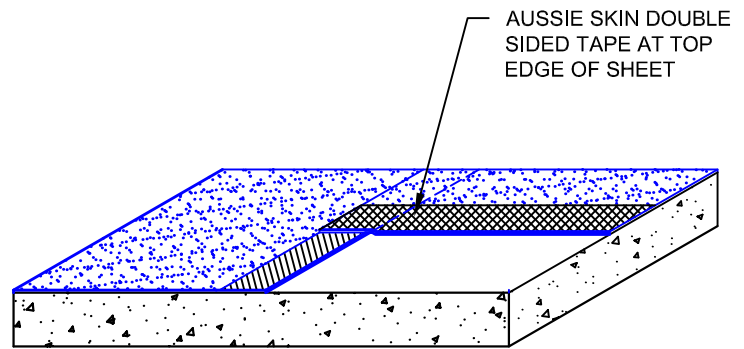

Step #2

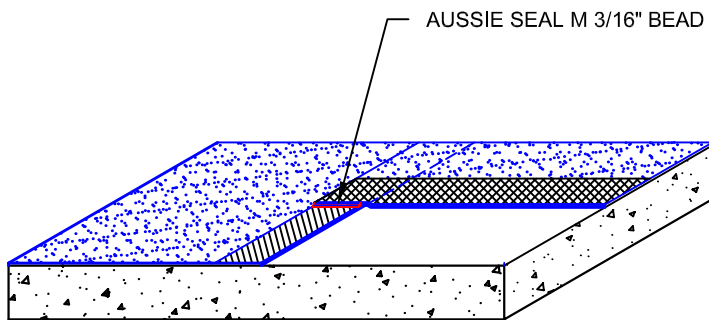

Step #3

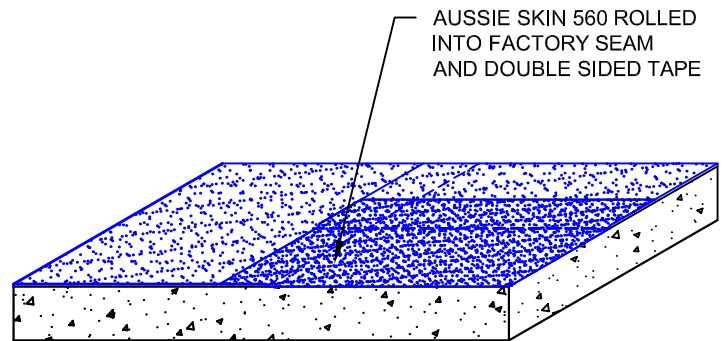

Step #4

Notes:

1. Aussie Skin 560 is a Methane and Shotcrete Approved Heavy Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
2. Contact AVM if no drain board or protection board is specified.
3. All nails, screws etc used to hang the Aussie Skin above the water table must be non-rusting and sealed with AVM approved Sealant.