


DETAIL #:  
AVM-AUSSIE-MATE-7001-M

AUSSIE MATE® 580-AL

Lapping Detail - Methane  
AVM AUSSIE MATE® 580-AL  
Bituminous Sheet Waterproofing.




### FACTORY LAP

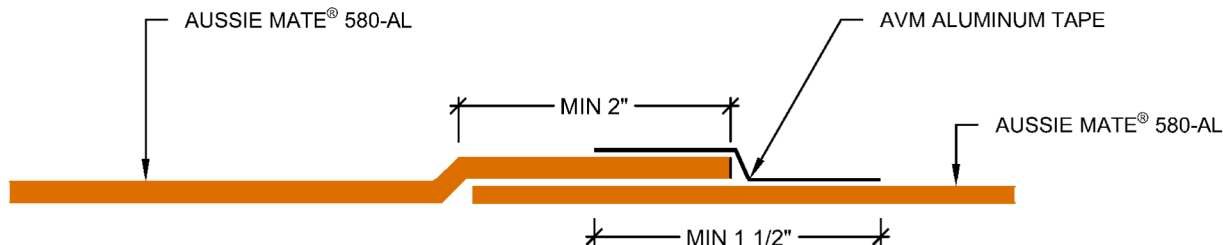

Important Note: When installing the "Factory Lap", The Installation procedure should be as follows:

1. If necessary, wipe overlap surfaces clean. (Use a light solvent)
2. Before bonding the next layer of Aussie Mate to an existing layer, Remove both release films from the factory laps (The selve-edge areas)
3. Install the next sheet of Aussie Mate with a minimum 2.0" overlap.
4. Roll the steel/rubber roller over the lap several times while applying pressure to ensure proper adhesion.
5. In cold weather, gently using heat gun will improve adhesion
6. Cover all factory laps with AVM Aluminum Tape.

### NON-FACTORY LAP

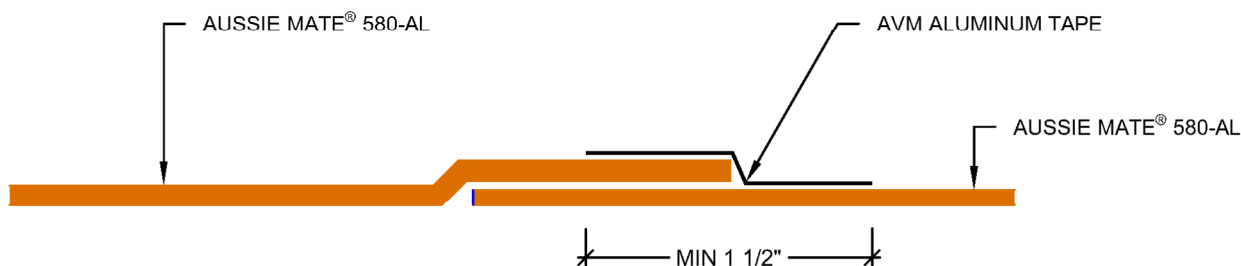

Important Note: When installing the "Non-Factory Lap", The Installation procedure should be as follows:

1. If necessary, wipe overlap surfaces clean. (Use a light solvent)
2. Before bonding the next layer of Aussie Mate to an existing layer, Remove the release film from the sheet.
3. Install the next sheet of Aussie Mate with a minimum 2.0" overlap.
4. Roll the steel/rubber roller over the lap several times while applying pressure to ensure proper adhesion.
5. In cold weather, gently using heat gun will improve adhesion
6. Cover all non-factory laps with AVM Aluminum Tape.

#### NOTES:

1. Aussie Mate 580-AL is an LARR approved Waterproofing membrane and Methane Barrier.
2. Aussie Mate 580-AL is a UV stable, 60-mil heavy duty bituminous sheet membrane with aluminum protection layer for Below-Grade waterproofing applications. Aussie Mate 580-AL may also be used as a methane and/or vapor barrier under horizontal slabs on grade.
3. For applications from 25°F- 50°F, contact AVM for cold weather installation instructions.