
Detensioned Tie-Back Box-out Aussie Clay Dual System

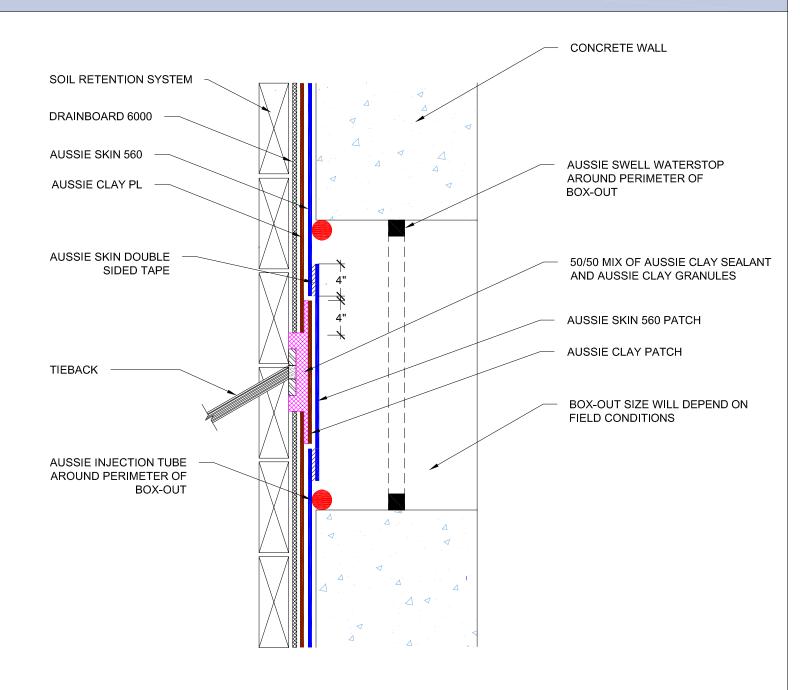



NOTES:

- 1. Aussie Skin 560 is Methane and Shot-Crete approved Heavy, Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
- 2. Aussie Clay & Aussie Clay PL are bentonite sheet membranes for waterproofing below-grade vertical and horizontal surfaces, including blindside and backfilled applications. Aussie Clay can be used with shotcrete or cast in place concrete in hydrostatic or non-hydrostatic conditions.
- 3. Fasten Aussie Clay with pneumatic staples or 1" washer-head fasteners placed maximum 24" on center
- 4. Install Aussie Clay and Aussie Clay PL with gray geotextile facing installer.
- 5. Overlap sheet edges 4" and stagger seams min 12"

FILE NAME: 0560-1531AC