
## Lagging Wall with Rock Pocket

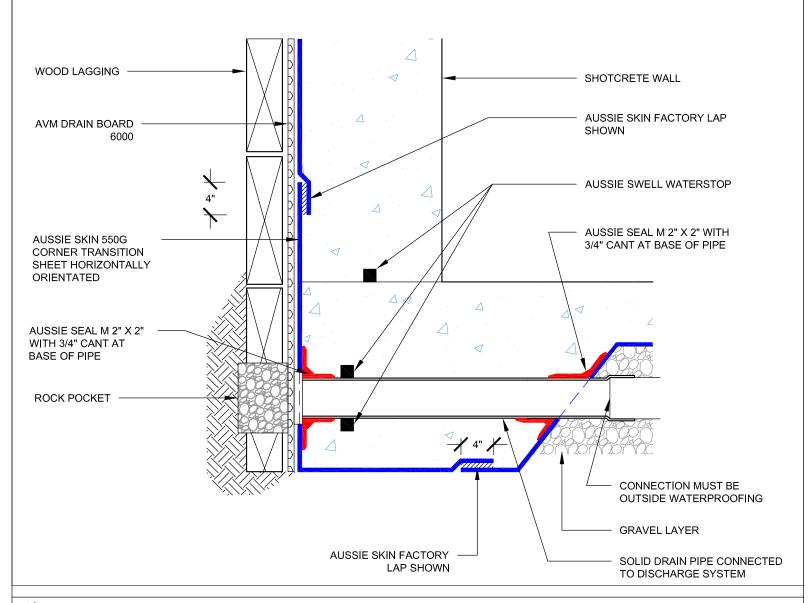



## Notes:

- 1. Aussie Skin 550G is a Heavy, Duty, Easy to Install, Puncture Resistant Sheet Waterproofing Membrane with added technologies creating excellent adhesion between the membrane and wet Concrete or Shot-Crete.
- 2. All surfaces must be clean and sound before installing the lap joints. (Remove excess sand before applying double sided tape to surfaces
- 3. See details AVM-550G-6000, AVM-550G-60002, AVM-550G-6004, and AVM-550G-6010 for Aussie Skin Lap Details
- 4. Drain board must be connected to a permanent dewatering system if used in hydrostatic conditions.