


DETAIL #:
0520-0002
System:
Aussie Mambrane 520

Backfilled Wall with Vapor Barrier Under Slab

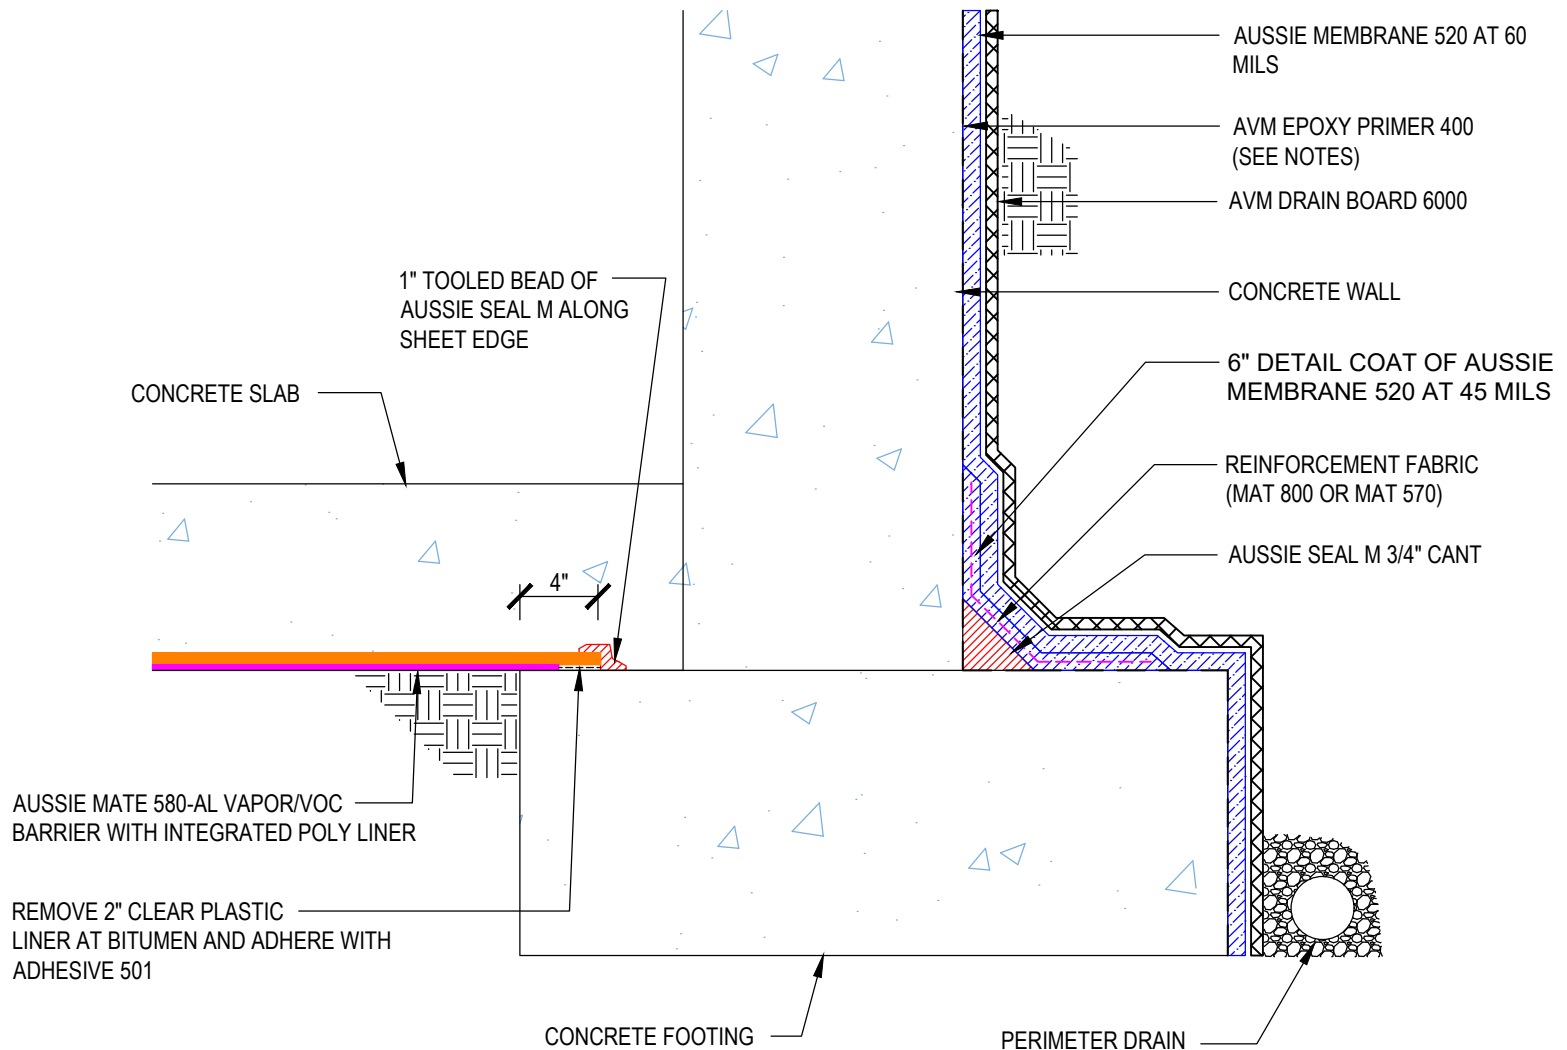

AUSSIE MEMBRANE 520



Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-0006
System:
Aussie Membrane 520

Transition to Aussie Skin Flush Footing



AUSSIE MEMBRANE 520

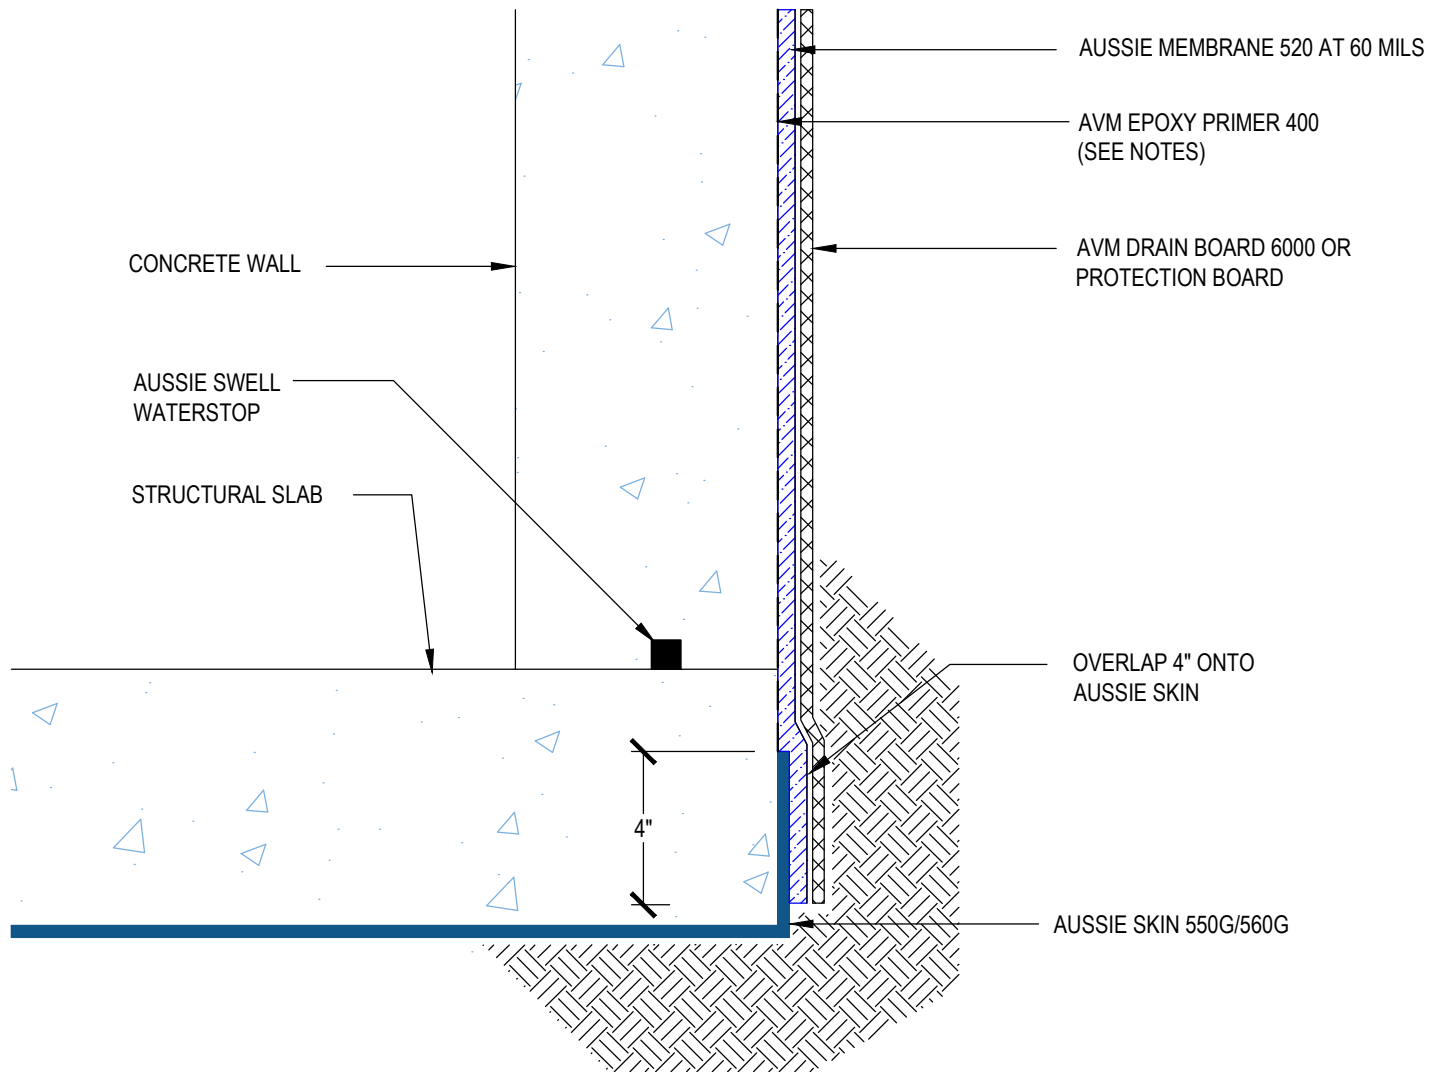

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1100

System:
Aussie Membrane 520

Deck to Wall Transition

AUSSIE MEMBRANE 520 120 Mil Reinforced System

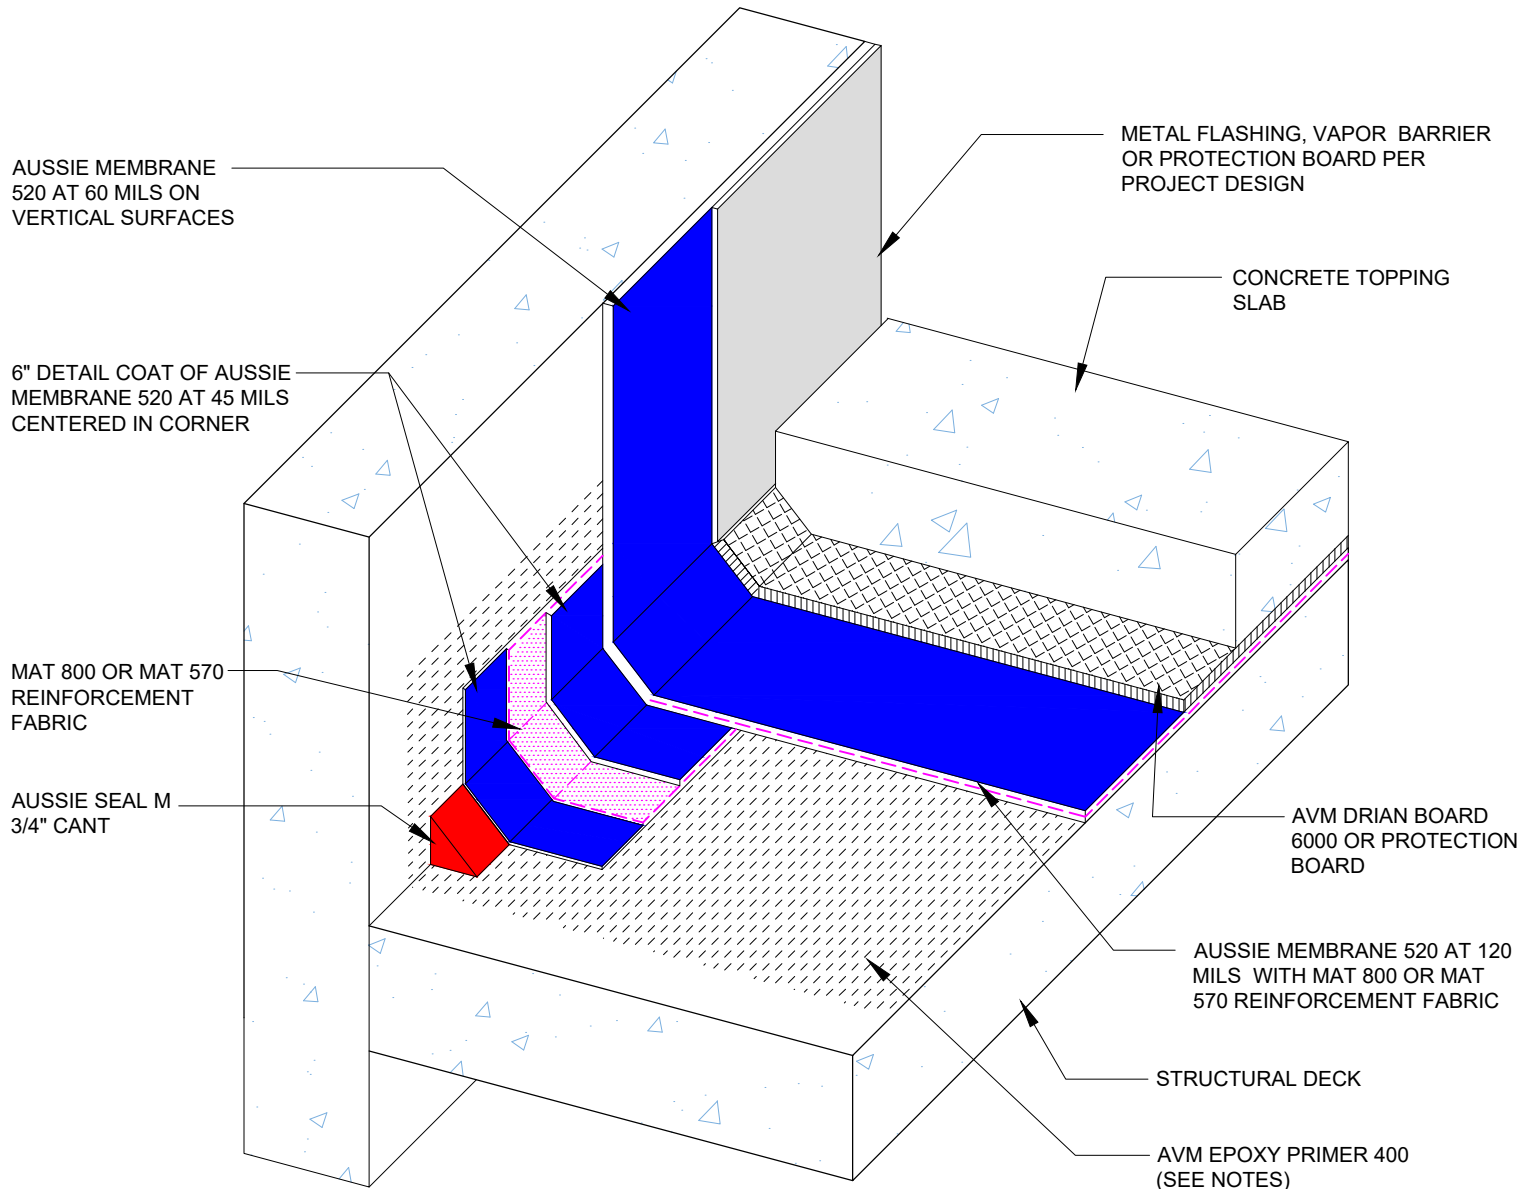

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1102

System:
Aussie Membrane 520

Deck to Wall Transition

AUSSIE MEMBRANE 520
90 Mil Unreinforced System

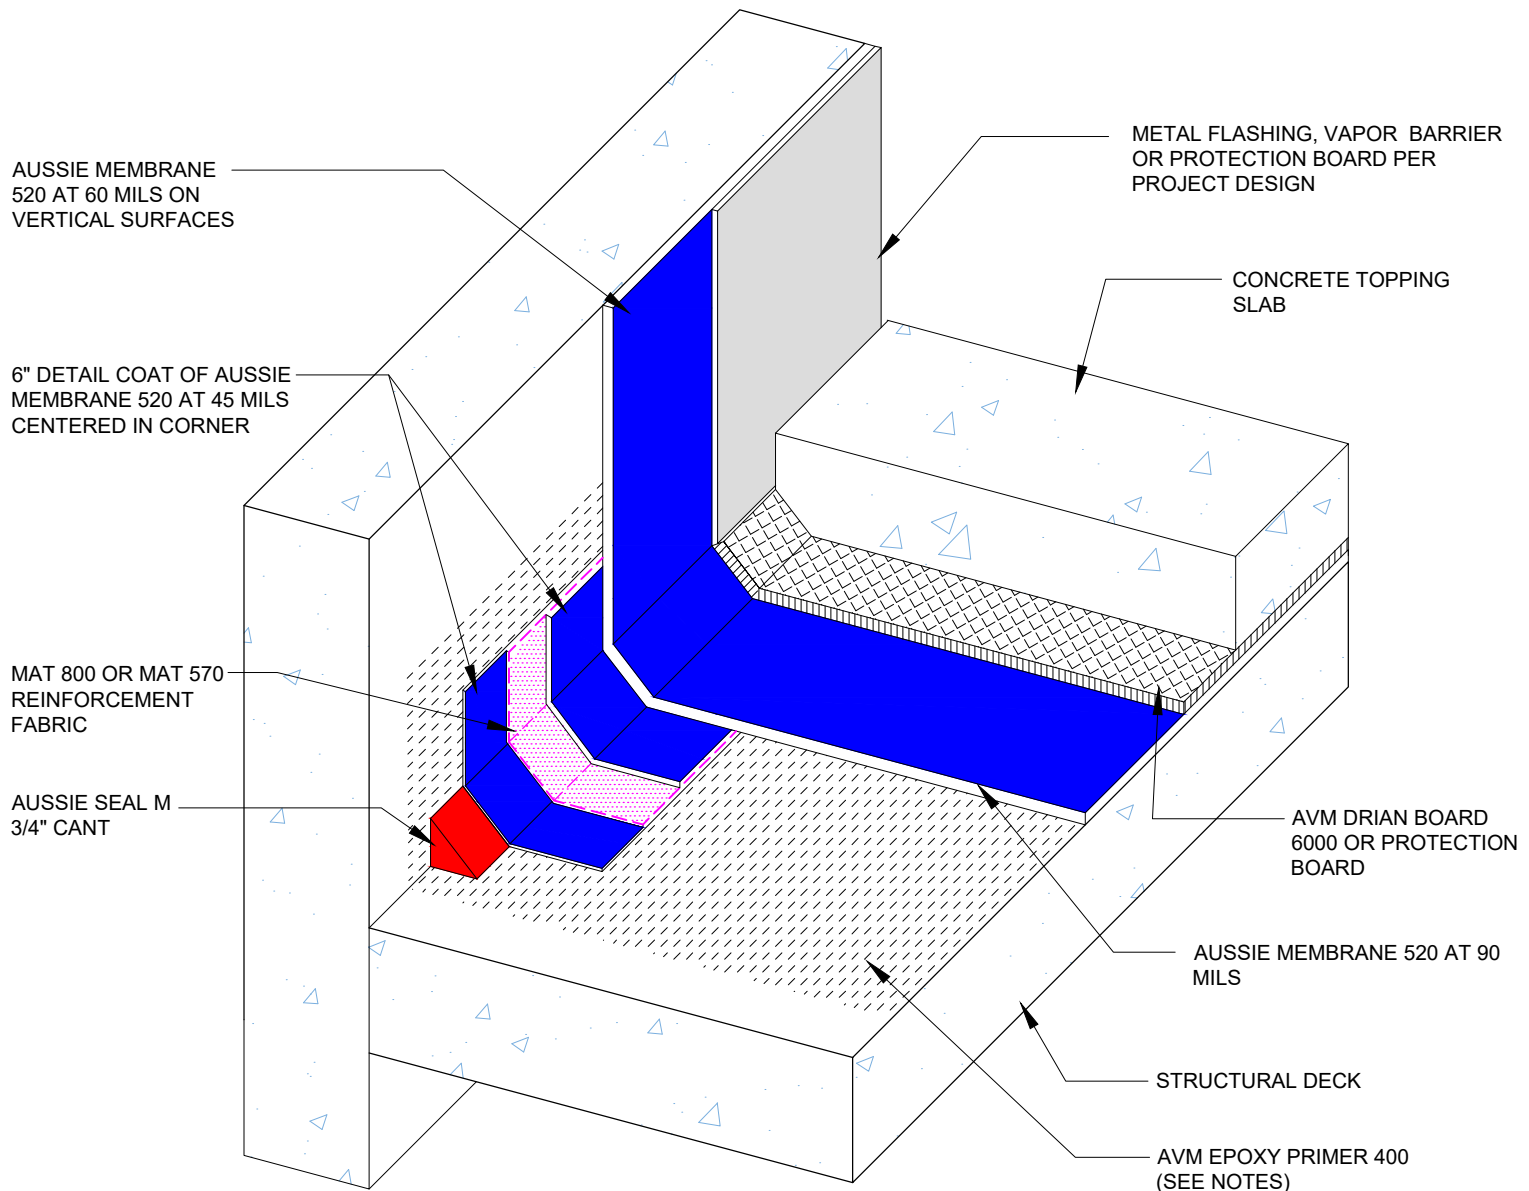


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1104
System:
Aussie Membrane 520

Deck to Wall Transition With Flashing

AUSSIE MEMBRANE 520
120 Mil Reinforced System

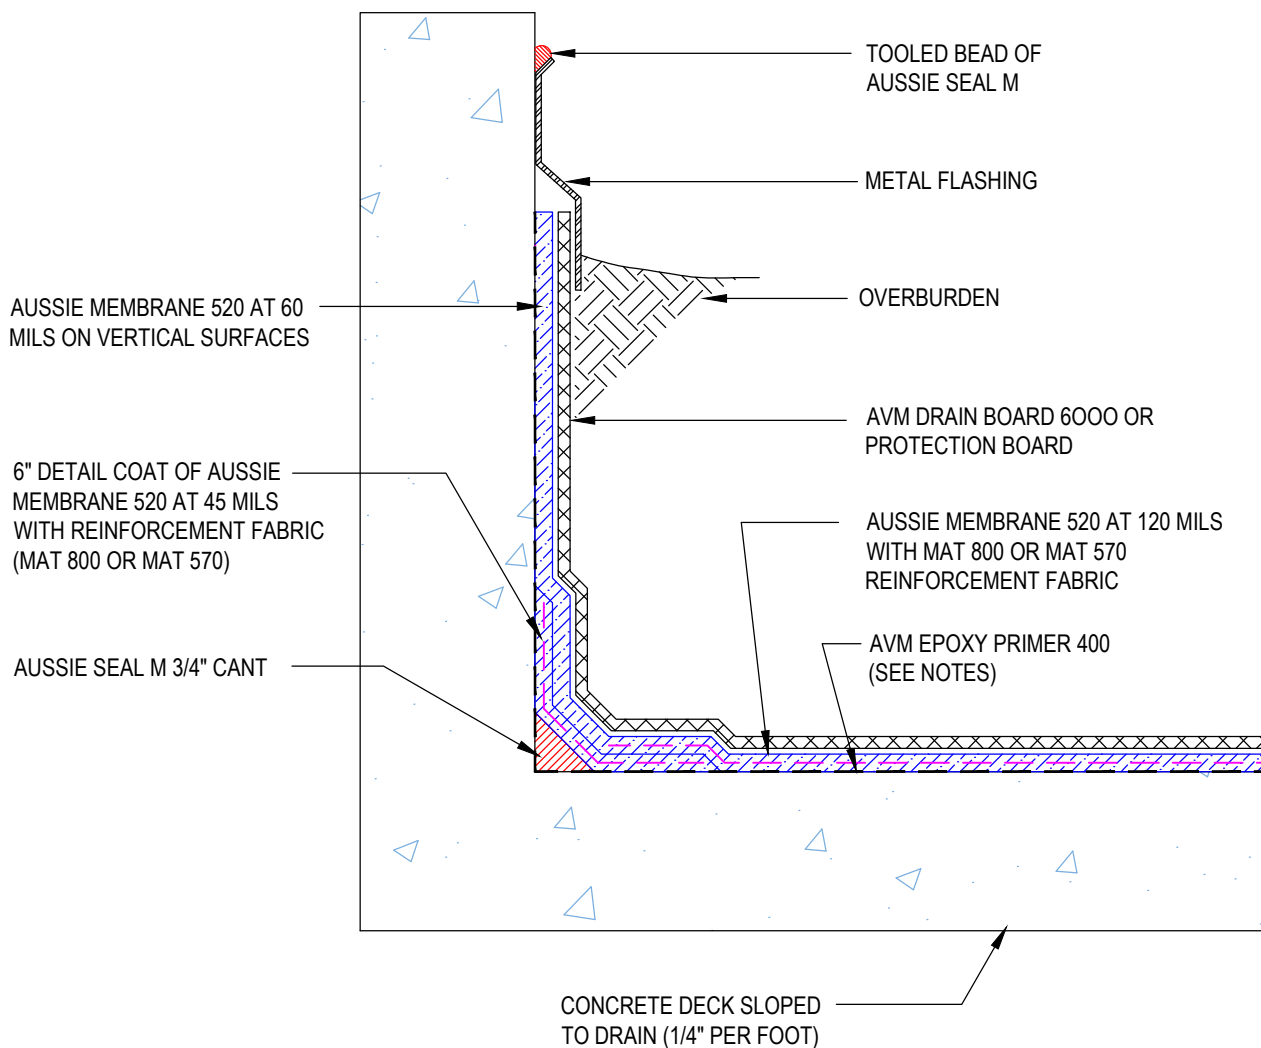


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1105
System:
Aussie Membrane 520

Deck to Wall Transition With Flashing

AUSSIE MEMBRANE 520
90 Mil Unreinforced System

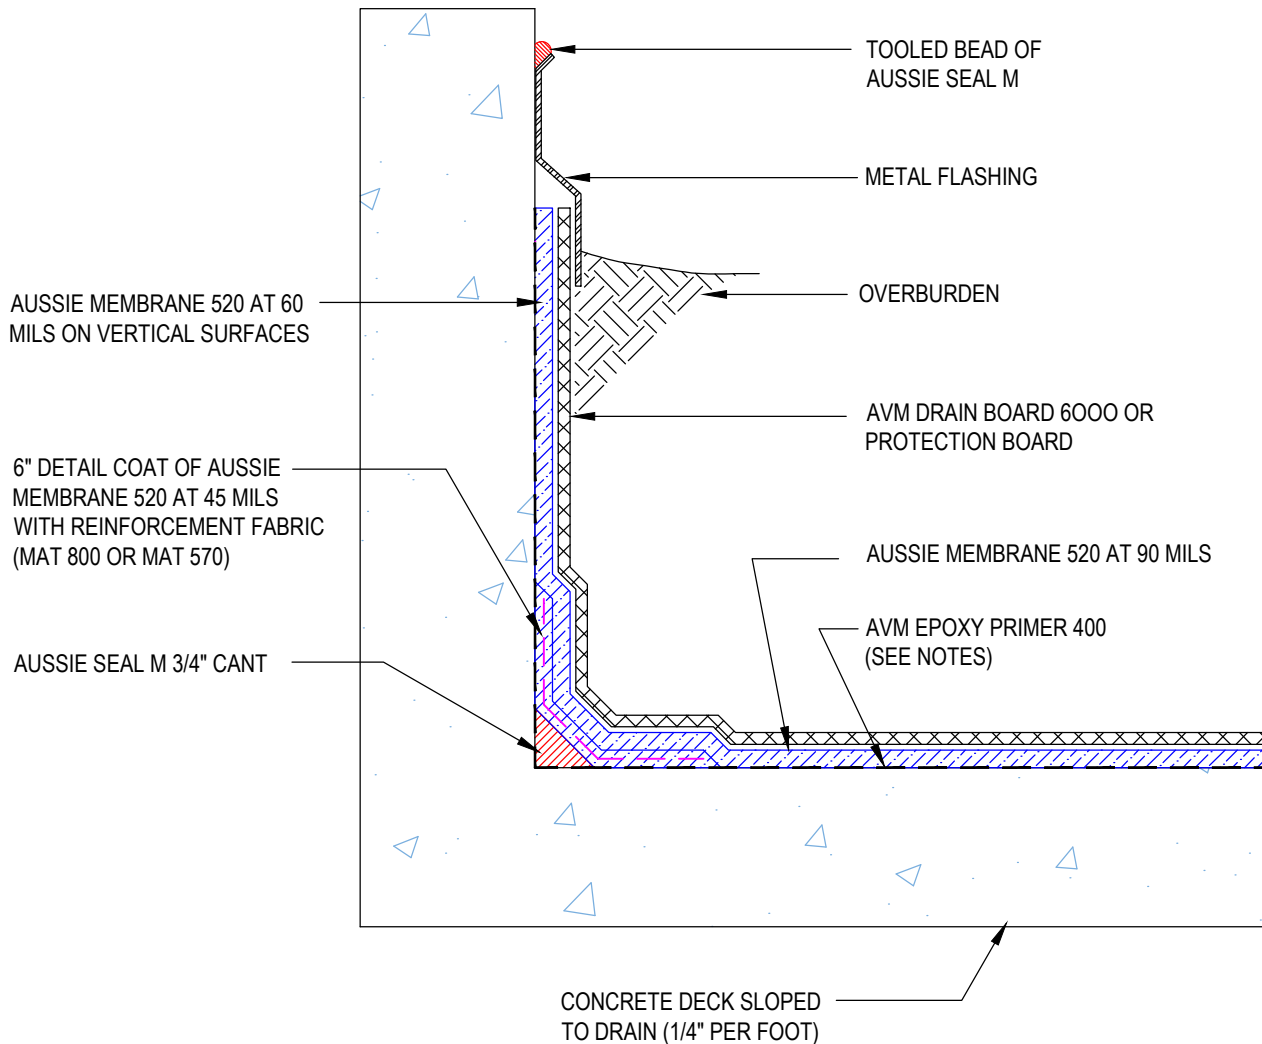


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1106
System:
Aussie Membrane 520

Split Slab Assembly

AUSSIE MEMBRANE 520 120 Mil Reinforced System

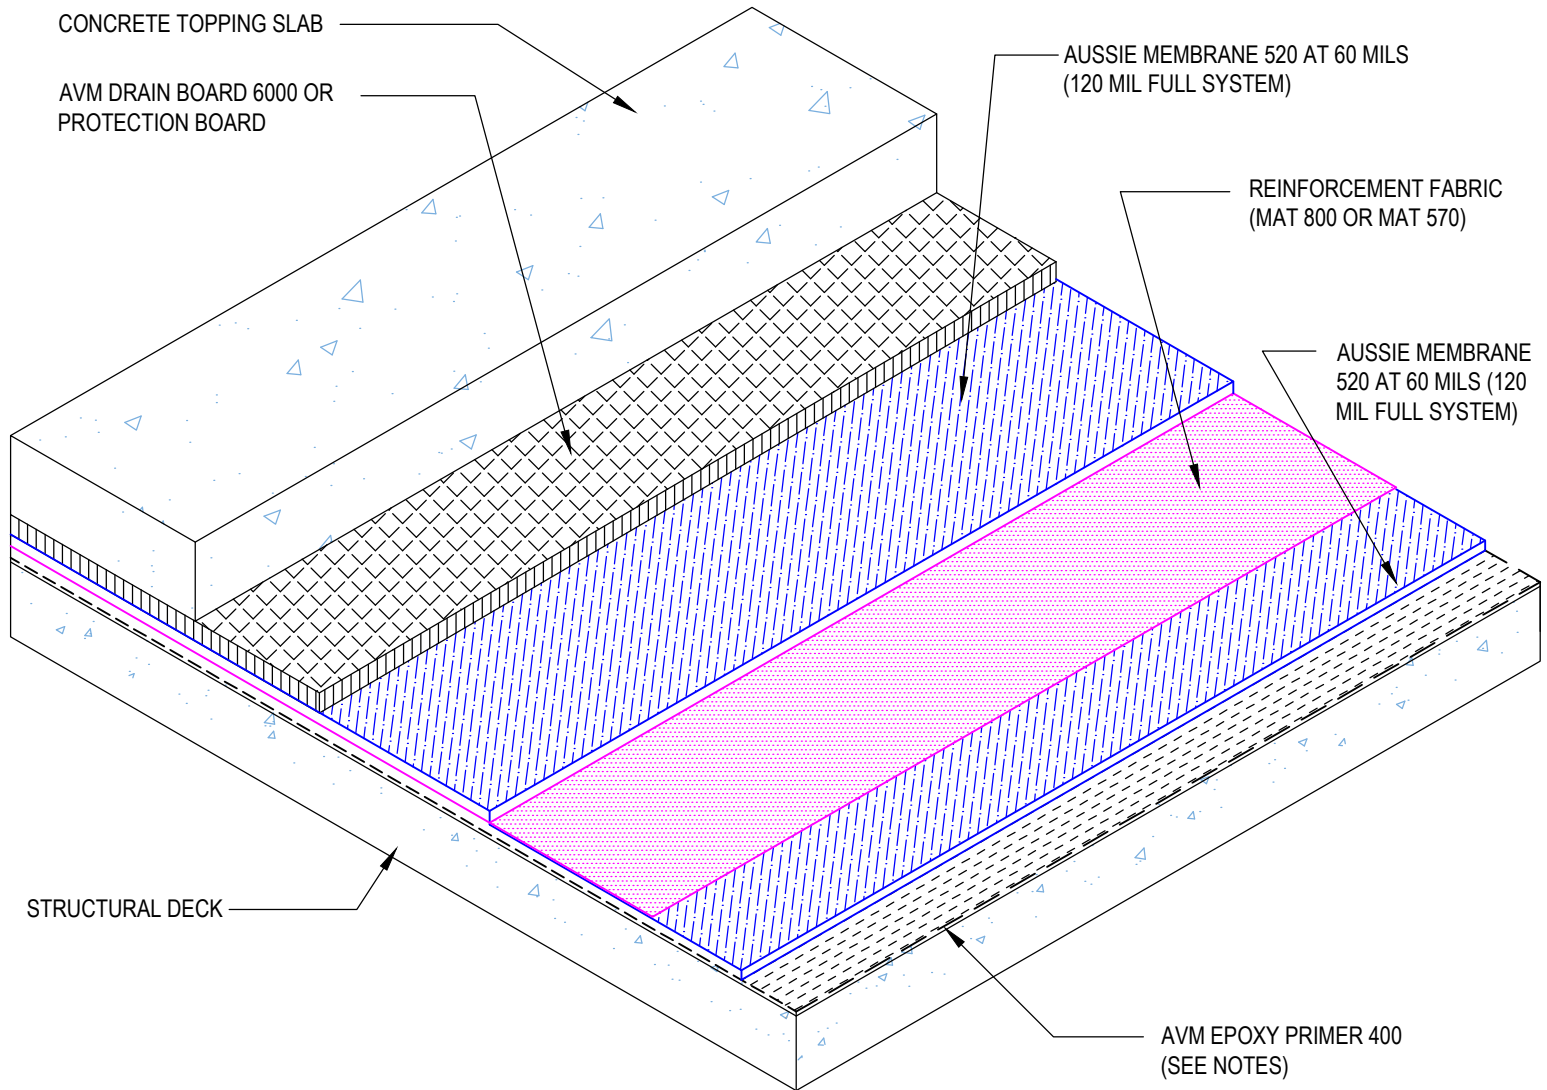


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1107
System:
Aussie Membrane 520

Split Slab Assembly

AUSSIE MEMBRANE 520
90 Mil Unreinforced System

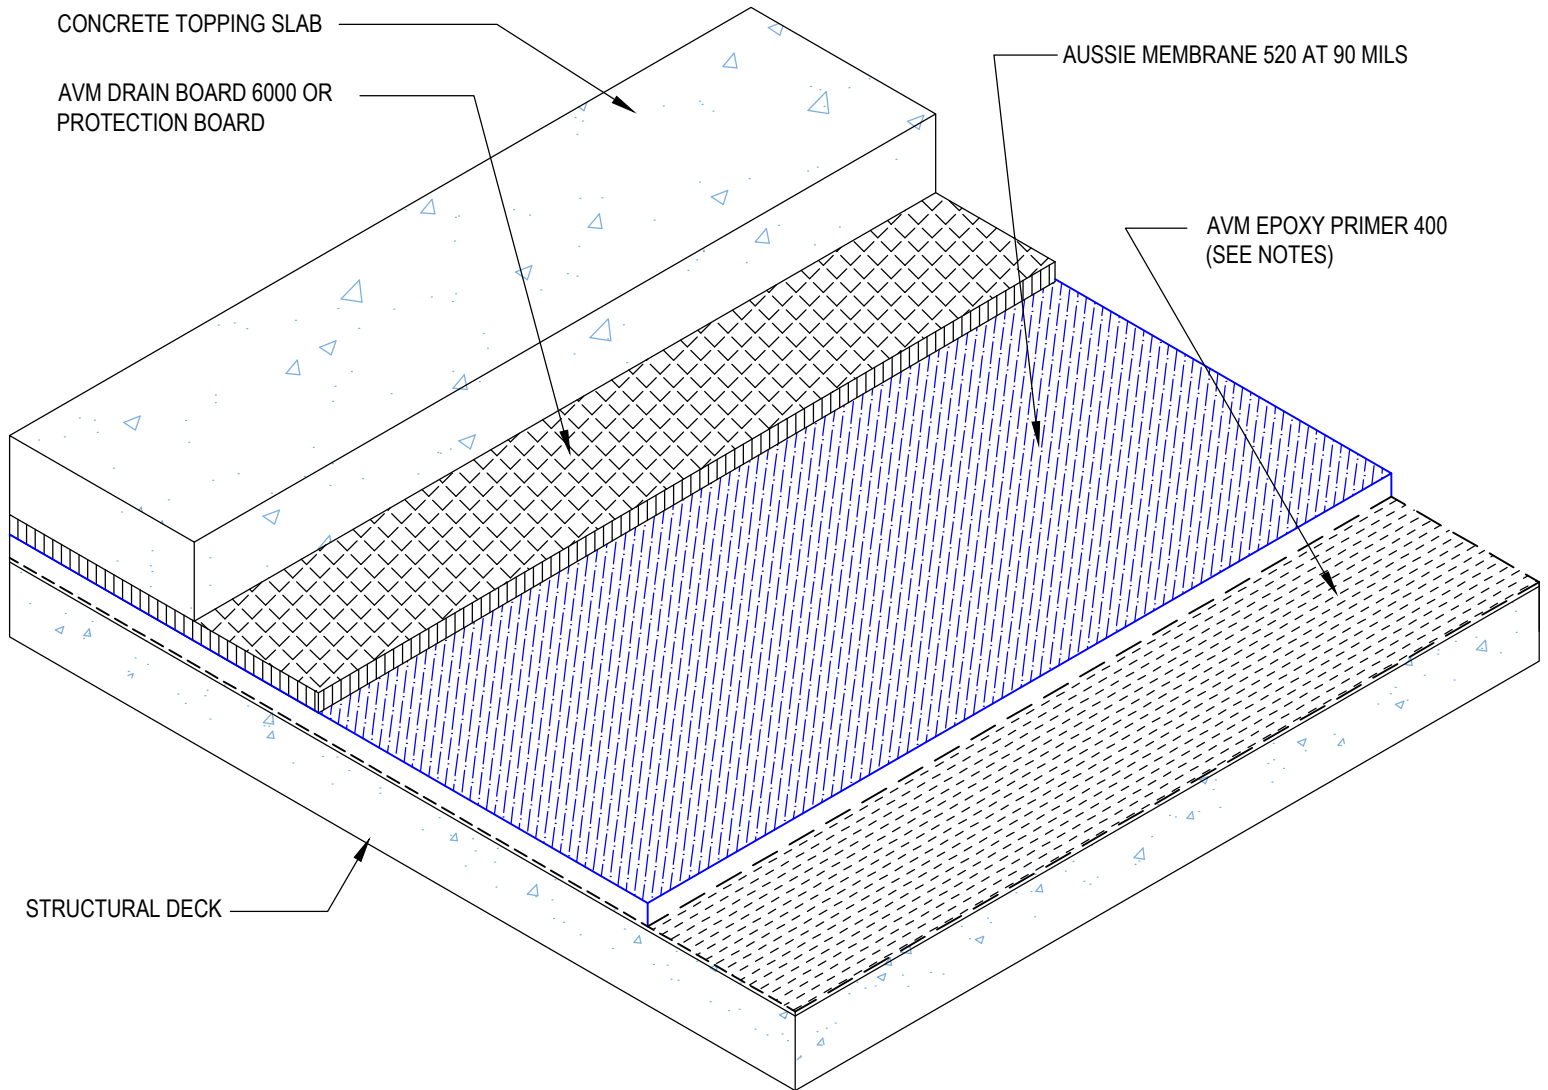


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1108
System:
Aussie Membrane 520

Split Slab Edge Termination

AUSSIE MEMBRANE 520
120 Mil Reinforced System

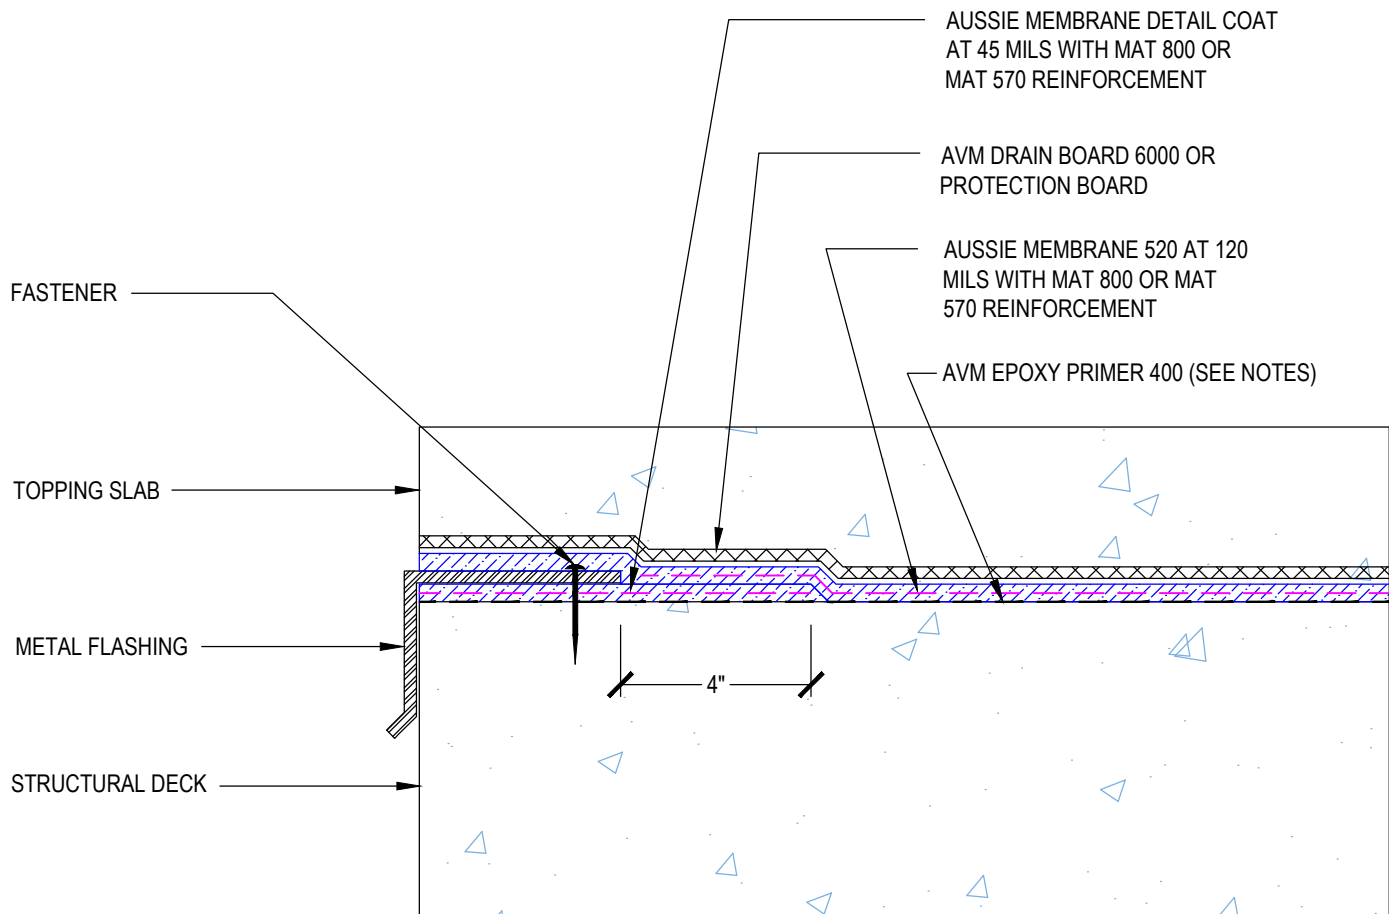


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1109
System:
Aussie Membrane 520

Split Slab Edge Termination

AUSSIE MEMBRANE 520
90 Mil Unreinforced System

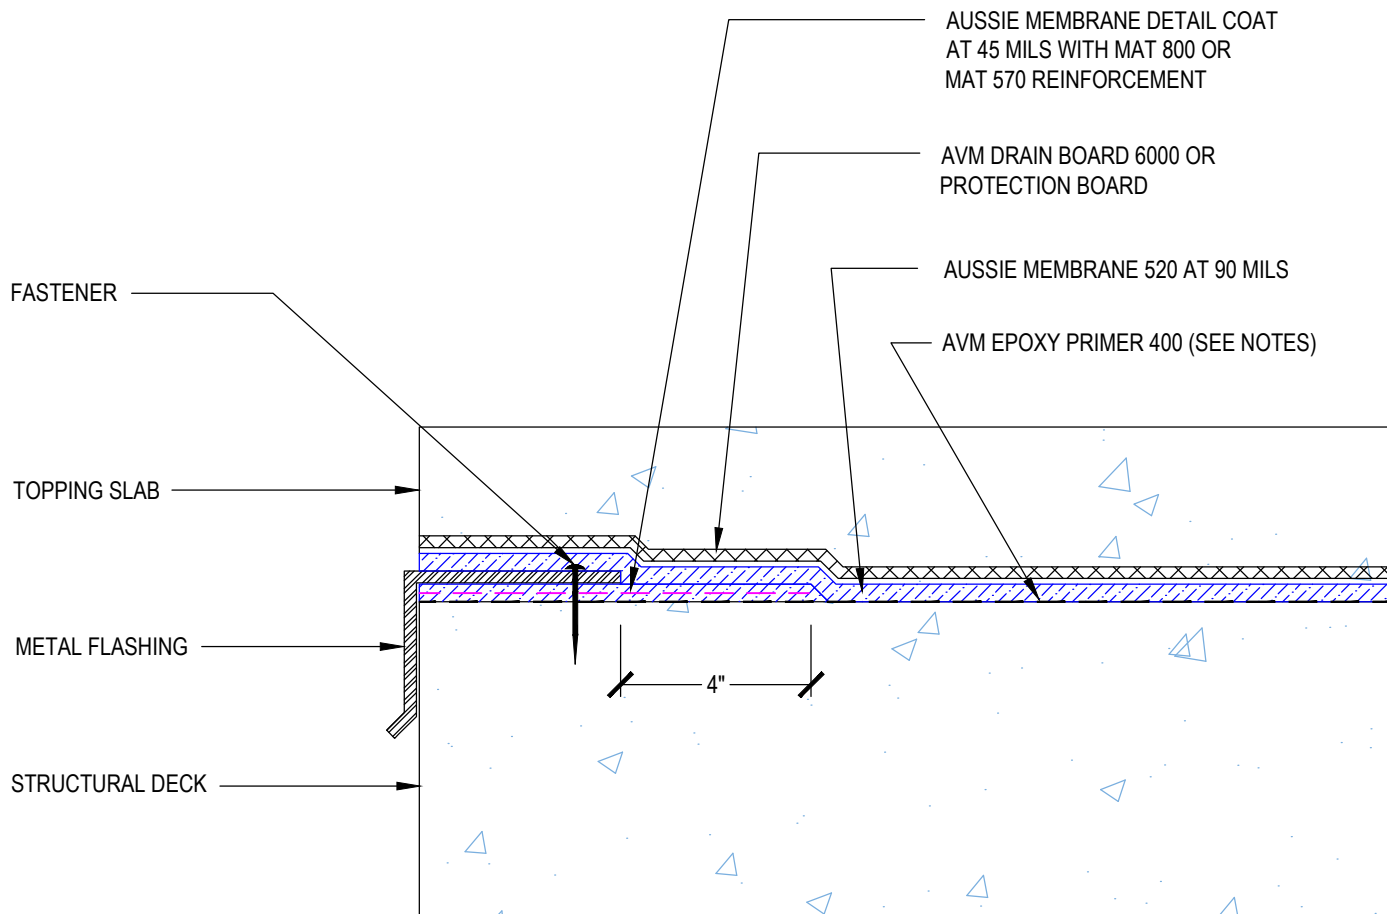

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1200
System:
Aussie Membrane 520

Construction Joint Detailing



AUSSIE MEMBRANE 520 120 Mil Reinforced System

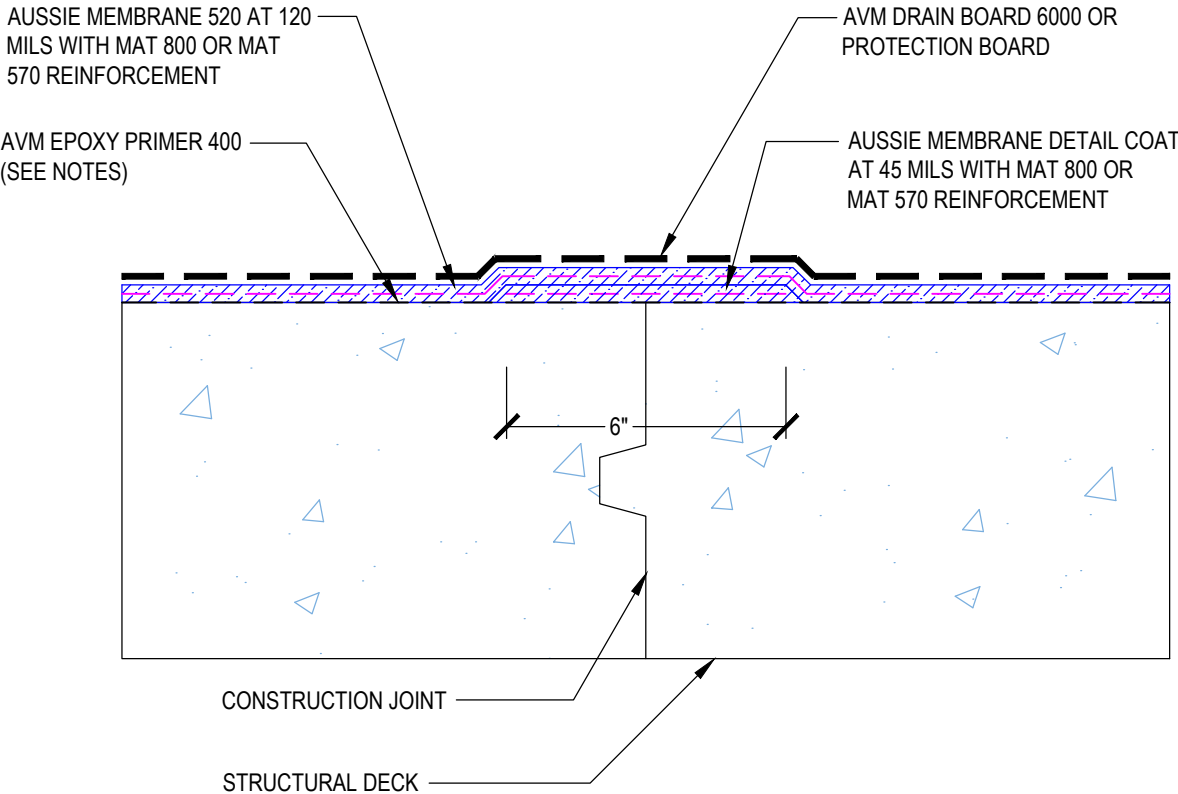

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1201
System:
Aussie Membrane 520

Construction Joint Detailing



AUSSIE MEMBRANE 520 90 Mil Unreinforced System

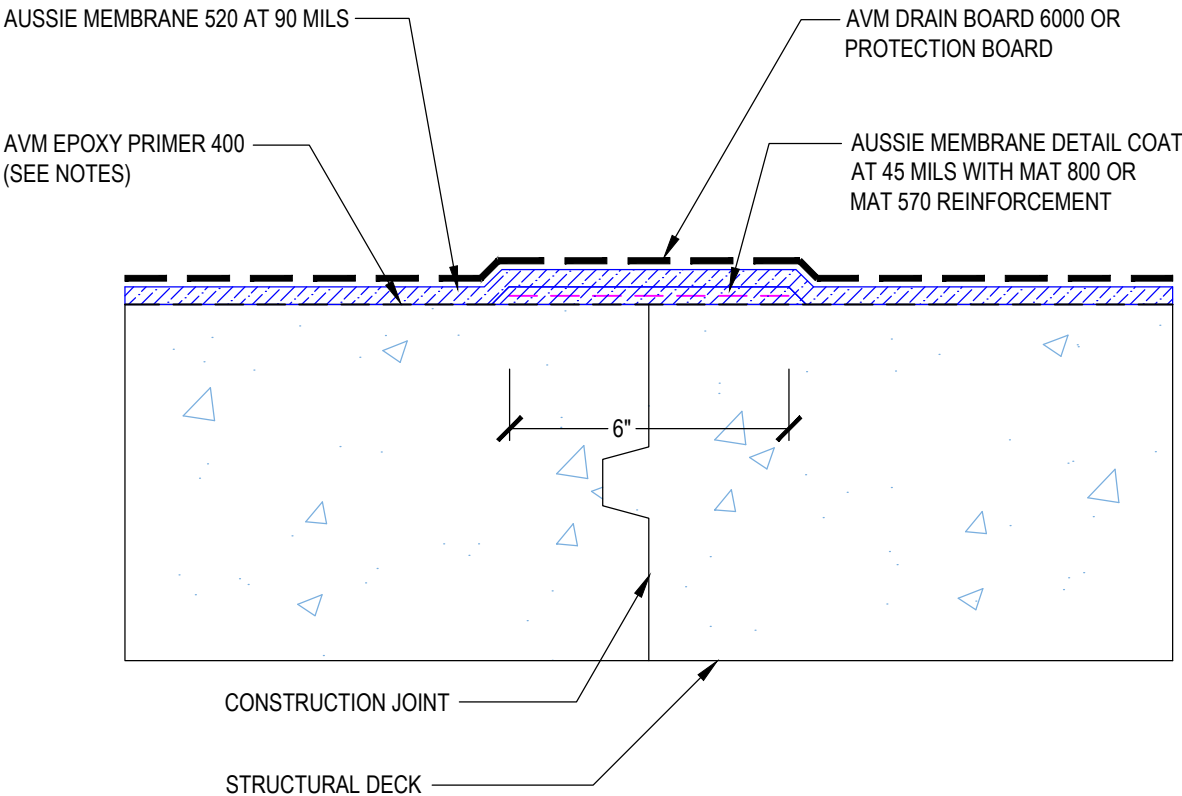

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1204
System:
Aussie Membrane 520

Construction Joint Detailing



AUSSIE MEMBRANE 520 120 Mil Reinforced System

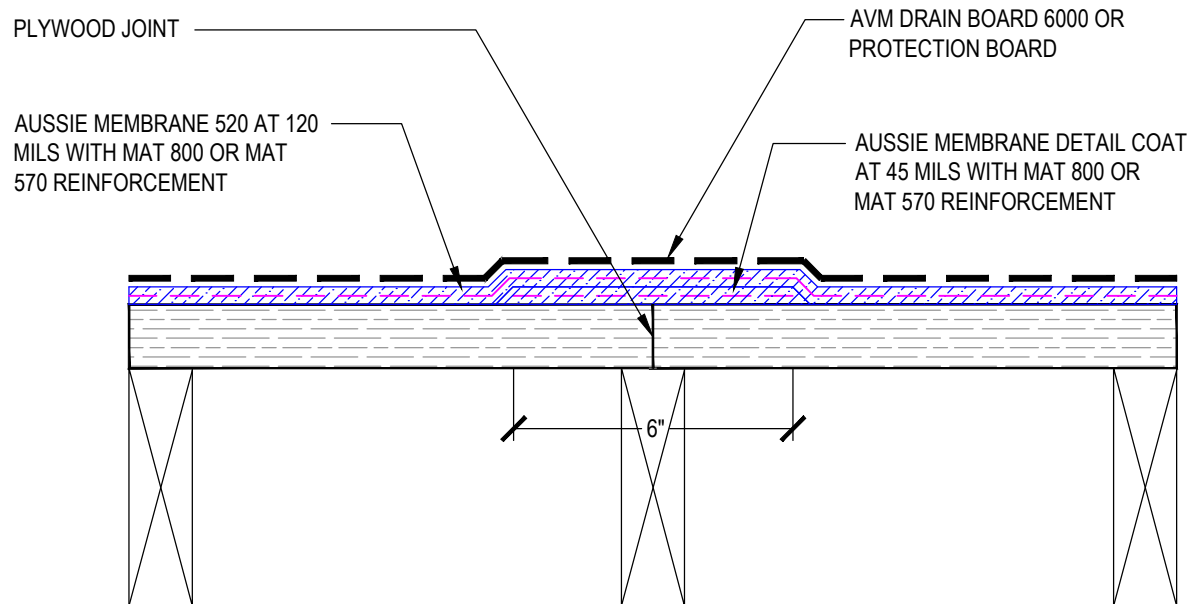

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1205
System:
Aussie Membrane 520

Construction Joint Detailing



AUSSIE MEMBRANE 520 90 Mil Unreinforced System

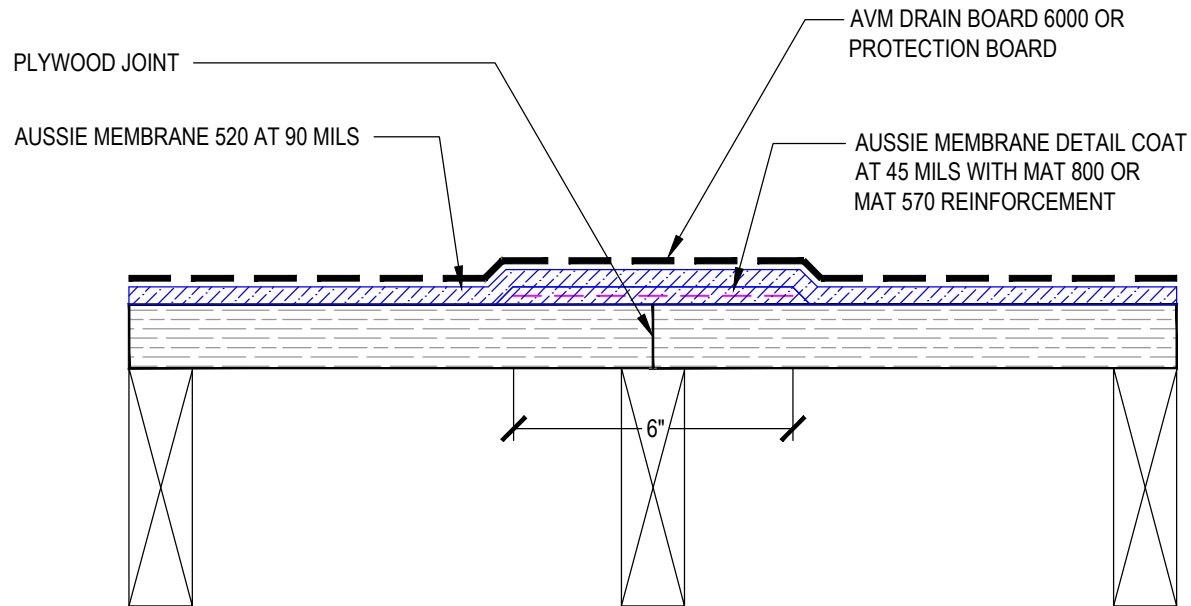


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1206
System:
Aussie Membrane 520

Precast Joint Detailing

AUSSIE MEMBRANE 520 120 Mil Reinforced System

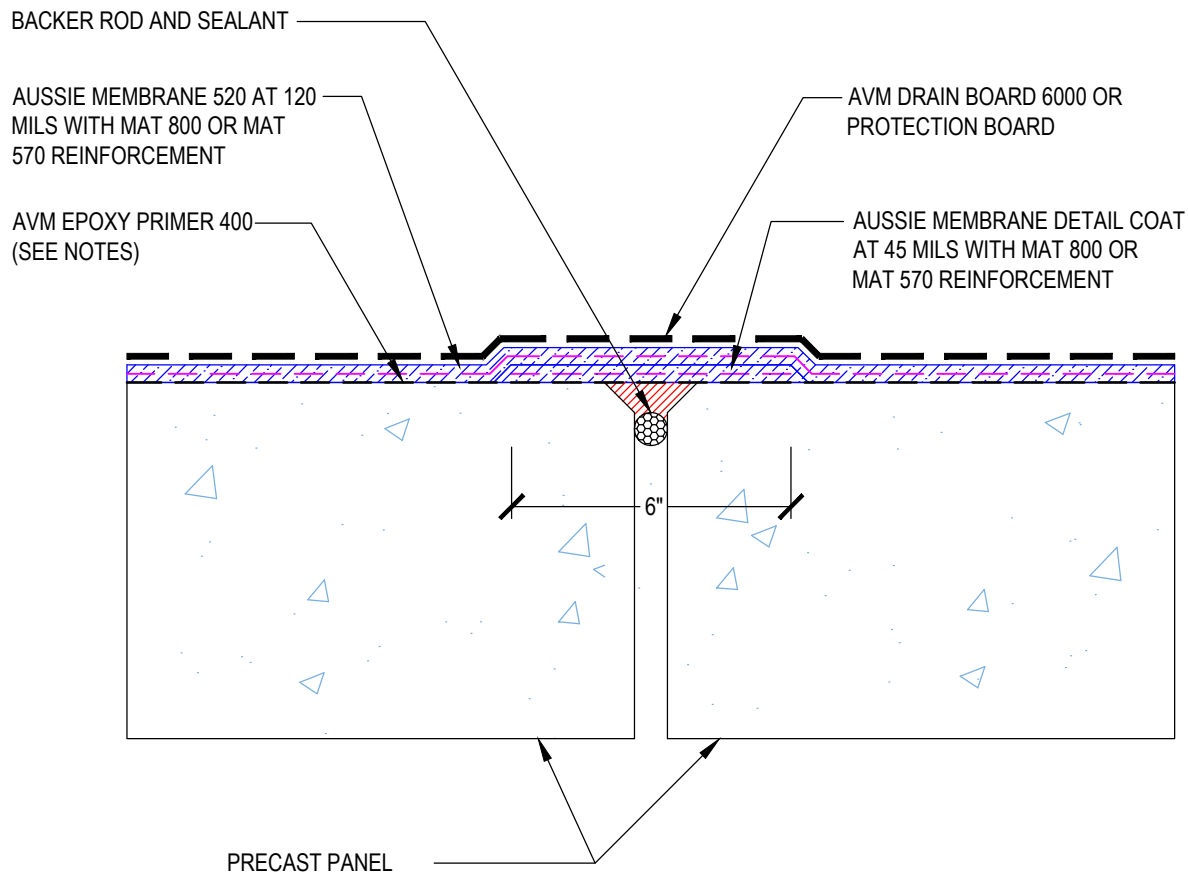

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1207
System:
Aussie Membrane 520

Precast Joint Detailing



AUSSIE MEMBRANE 520 90 Mil Unreinforced System

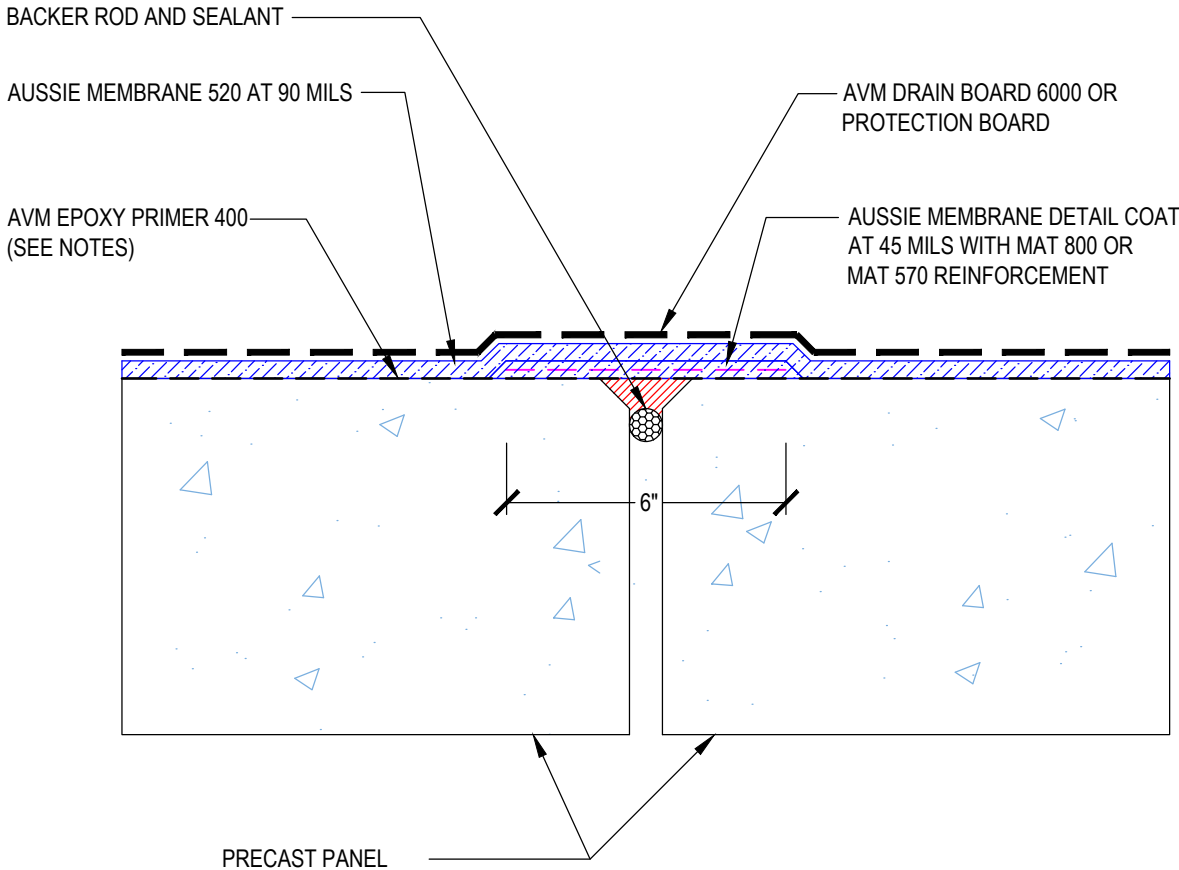


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1504
System:
Aussie Membrane 520

Deck Drain - Flush

AUSSIE MEMBRANE 520
120 Mil Reinforced System

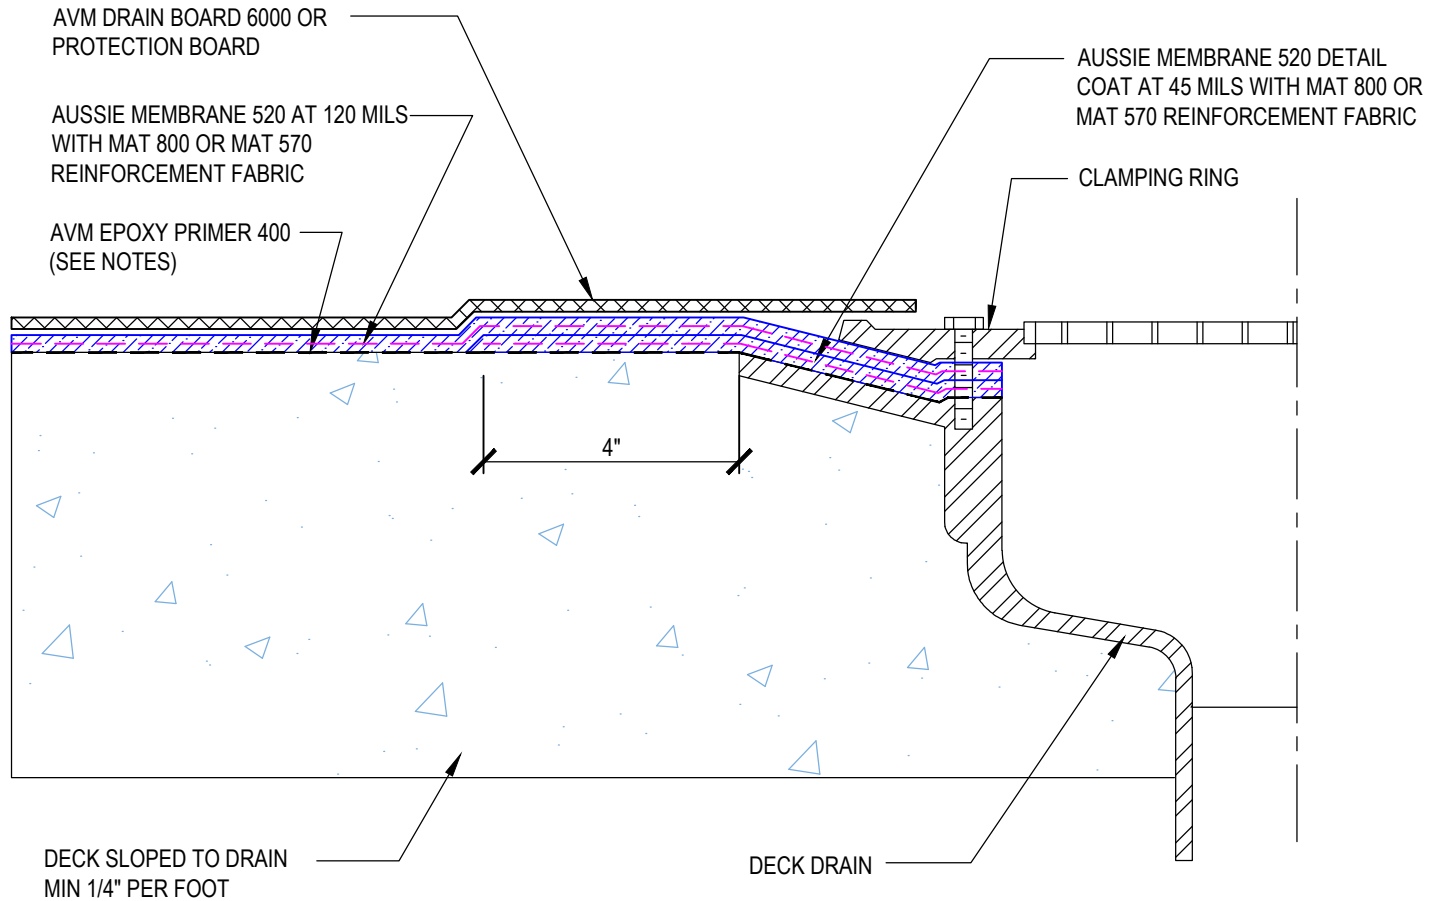


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1505
System:
Aussie Membrane 520

Deck Drain - Flush

AUSSIE MEMBRANE 520
90 Mil Unreinforced System

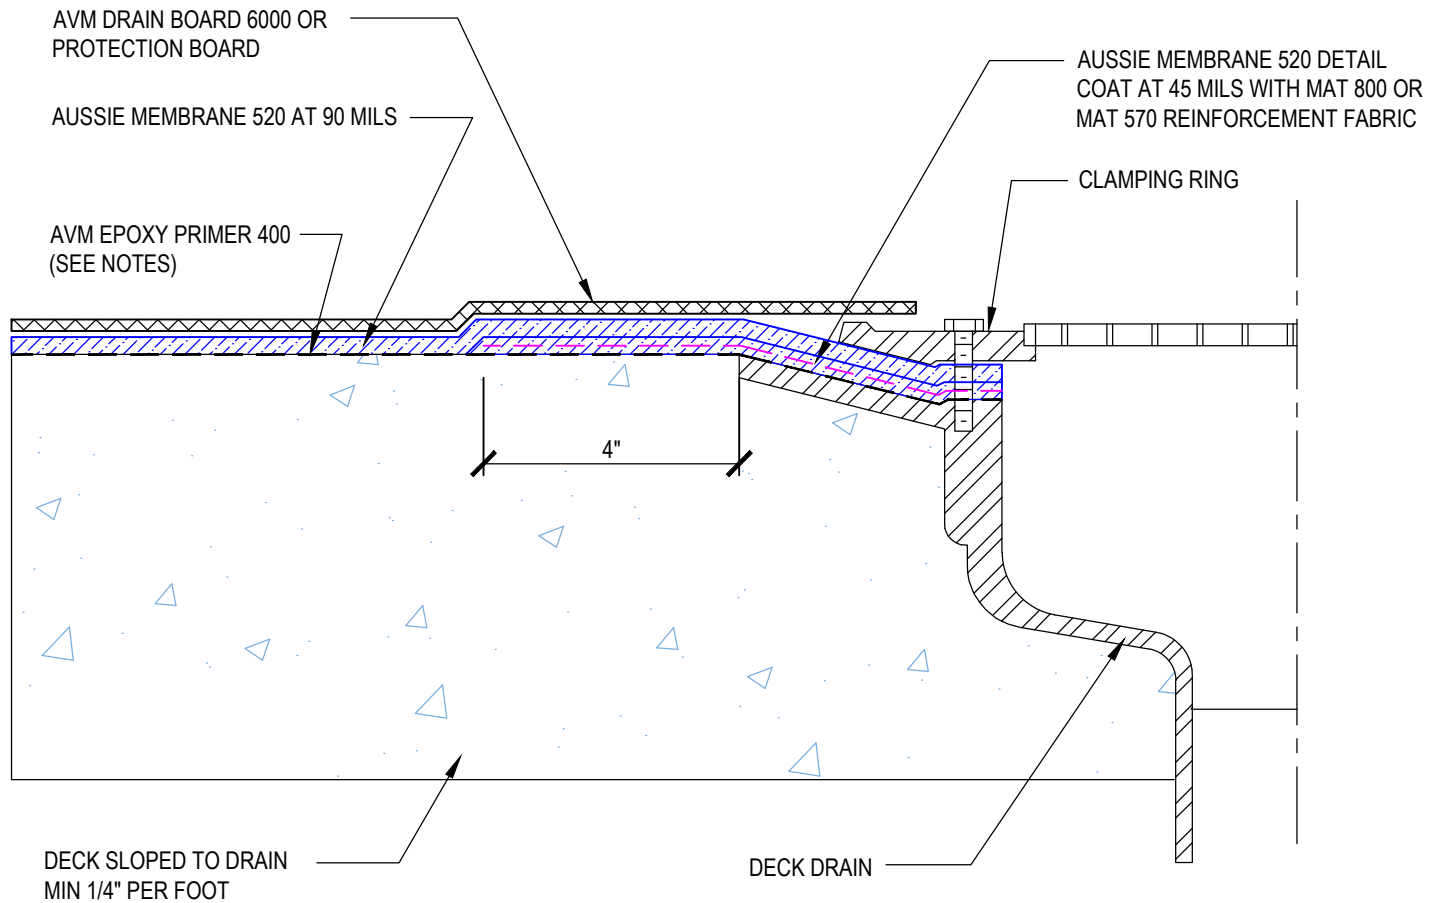


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1506
System:
Aussie Membrane 520

Deck Drain with Inspection Cover

AUSSIE MEMBRANE 520
120 Mil Reinforced System

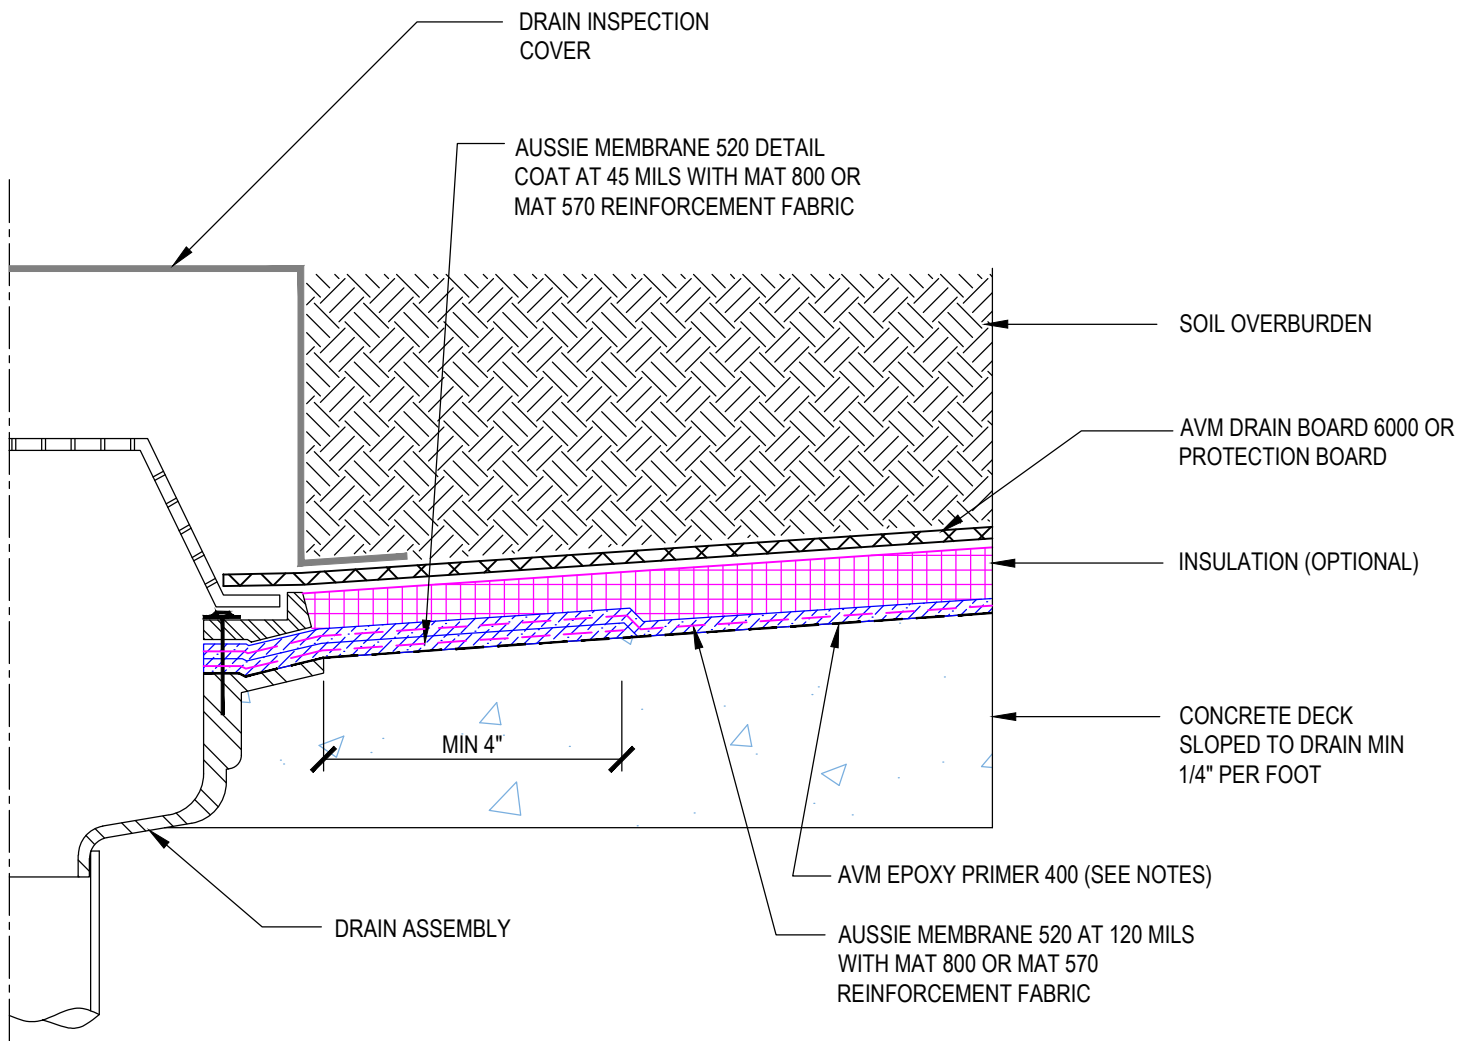

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1507
System:
Aussie Membrane 520

Deck Drain with Inspection Cover



AUSSIE MEMBRANE 520
90 Mil Unreinforced System

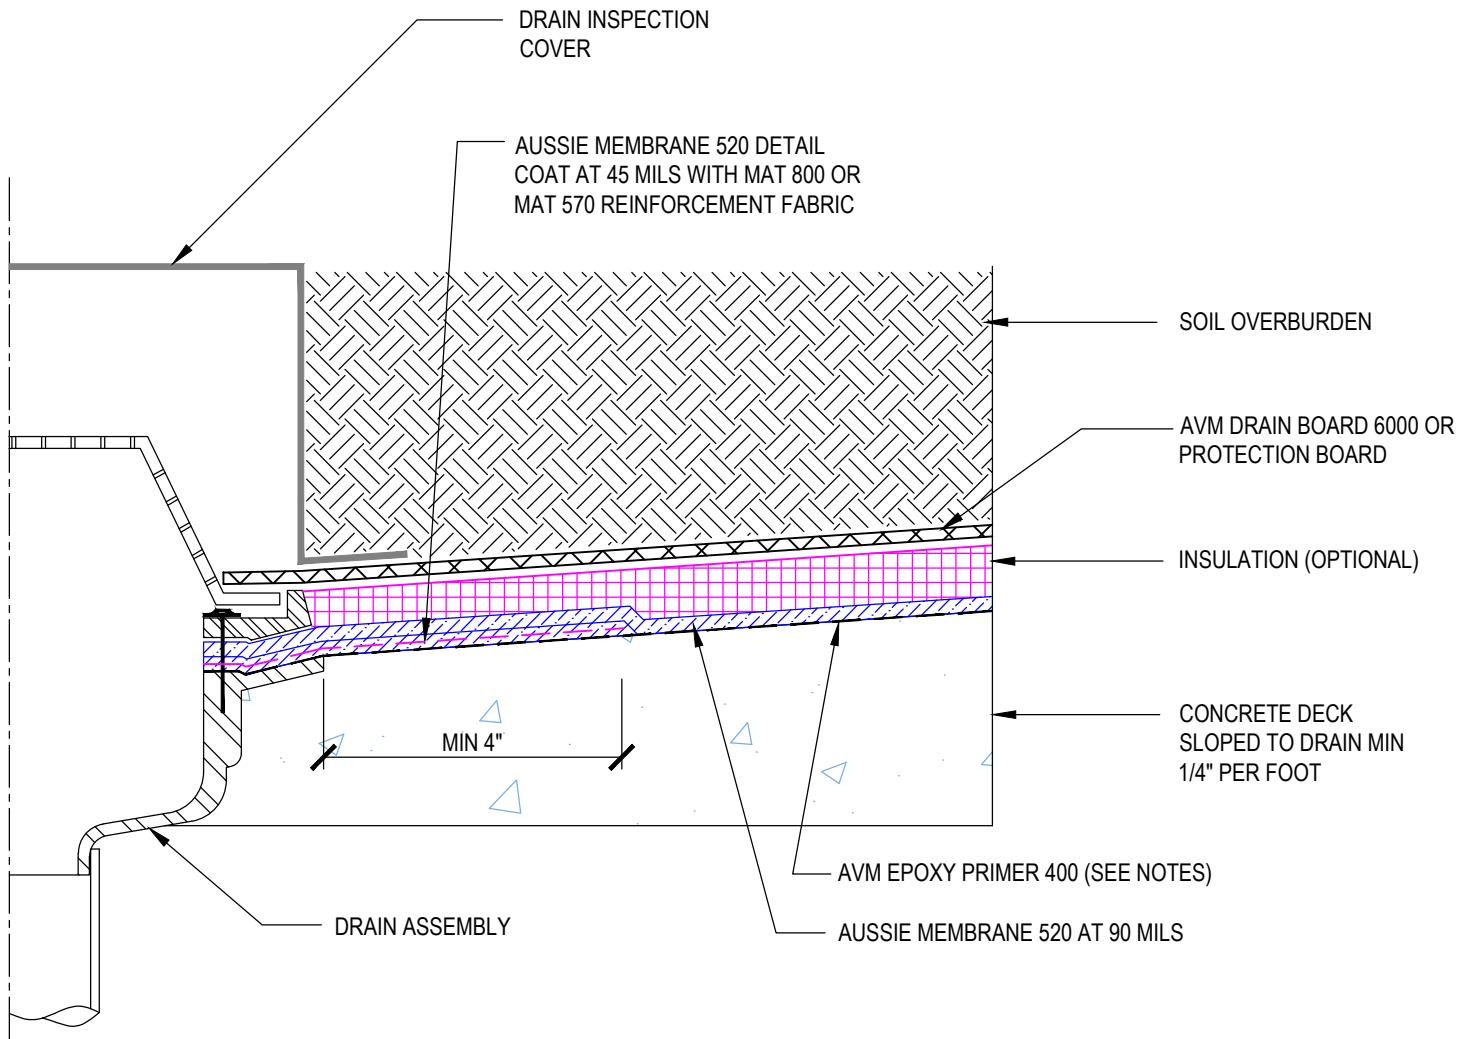

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1508
System:
Aussie Membrane 520

Split Slab Two-Stage Drain



AUSSIE MEMBRANE 520 120 Mil Reinforced System

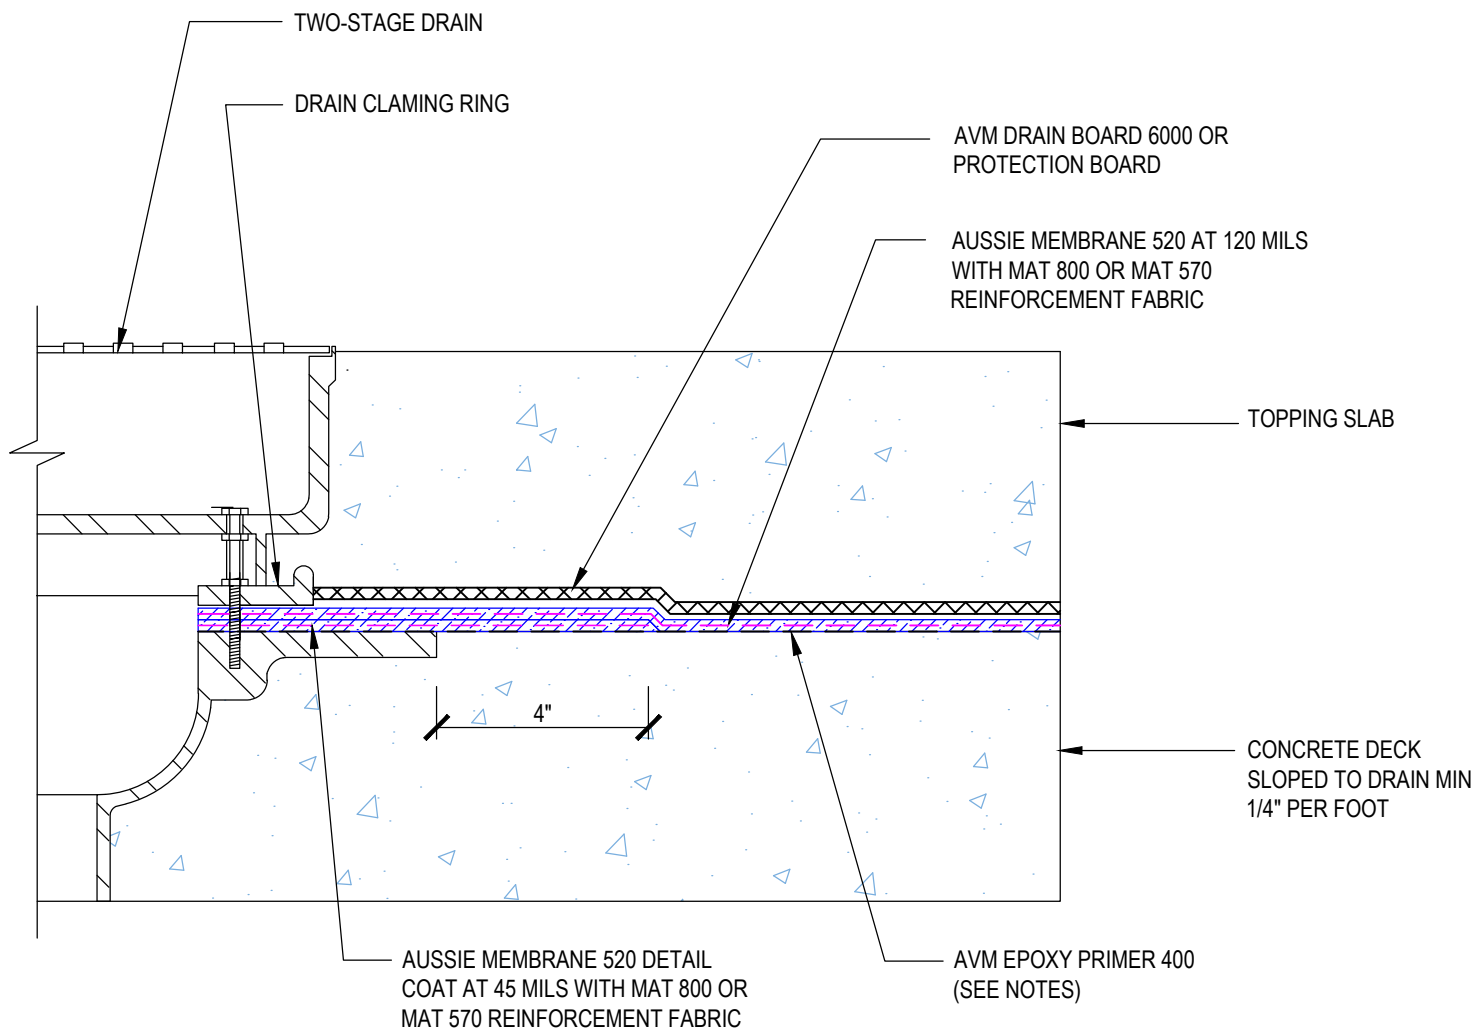

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-1509
System:
Aussie Membrane 520

Split Slab Two-Stage Drain



AUSSIE MEMBRANE 520 90 Mil Unreinforced System

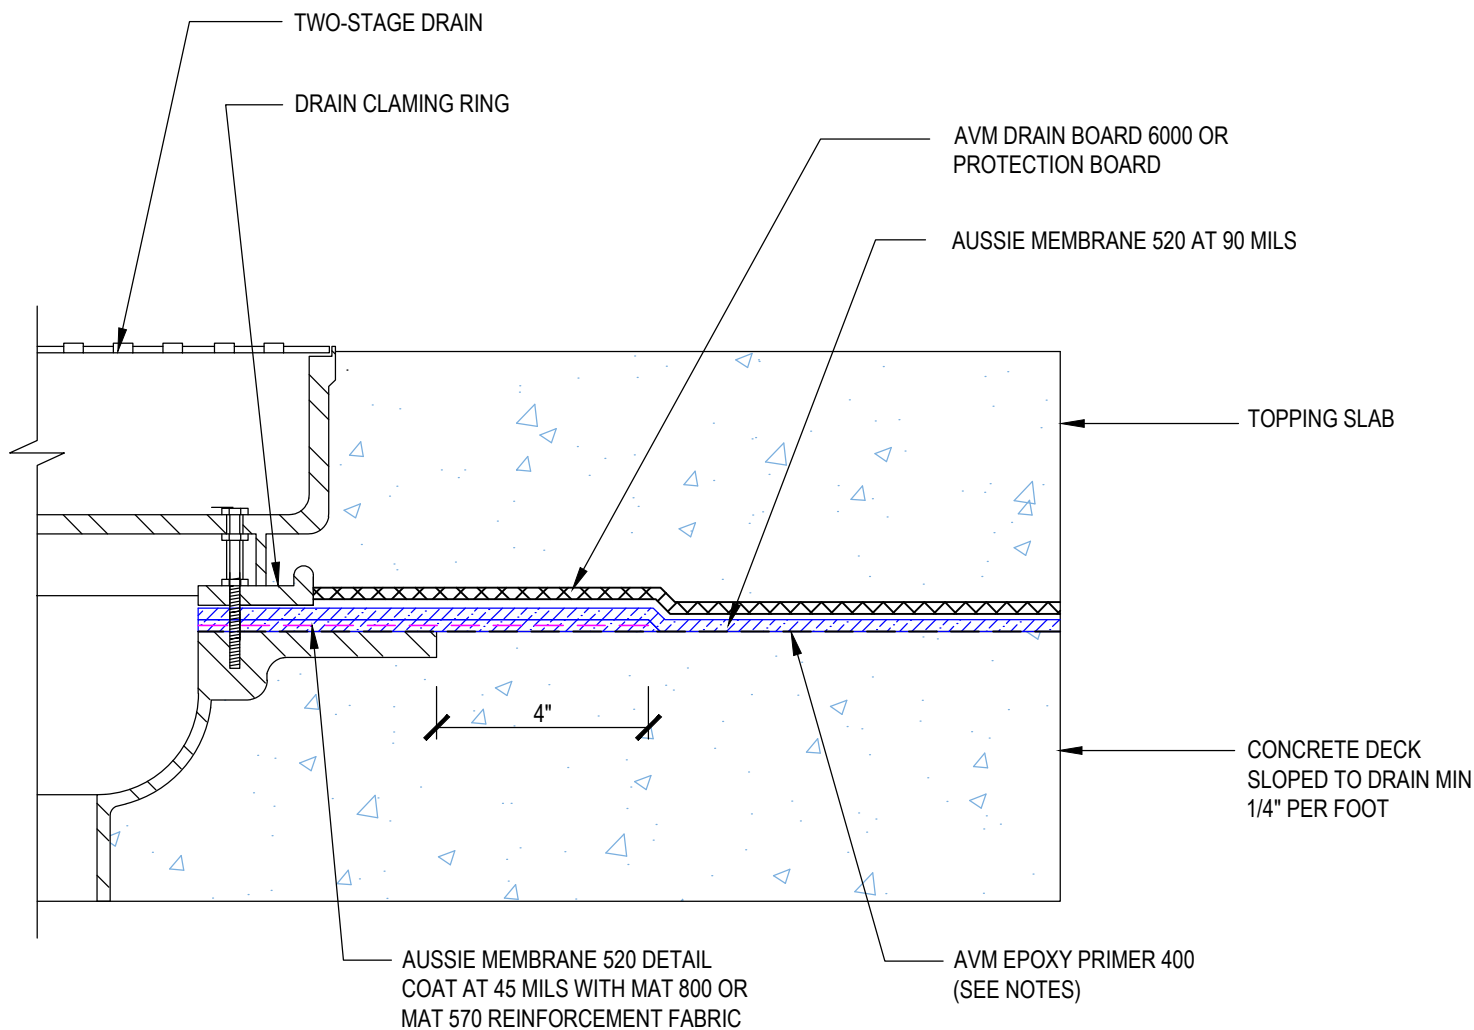

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-6002
System:
Aussie Membrane 520

Planter Terminations



AUSSIE MEMBRANE 520

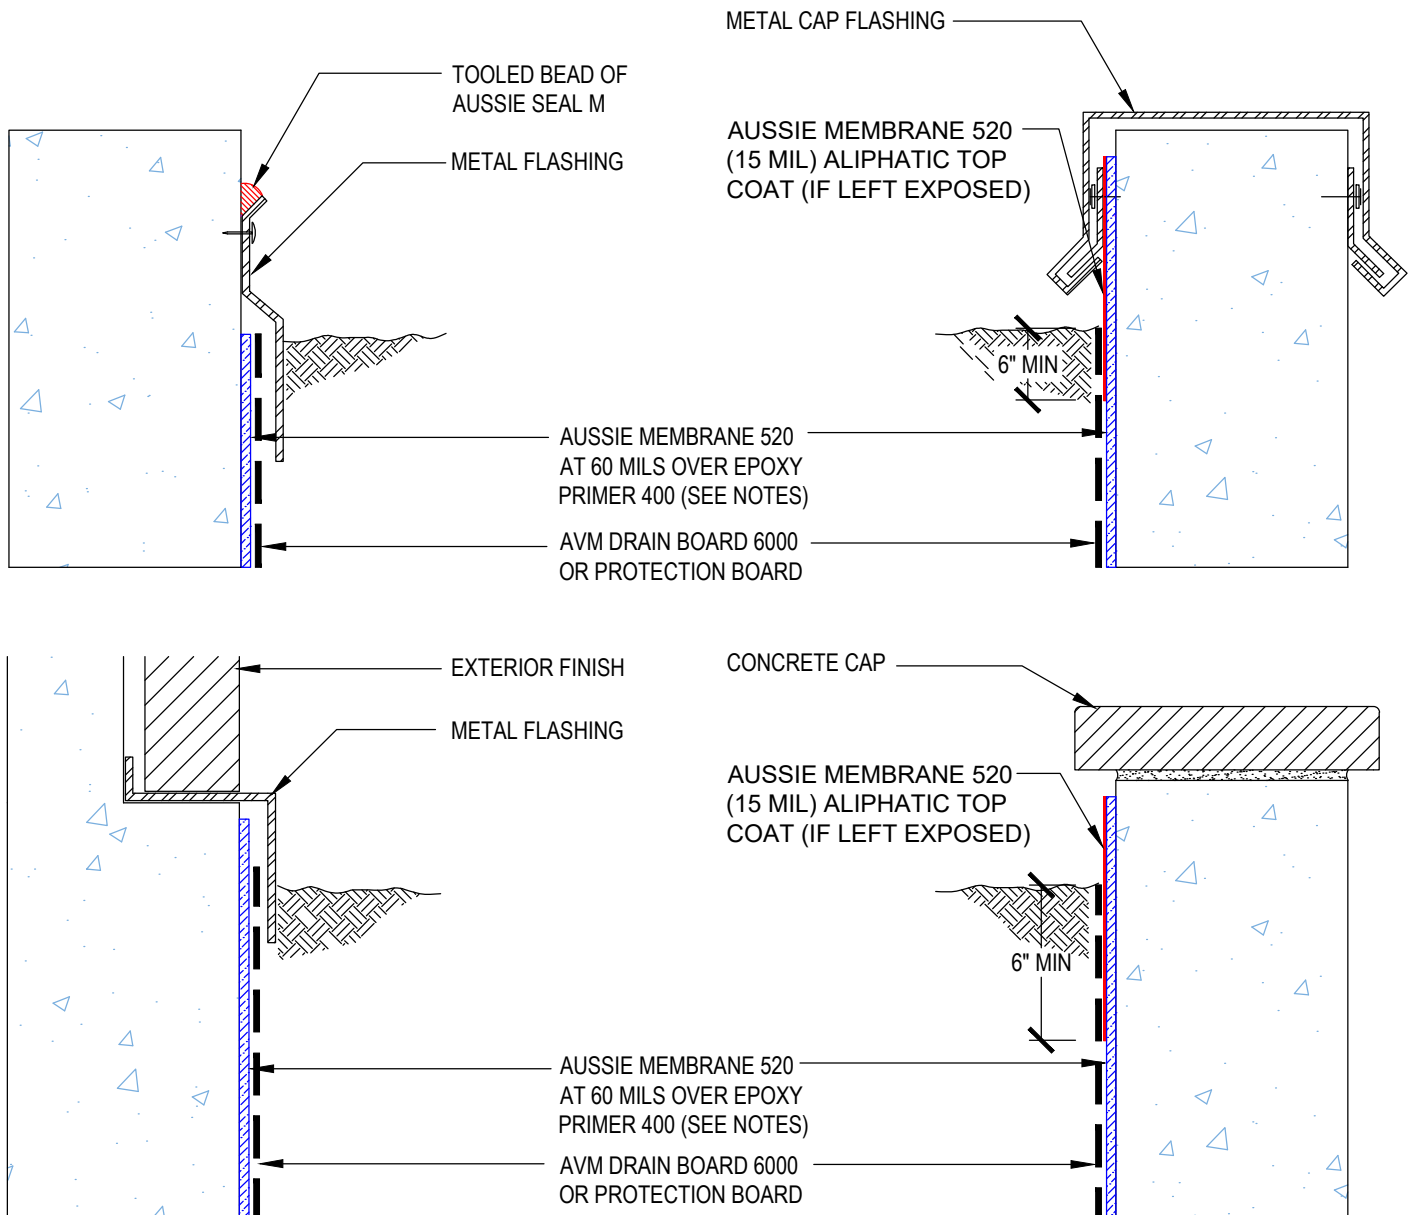


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-6004
System:
Aussie Membrane 520

Sidewalk Termination

AUSSIE MEMBRANE 520 120 Mil Reinforced System

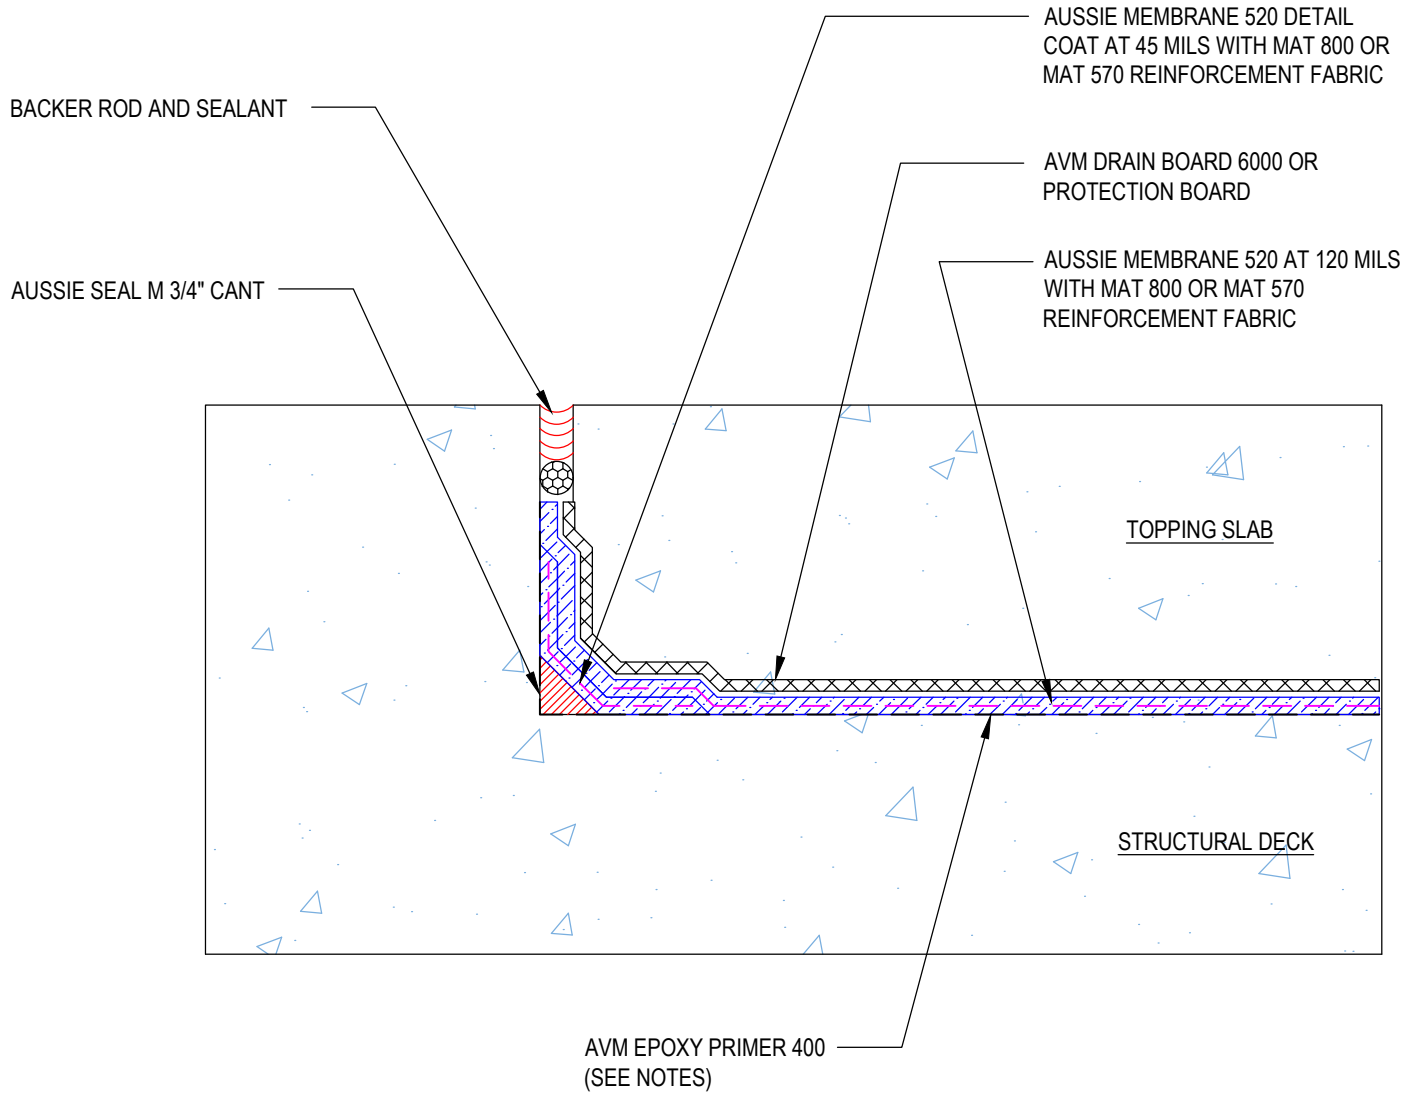


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-6005
System:
Aussie Membrane 520

Sidewalk Termination

AUSSIE MEMBRANE 520
90 Mil Unreinforced System

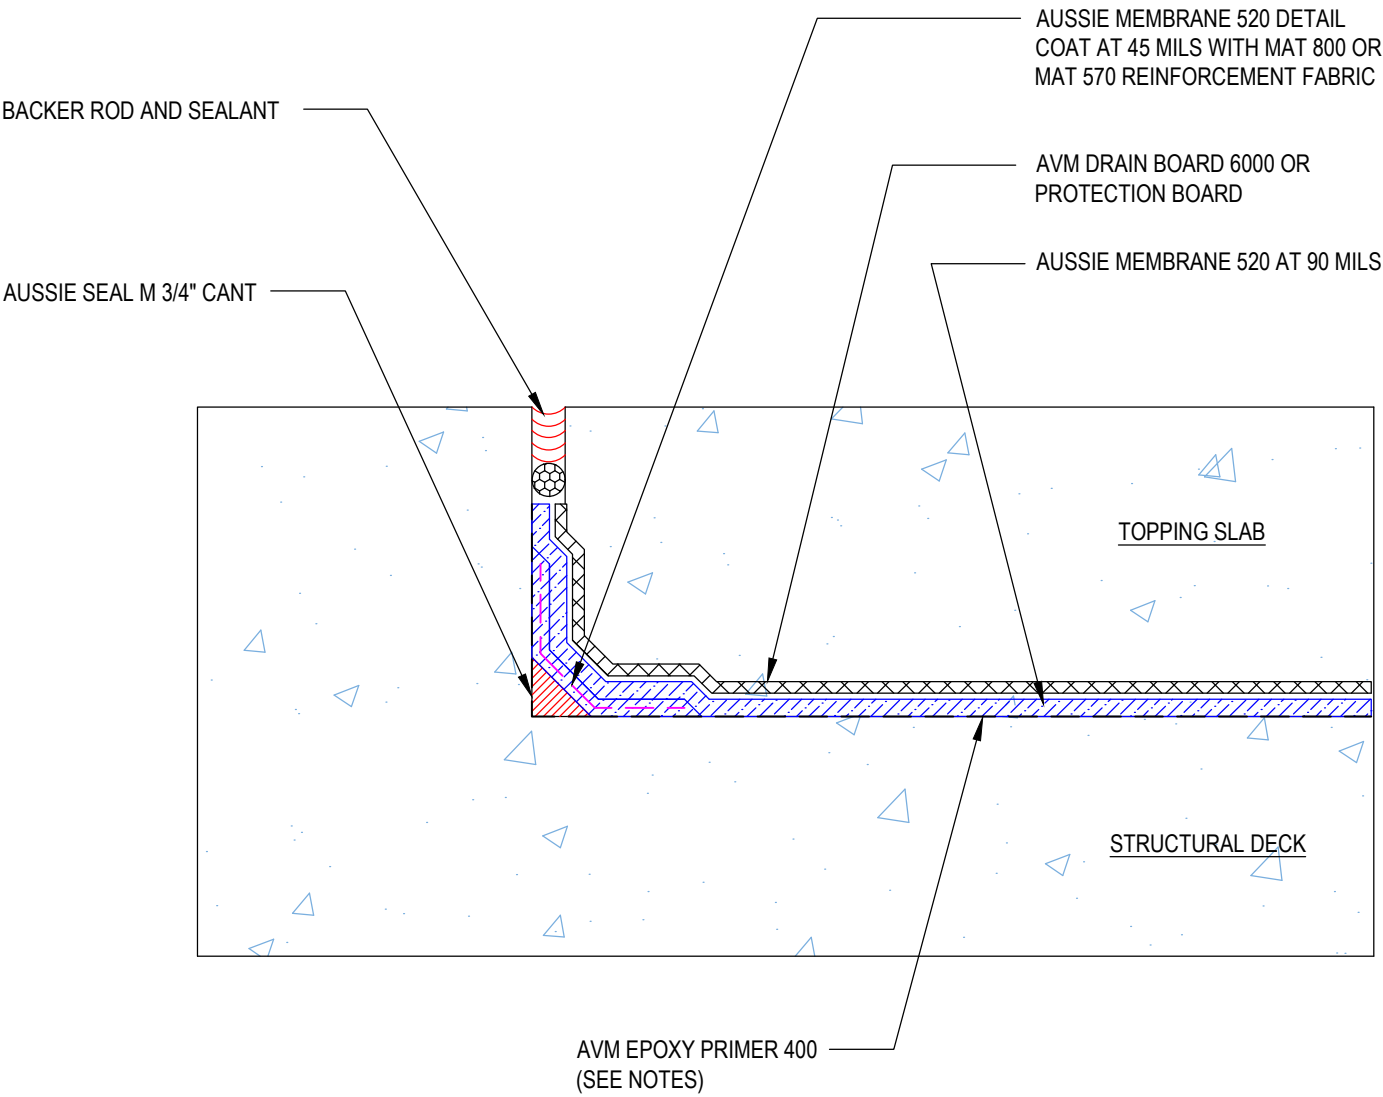


- Notes:**
1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
 2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
 3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-6006
System:
Aussie Membrane 520

Backfilled Wall Terminations



AUSSIE MEMBRANE 520

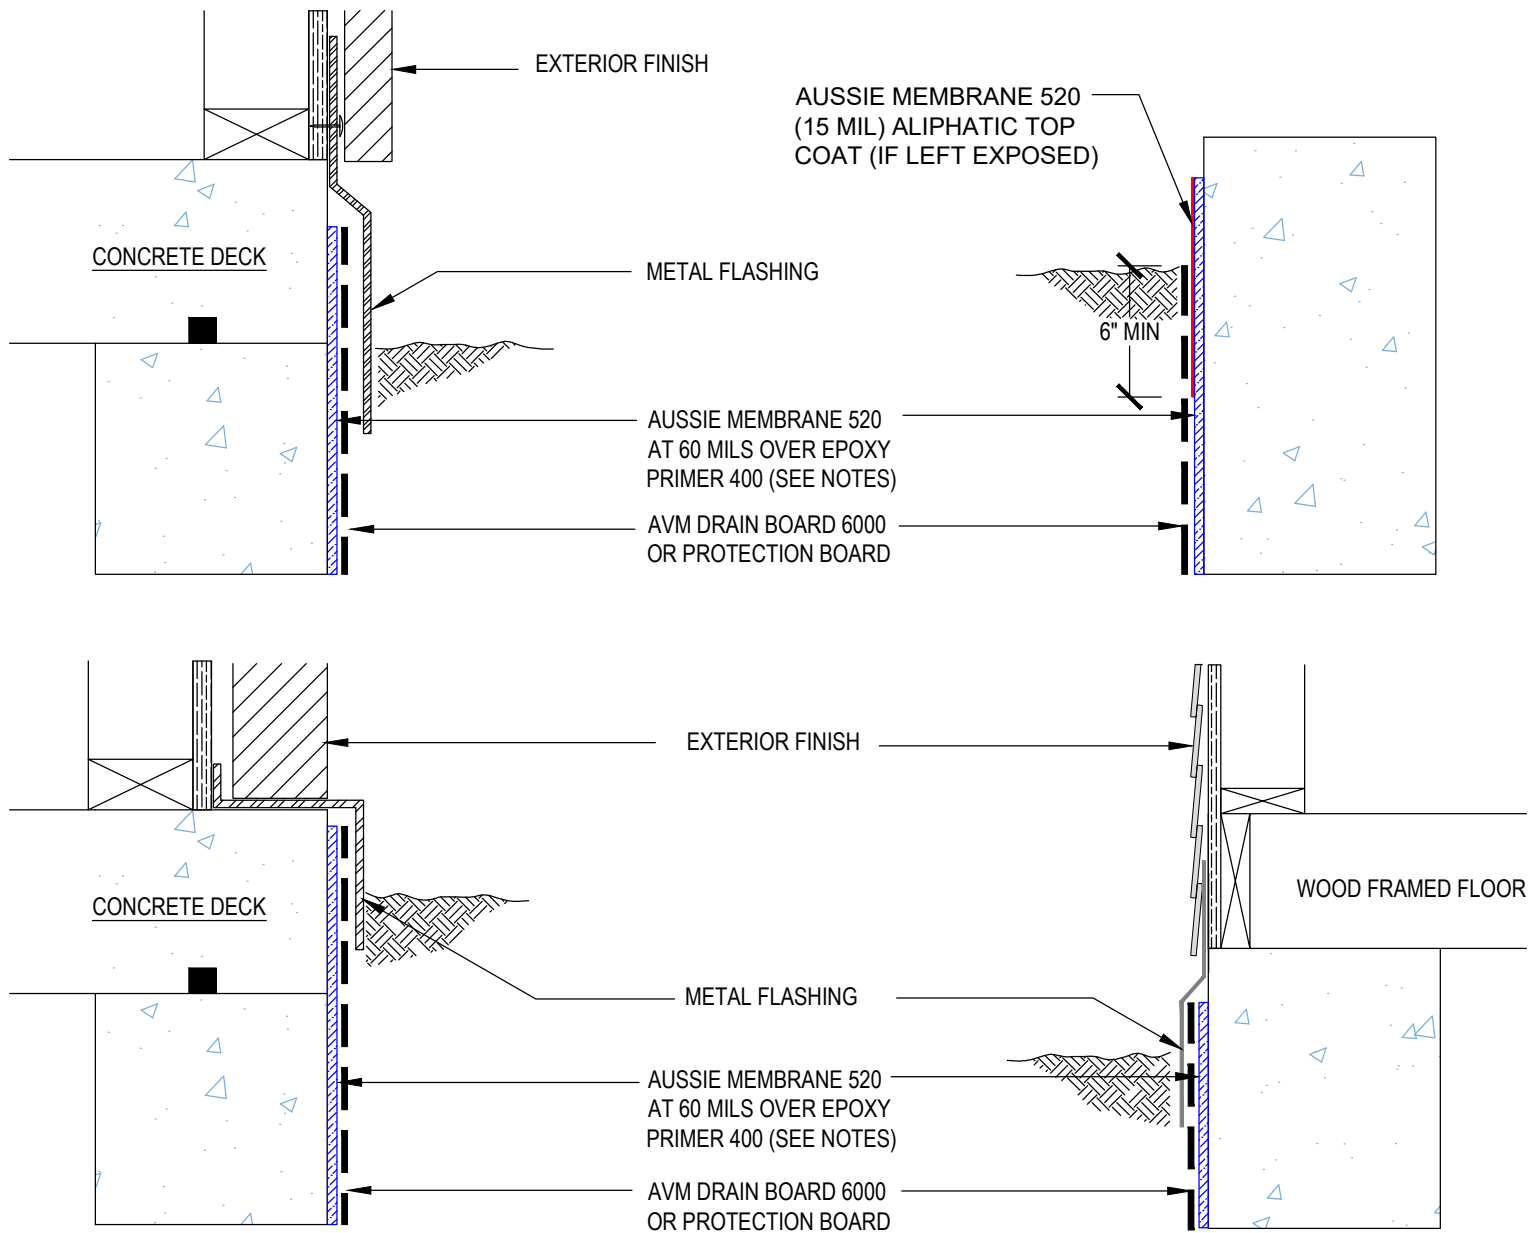

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-6502
System:
Aussie Membrane 520

Typical Wall Penetration



AUSSIE MEMBRANE 520

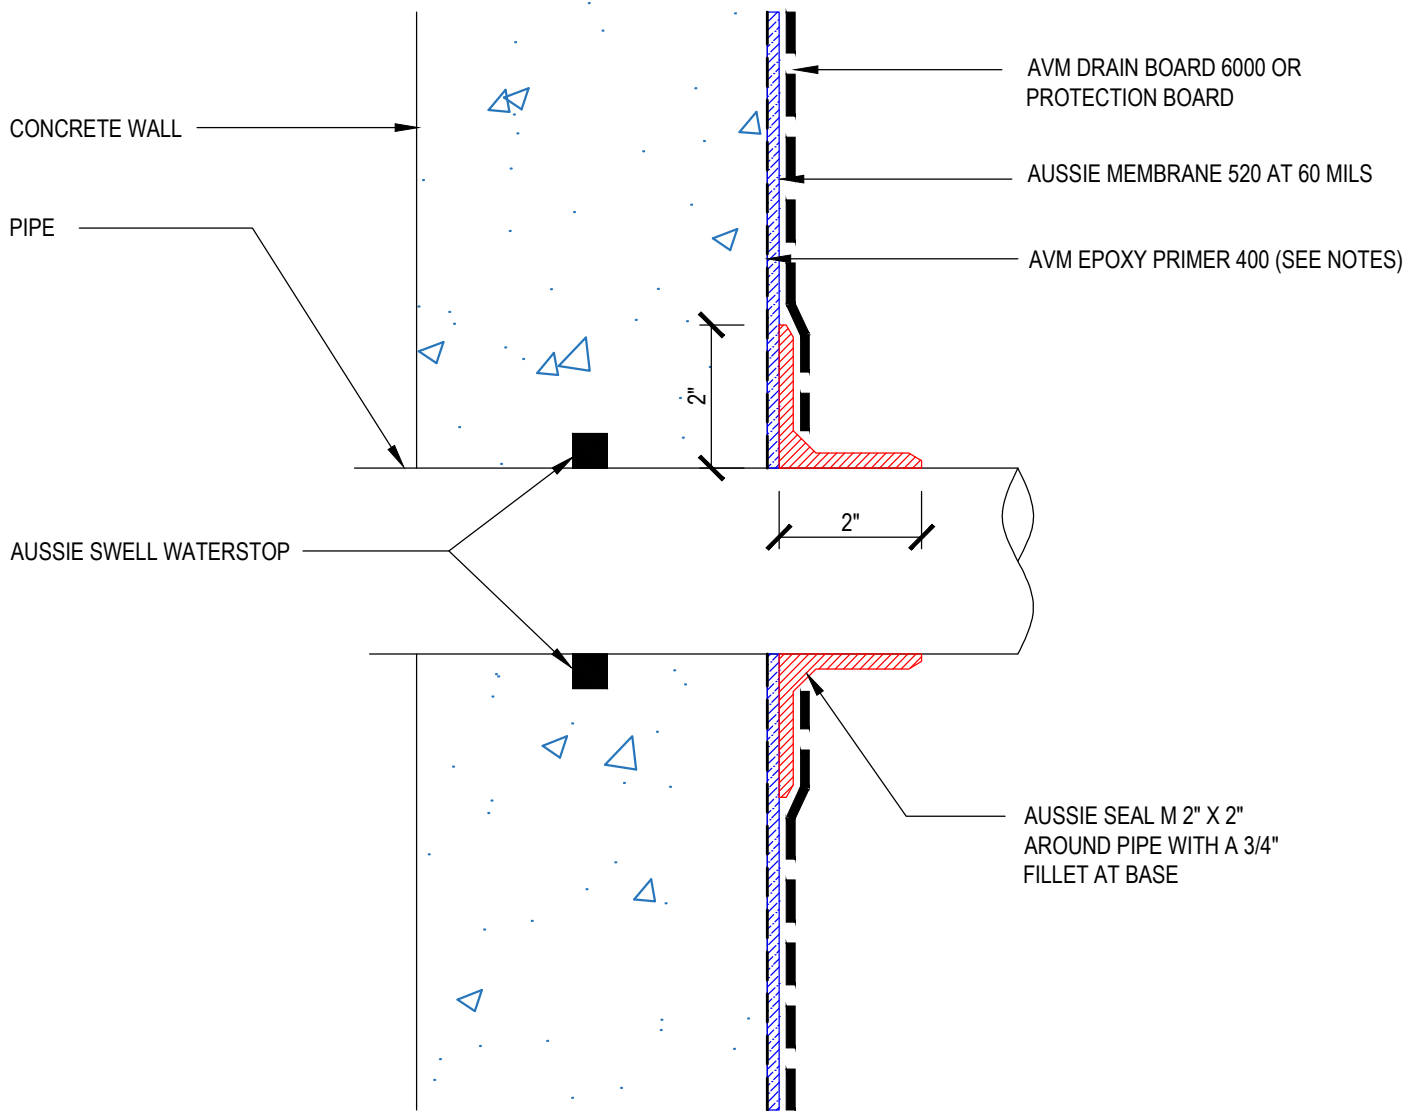

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-6504
System:
Aussie Membrane 520

Cored Wall Penetration



AUSSIE MEMBRANE 520

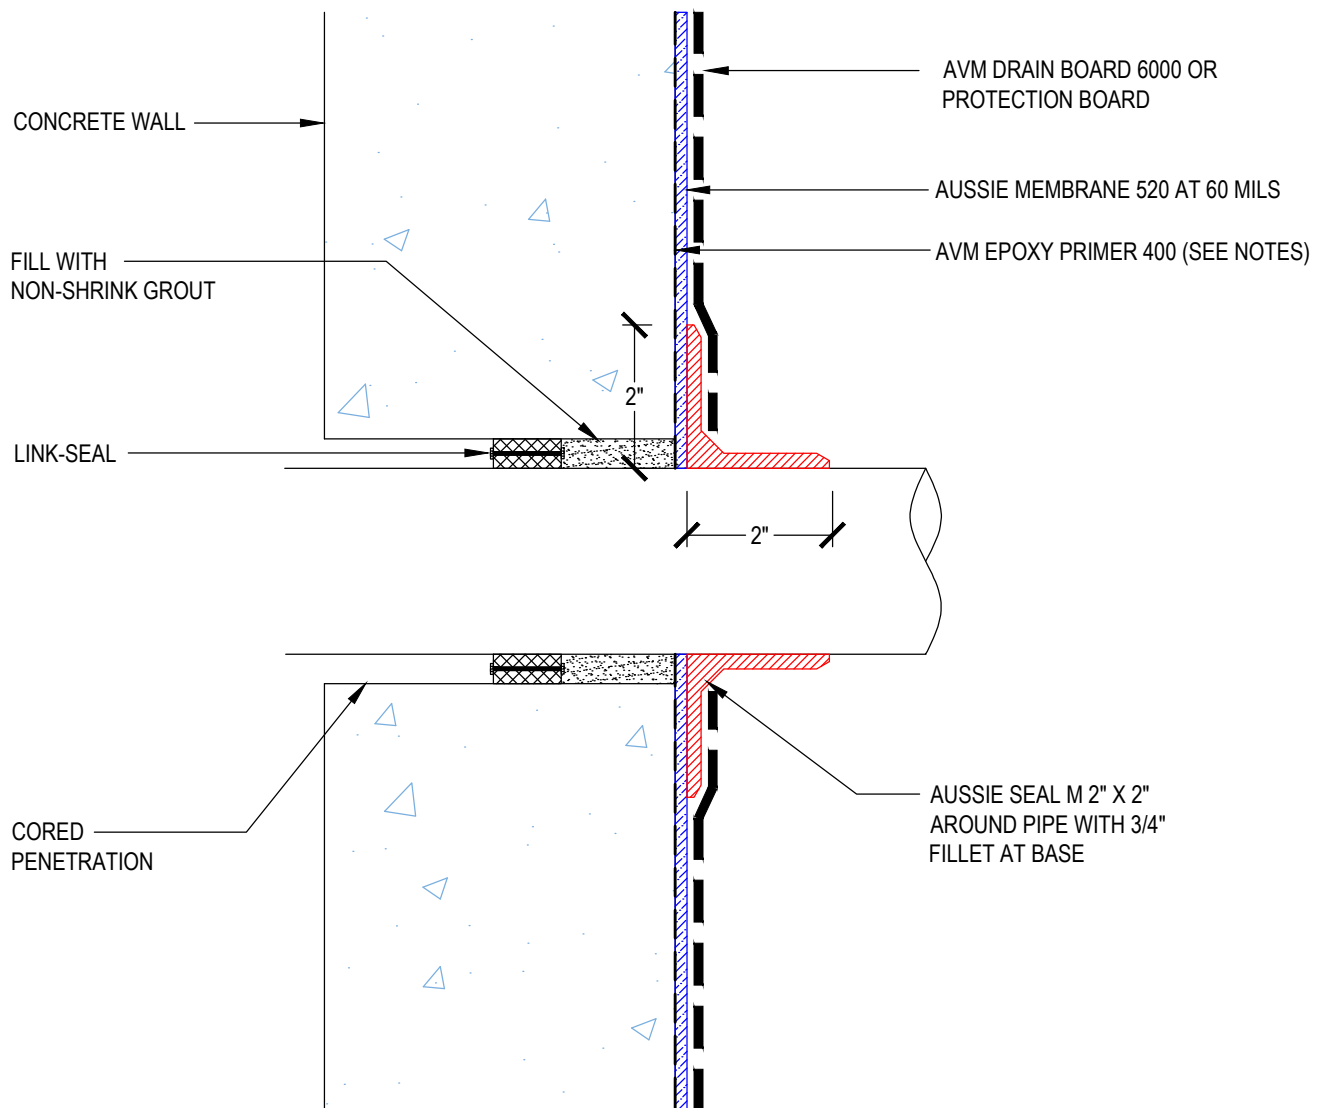

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-6505
System:
Aussie Membrane 520

Sleeved Wall Penetration



AUSSIE MEMBRANE 520

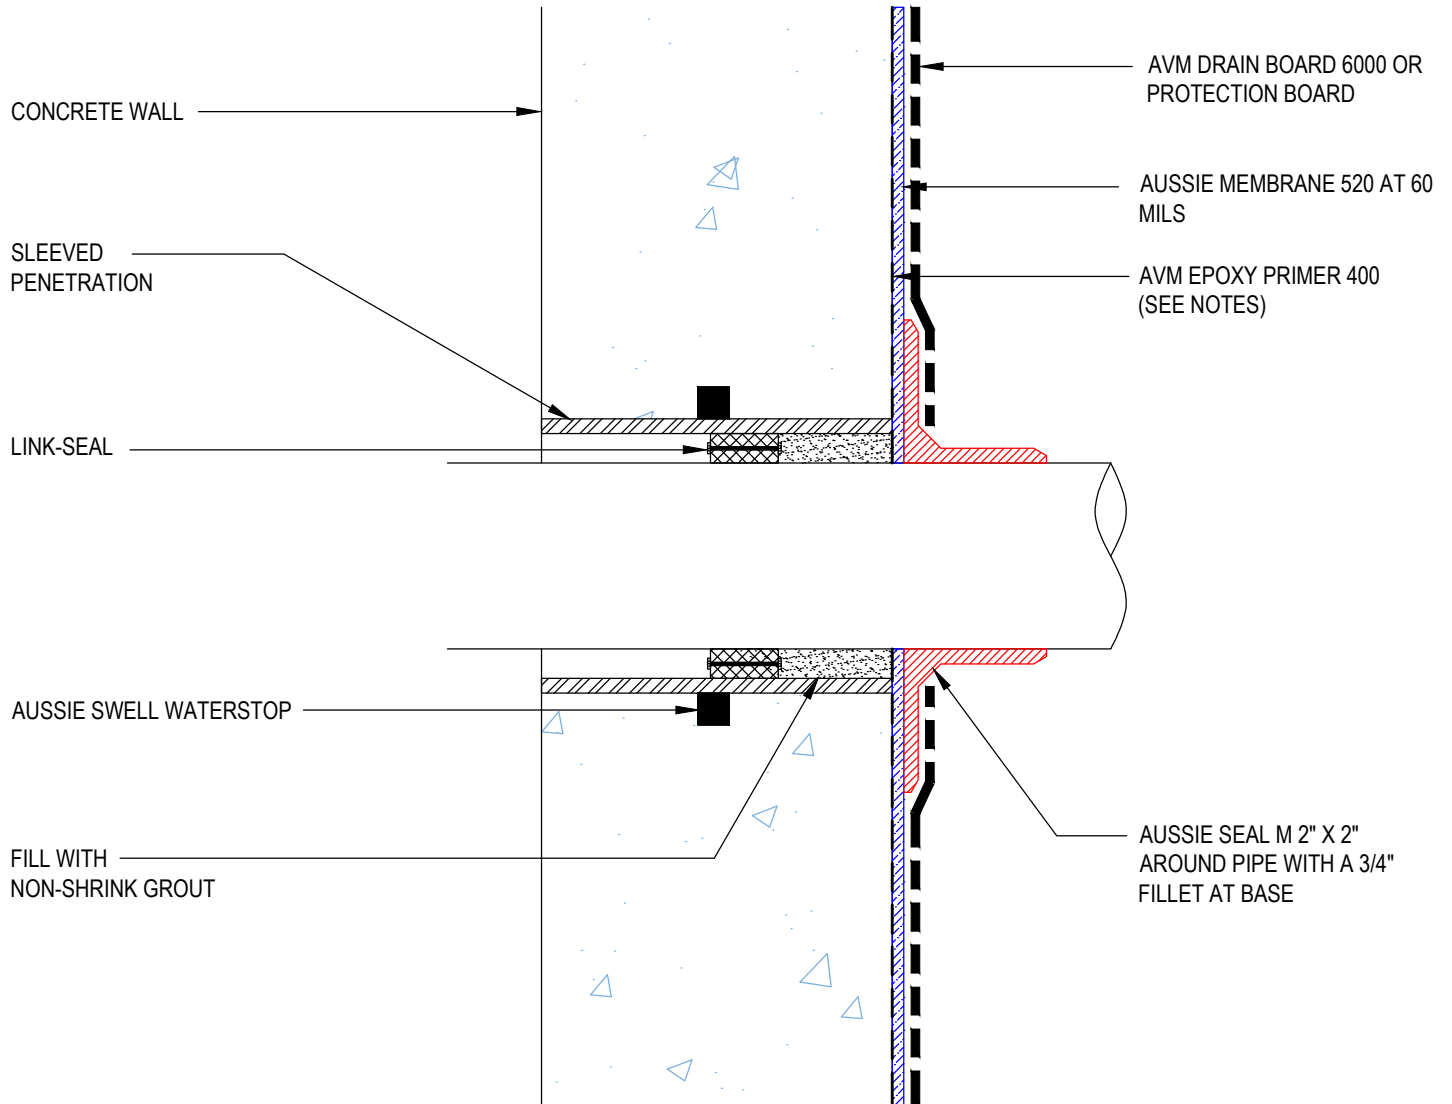

Notes:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-6510
System:
Aussie Membrane 520

Multiple Pipe Penetration



AUSSIE MEMBRANE 520

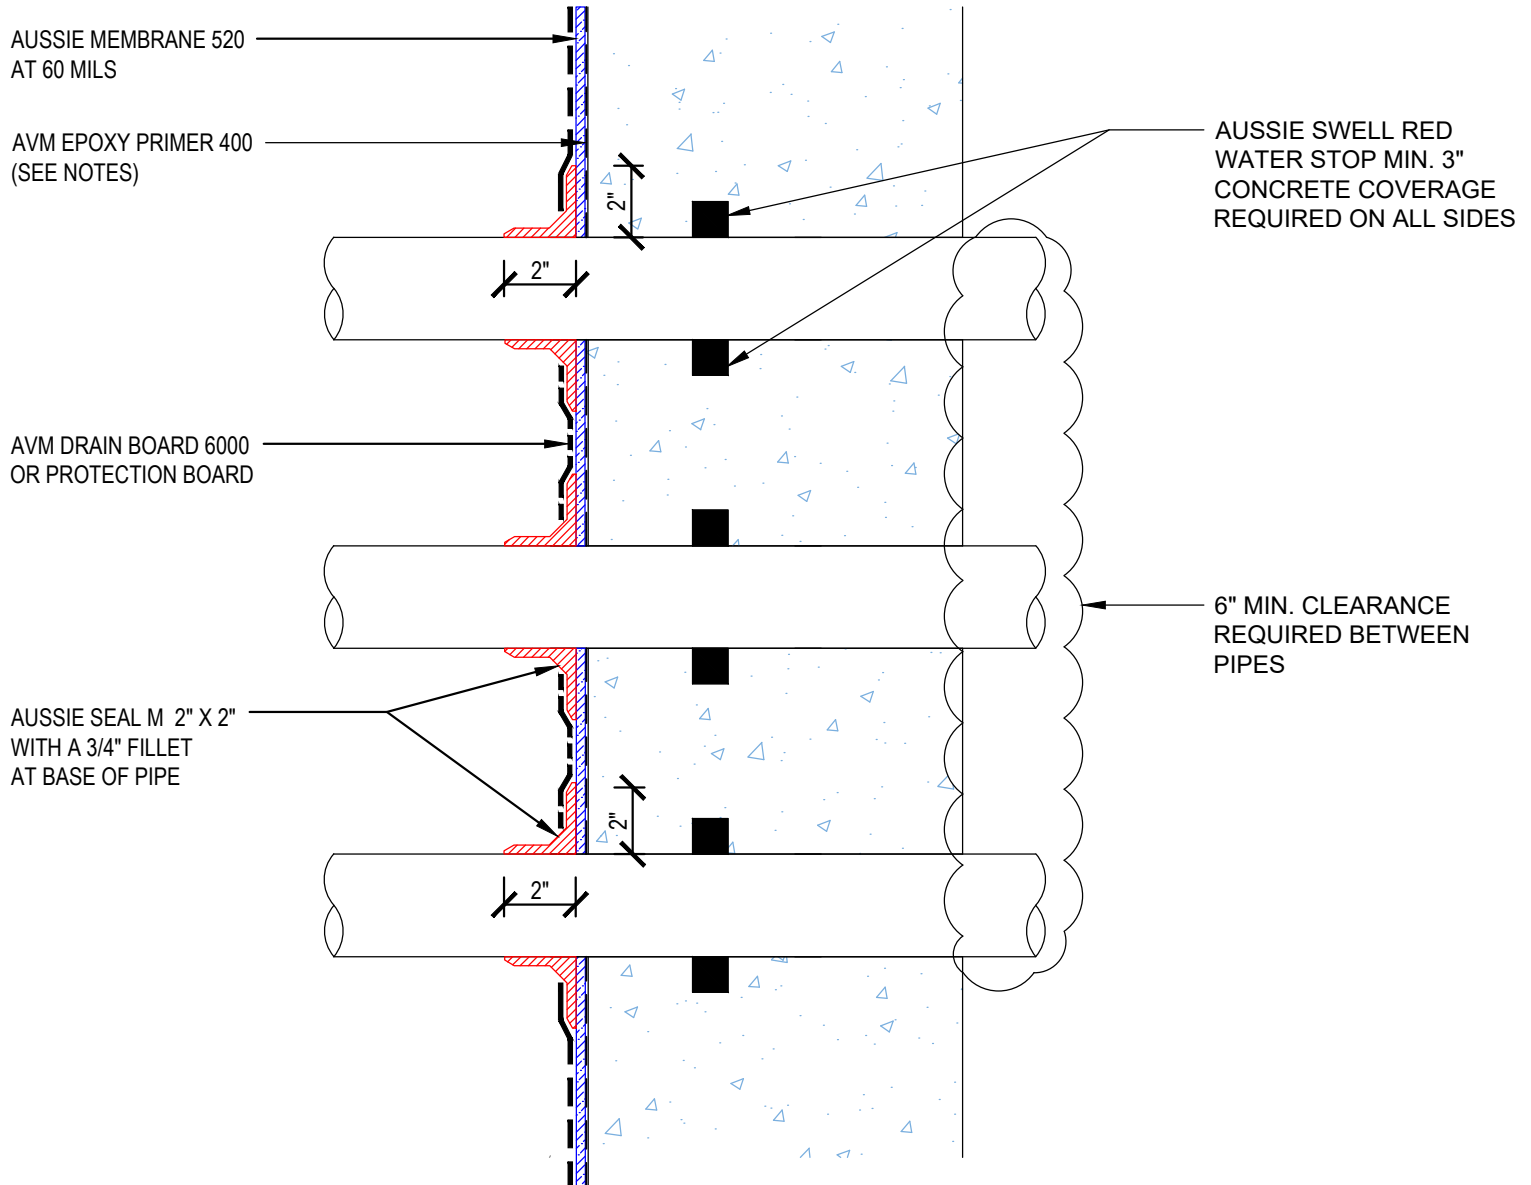


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-6512
System:
Aussie Membrane 520

Deck Pipe Penetration

AUSSIE MEMBRANE 520 120 Mil Reinforced System

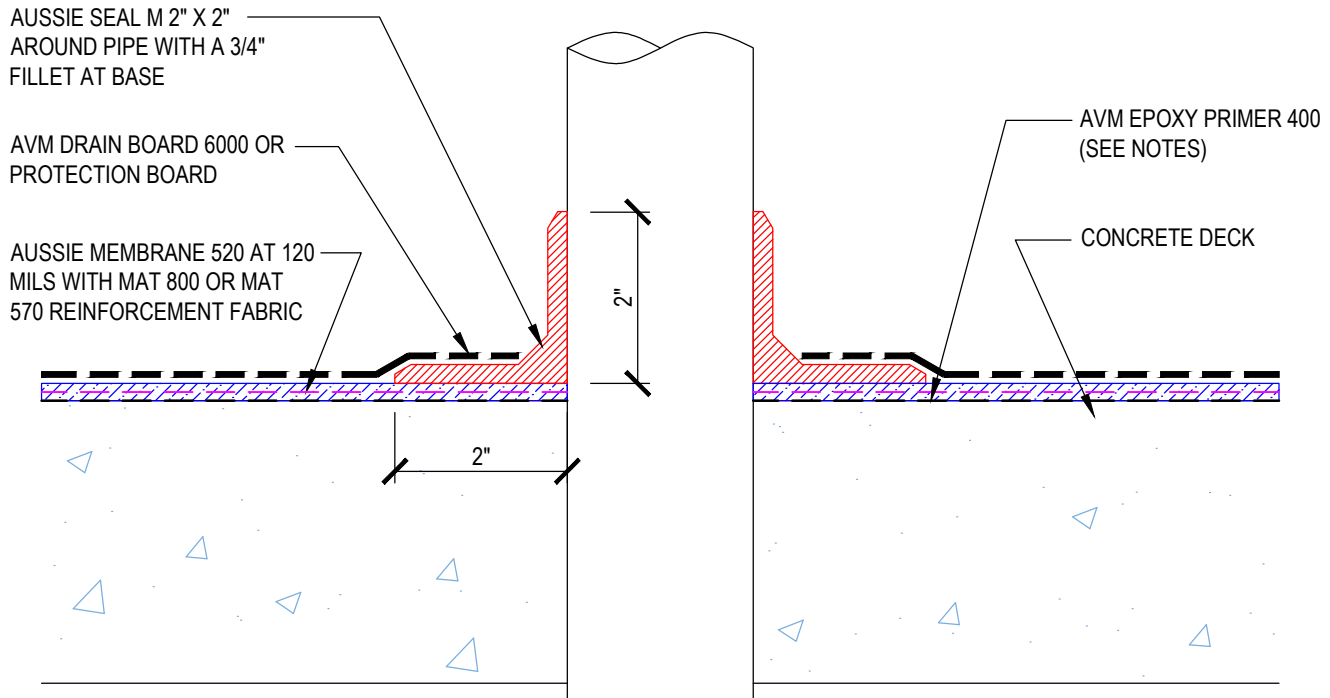


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-6513
System:
Aussie Membrane 520

Deck Pipe Penetration

AUSSIE MEMBRANE 520
90 Mil Unreinforced System

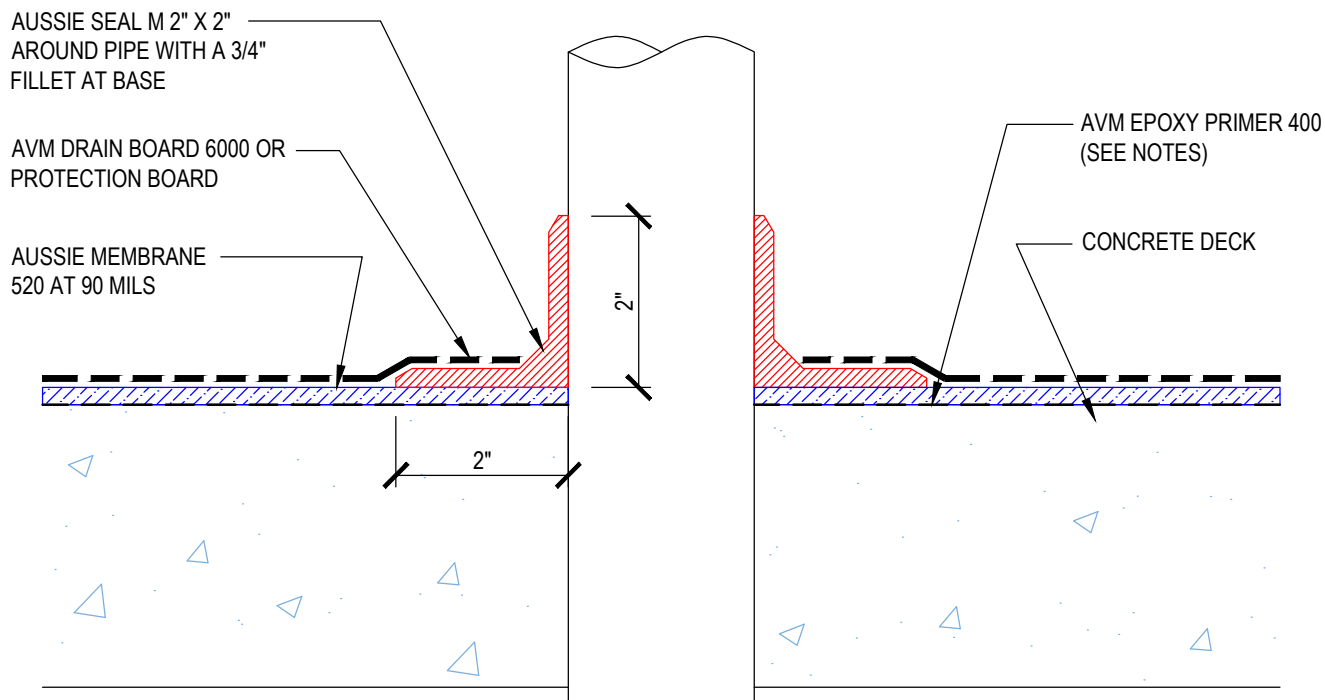

Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified


DETAIL #:
0520-7006
System:
Aussie Membrane 520

Outside Corner




AUSSIE MEMBRANE 520


STEP 1

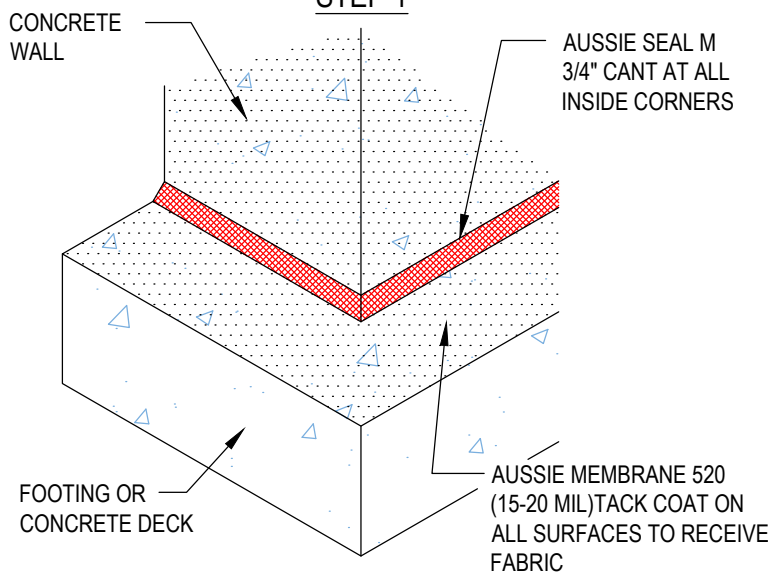


STEP 2

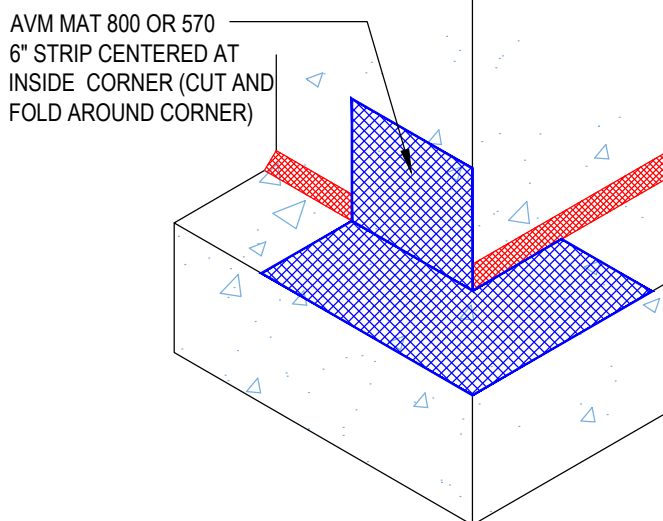

STEP 3

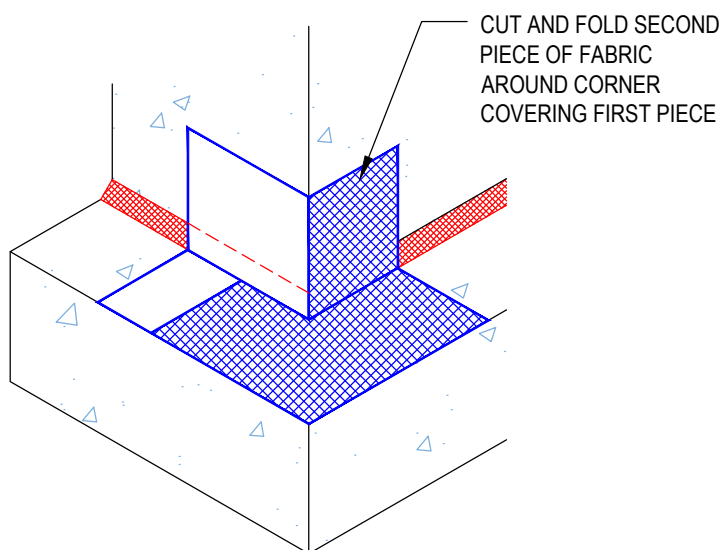

STEP 4

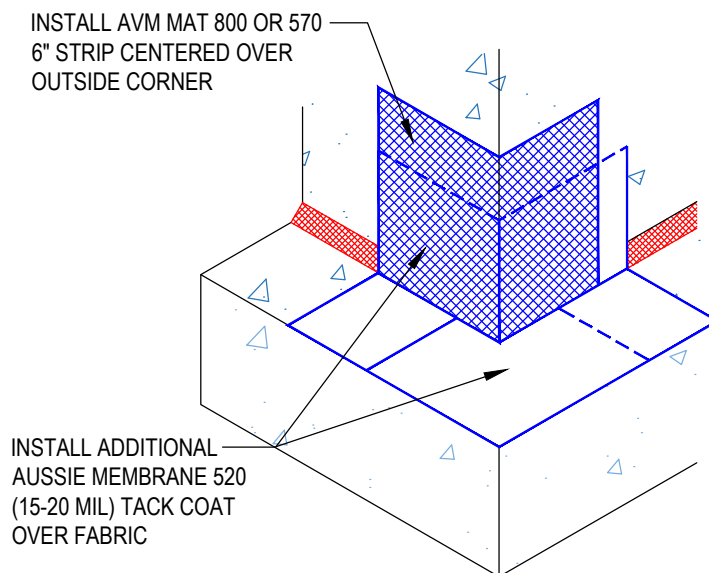

Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified


DETAIL #:
0520-7008
System:
Aussie Membrane 520

Inside Corner




AUSSIE MEMBRANE 520

STEP 1

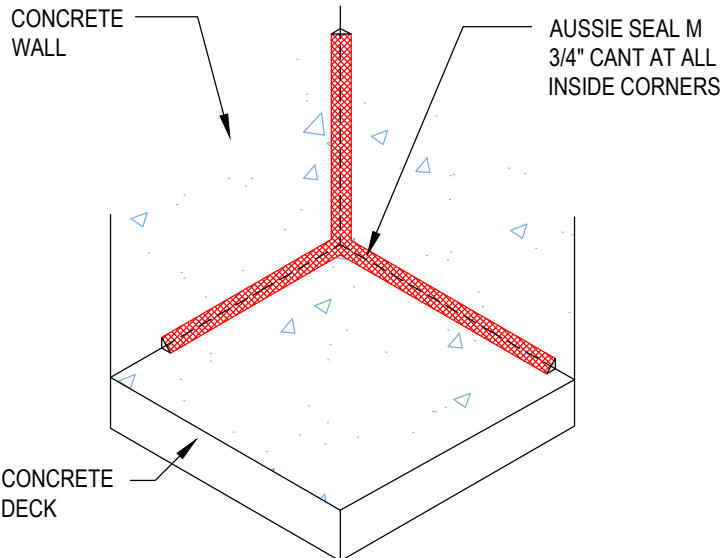


STEP 2

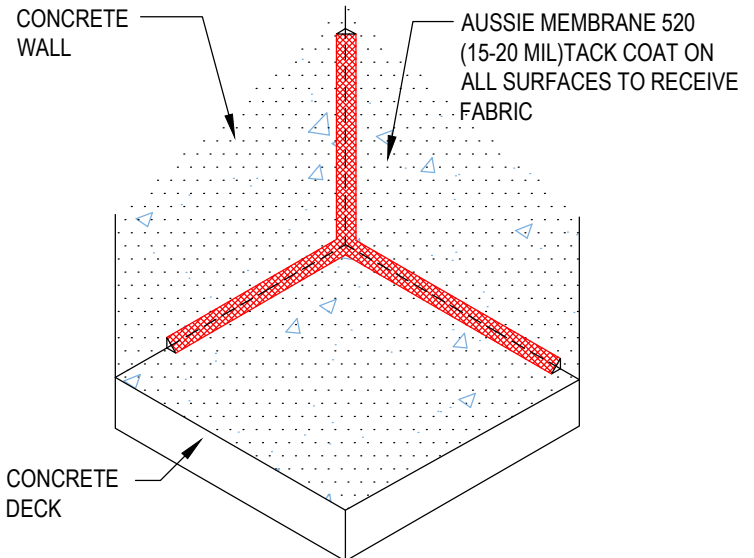

STEP 3


CUT AND FOLD 6" STRIP
OF AVM MAT 800 OR MAT
570 FABRIC AT INSIDE
CORNER

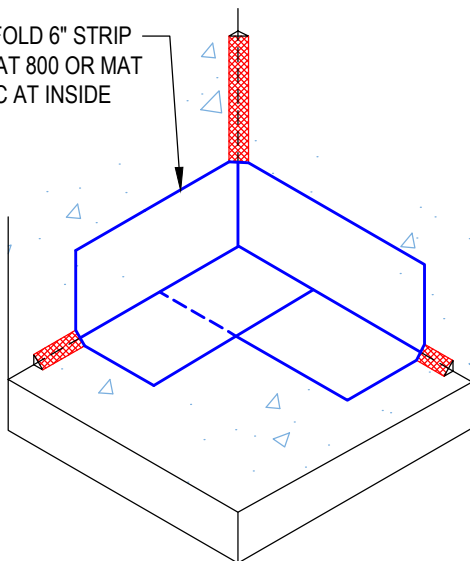

STEP 4

INSTALL 6" STRIP OF AVM
MAT 800 OR MAT 570
FABRIC AT VERTICAL
CORNER

INSTALL ADDITIONAL
AUSSIE MEMBRANE 520
(15-20 MIL) TACK COAT
OVER FABRIC

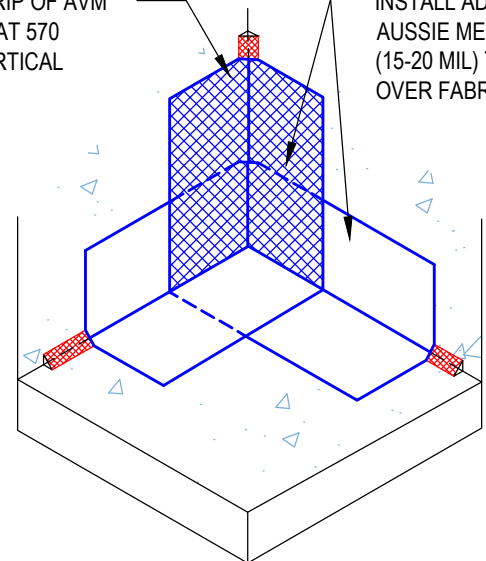


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-8000
System:
Aussie Membrane 520

Transition to Aussie Skin

AUSSIE MEMBRANE 520 120 Mil Reinforced System

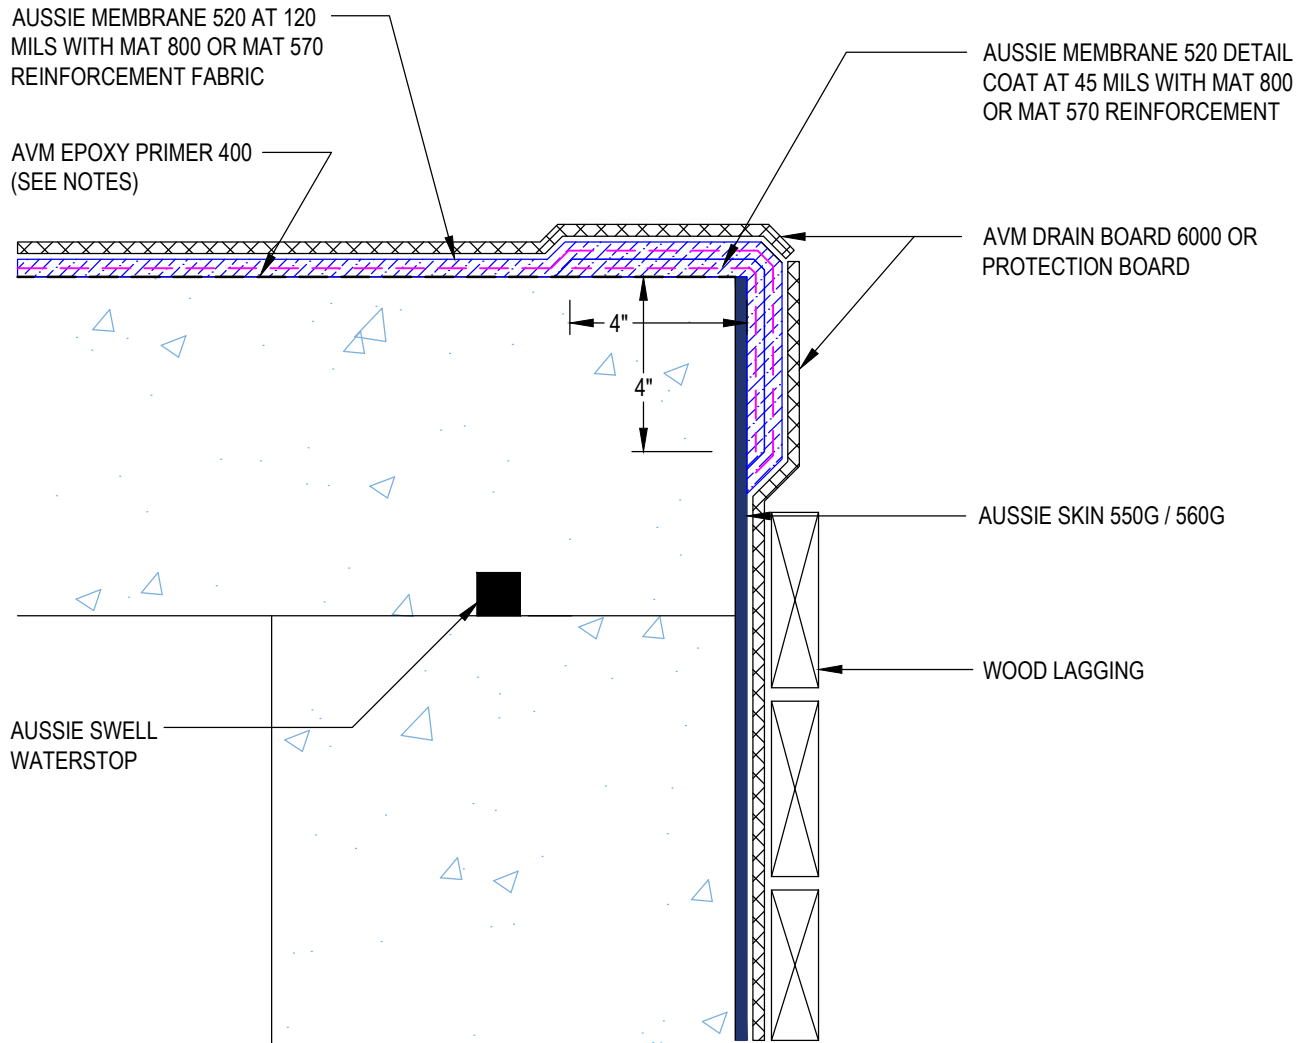


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-8001
System:
Aussie Membrane 520

Transition to Aussie Skin

AUSSIE MEMBRANE 520 90 Mil Unreinforced System

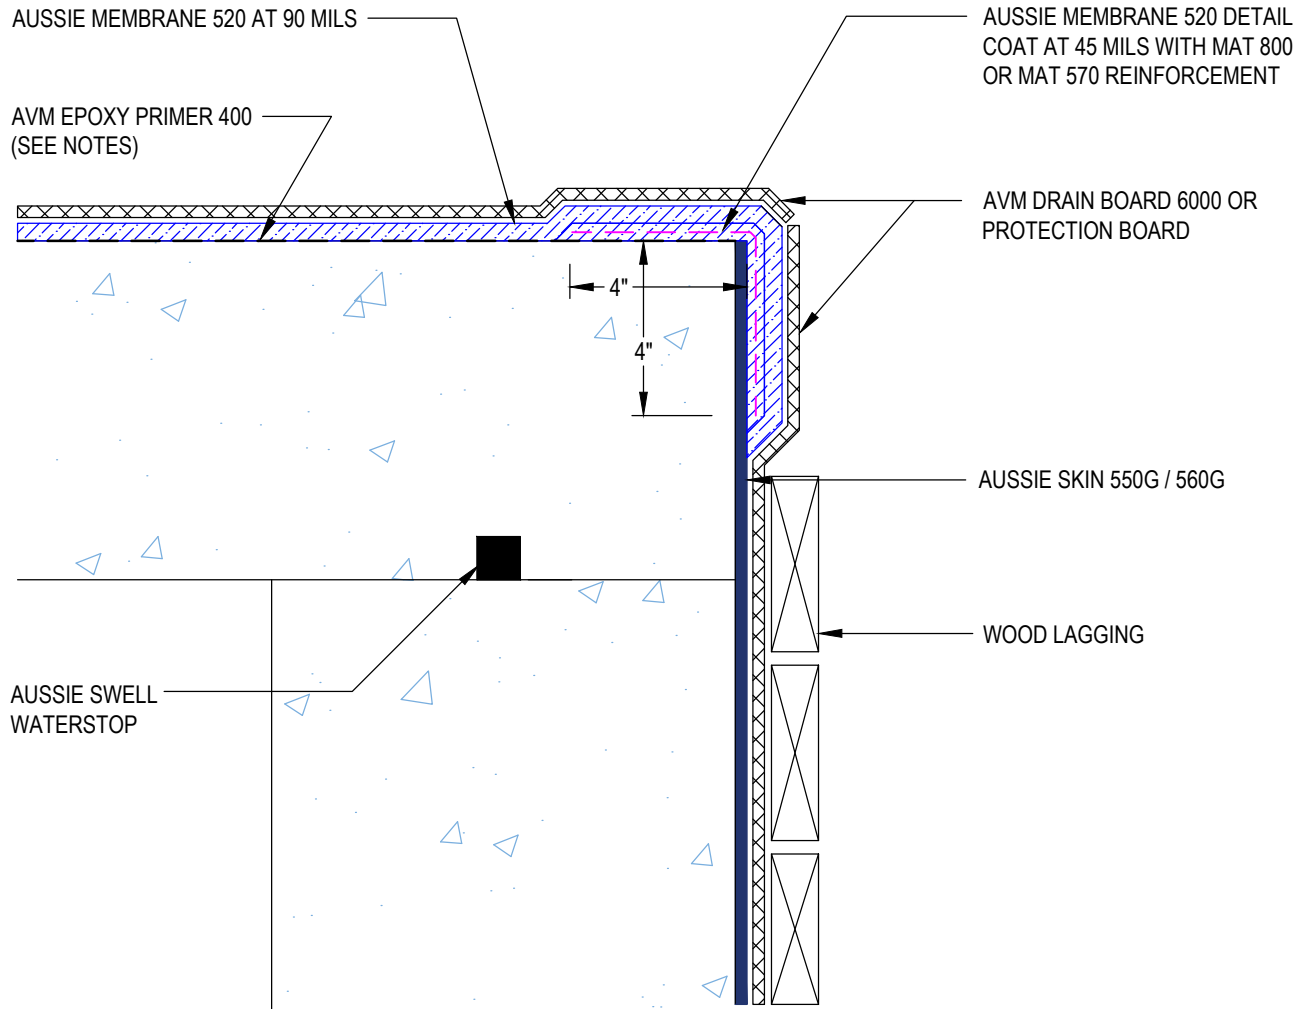


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-8002
System:
Aussie Membrane 520

Transition to Aussie Skin Dual Layer System

AUSSIE MEMBRANE 520
120 Mil Reinforced System

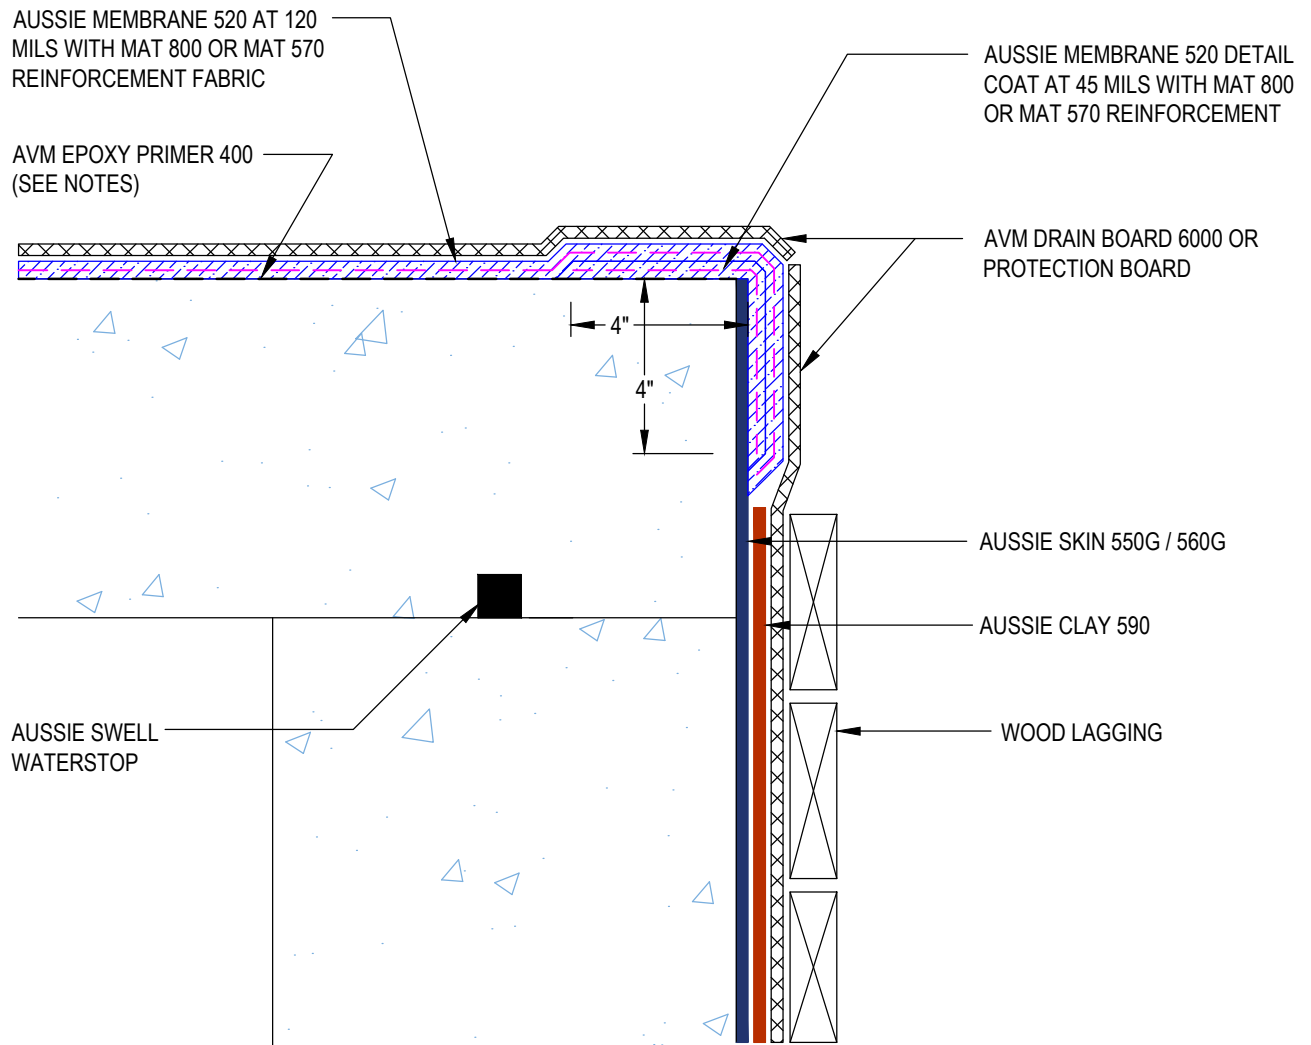


Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified

DETAIL #:
0520-8003
System:
Aussie Membrane 520

Transition to Aussie Skin Dual Layer System

AUSSIE MEMBRANE 520
90 Mil Unreinforced System

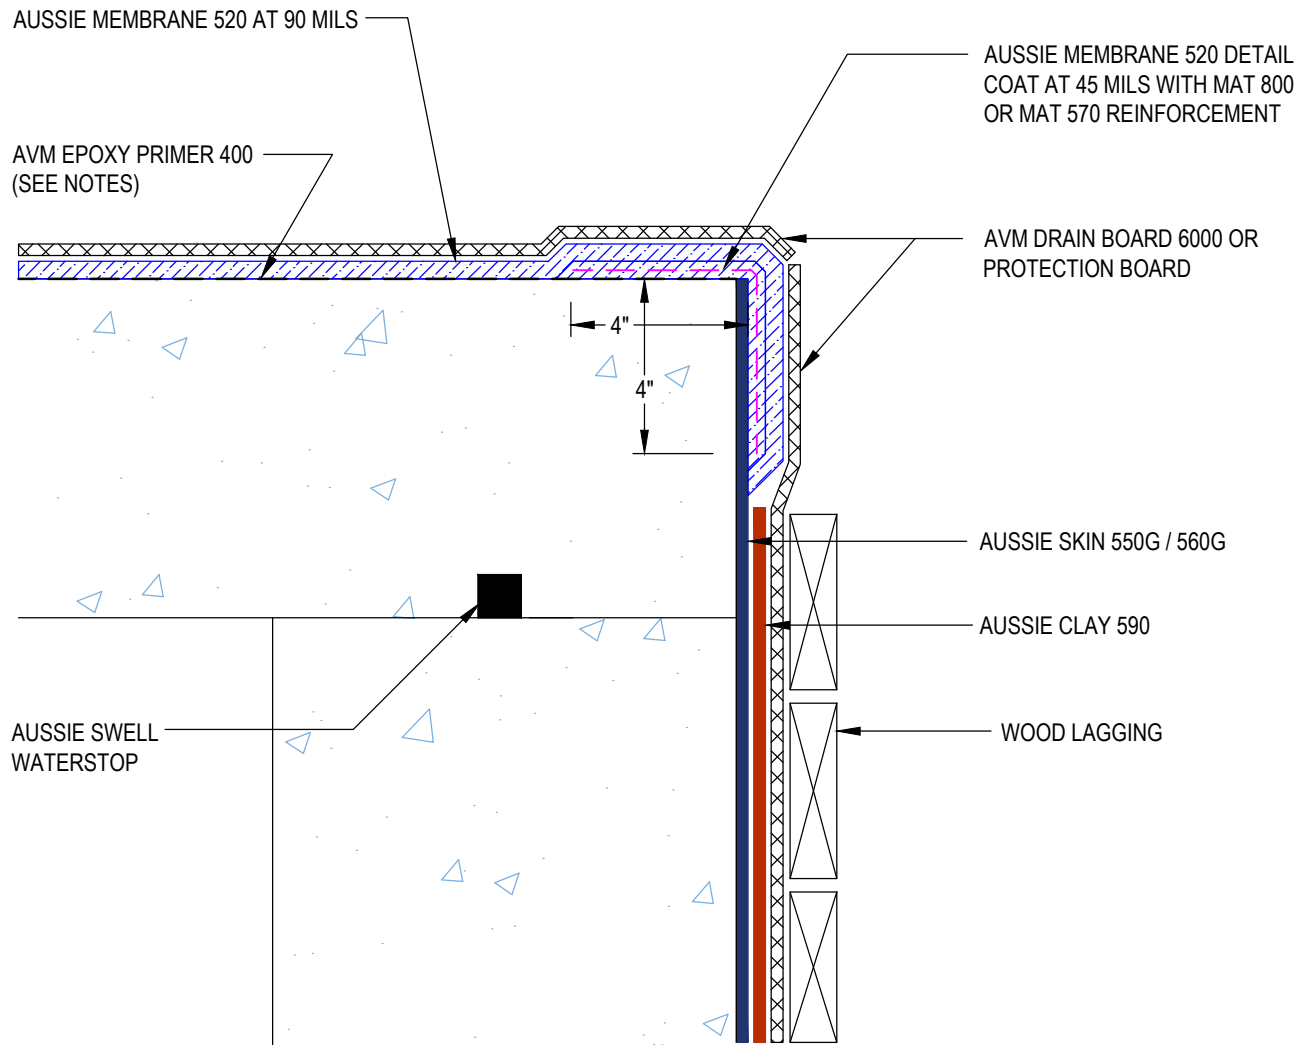

Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified