


DETAIL #:  
**0520-7008**  
 System:  
**Aussie Membrane 520**

# Inside Corner




## AUSSIE MEMBRANE 520


### STEP 1

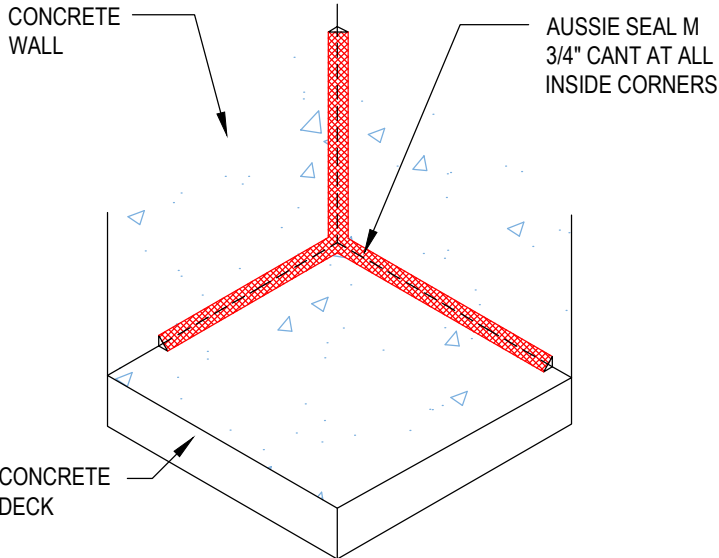


### STEP 2

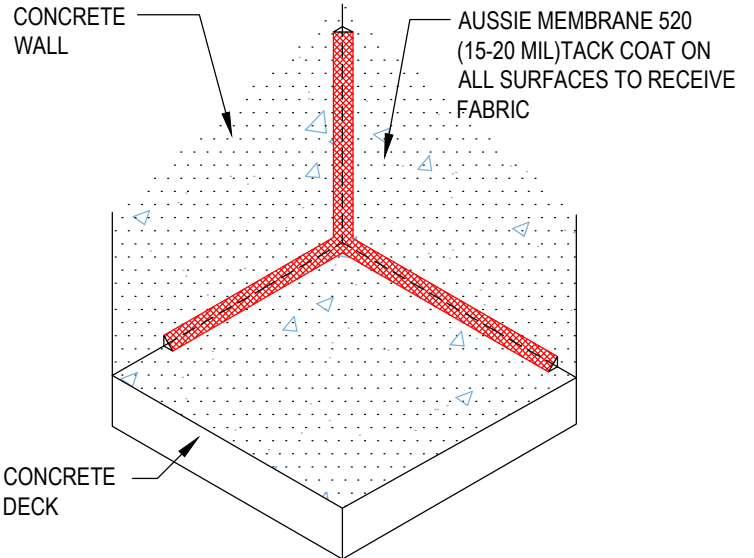

### STEP 3

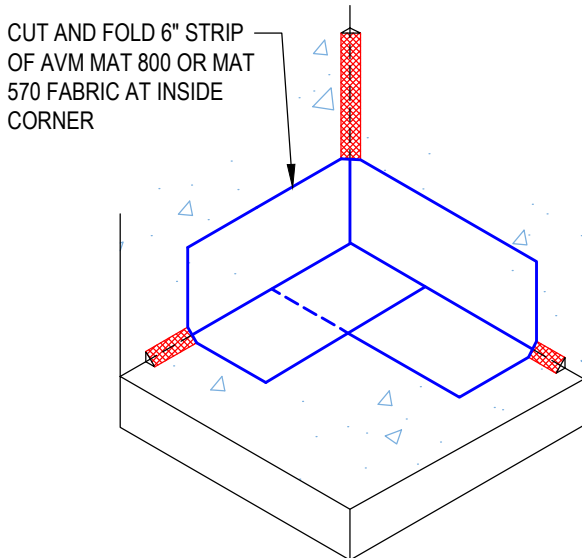

### STEP 4

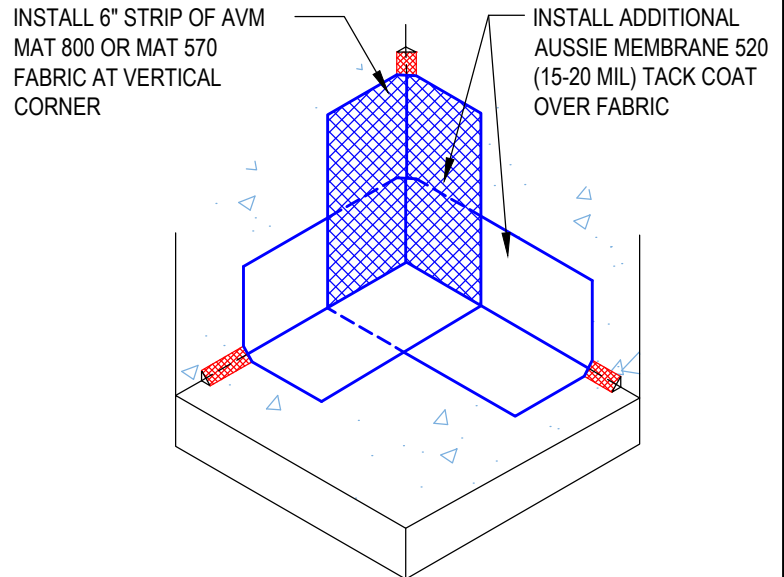

#### Notes:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
3. Contact AVM if no drain board or protection board is specified