
Metal Tie-Back Cover Single Layer System

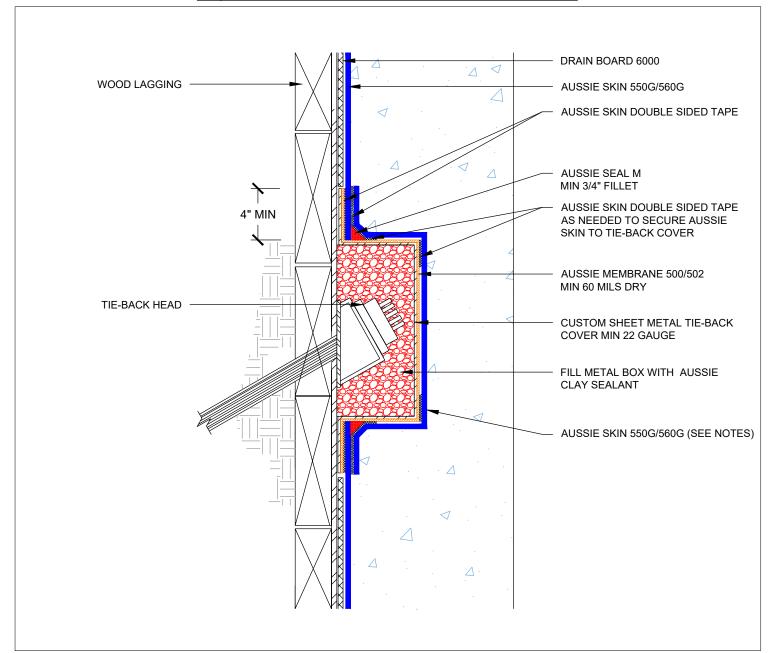

Only Use if AVM's Standard Tie-Back Cover Cannot be Used



Notes:

- 1. Relief cuts may be needed to form Aussie Skin around tie-back cover. All relief cuts should be covered with Sanded Tape.
- 2. All nails, screws etc used to hang the Aussie Skin above the water table must be non-rusting and sealed with AVM approved Sealant.