


DETAIL #:
0100-EFD-162-P-CS
AVM System 100
Elasto Fiberdeck

Drain Assembly Over Concrete Substrate AVM System 100 Elasto Fiberdeck

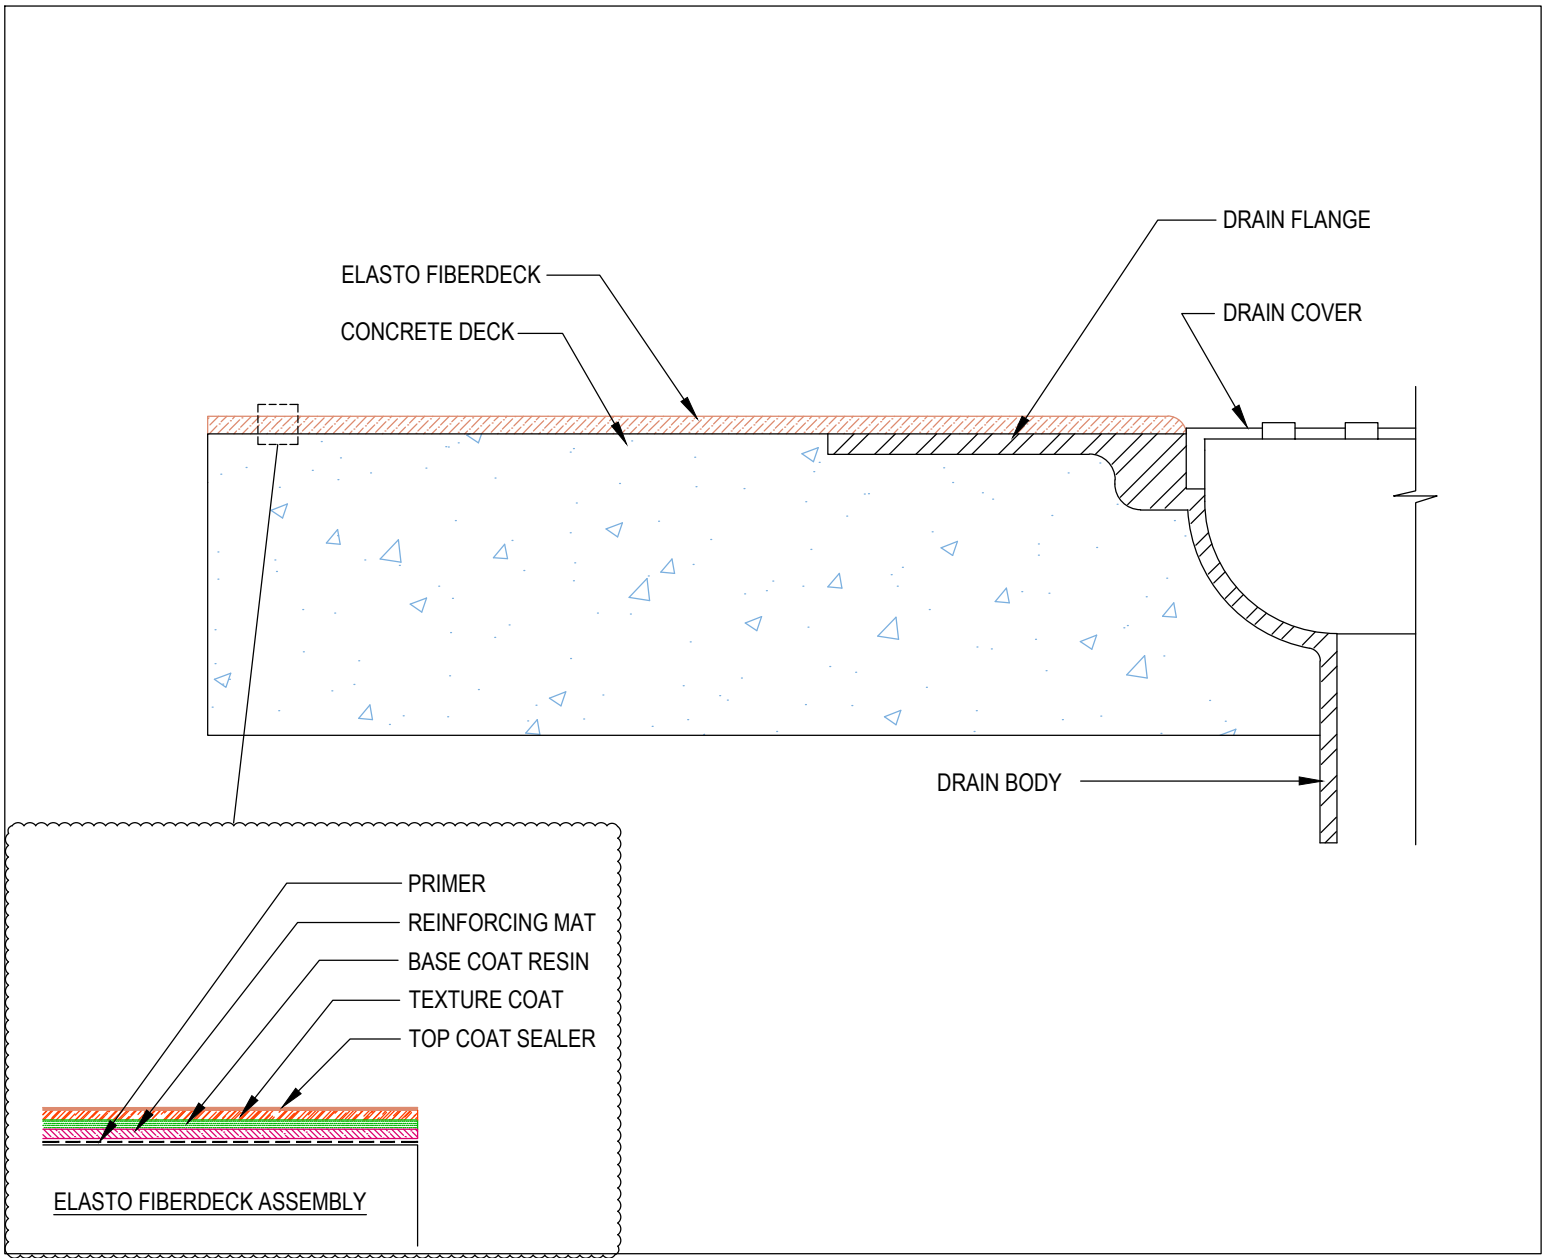

Notes:

- 1. Remove paint/primer from metal bowl to allow membrane to bond to raw metal
- 2. Ensure drain sits low enough and that there is sufficient slope to properly drain the water