


DETAIL #:
0100-FEC-162-P-CS
AVM System 100
Forevercoat

Drain Assembly Over Concrete Substrate AVM System 100 Forevercoat

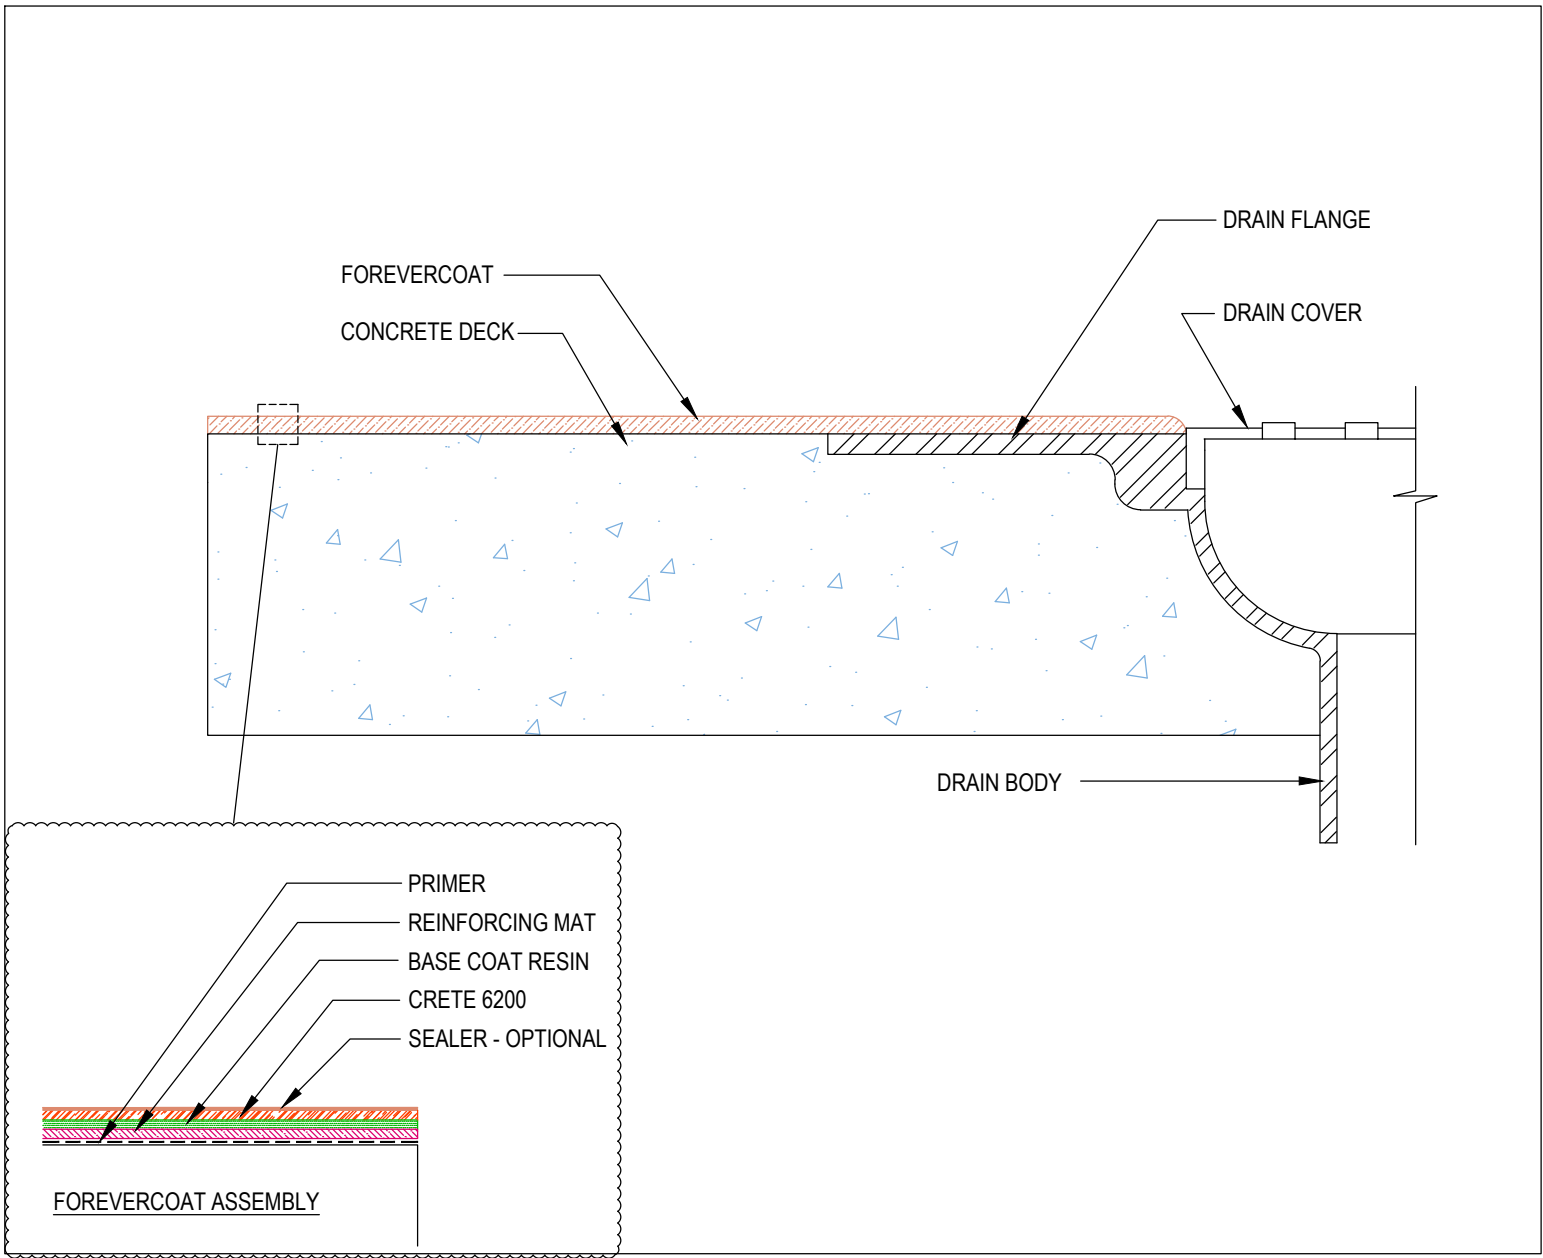

Notes:

- 1. Remove paint/primer from metal bowl to allow membrane to bond to raw metal
- 2. Ensure drain sits low enough and that there is sufficient slope to properly drain the water