
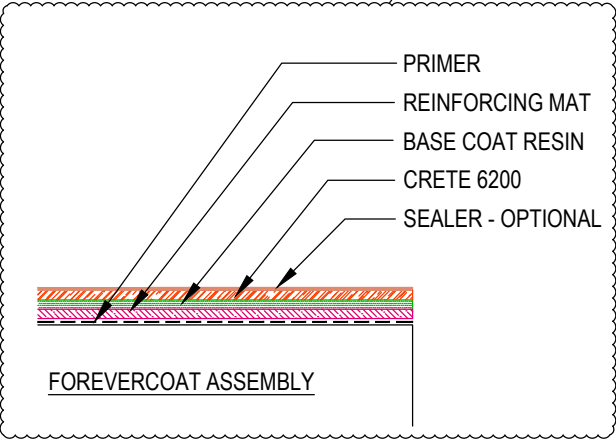


DETAIL #:
 0100-FEC-502-P-CS
 AVM System 100
 Forevercoat

Assembly Over Plywood Substrate

AVM System 100 Forevercoat

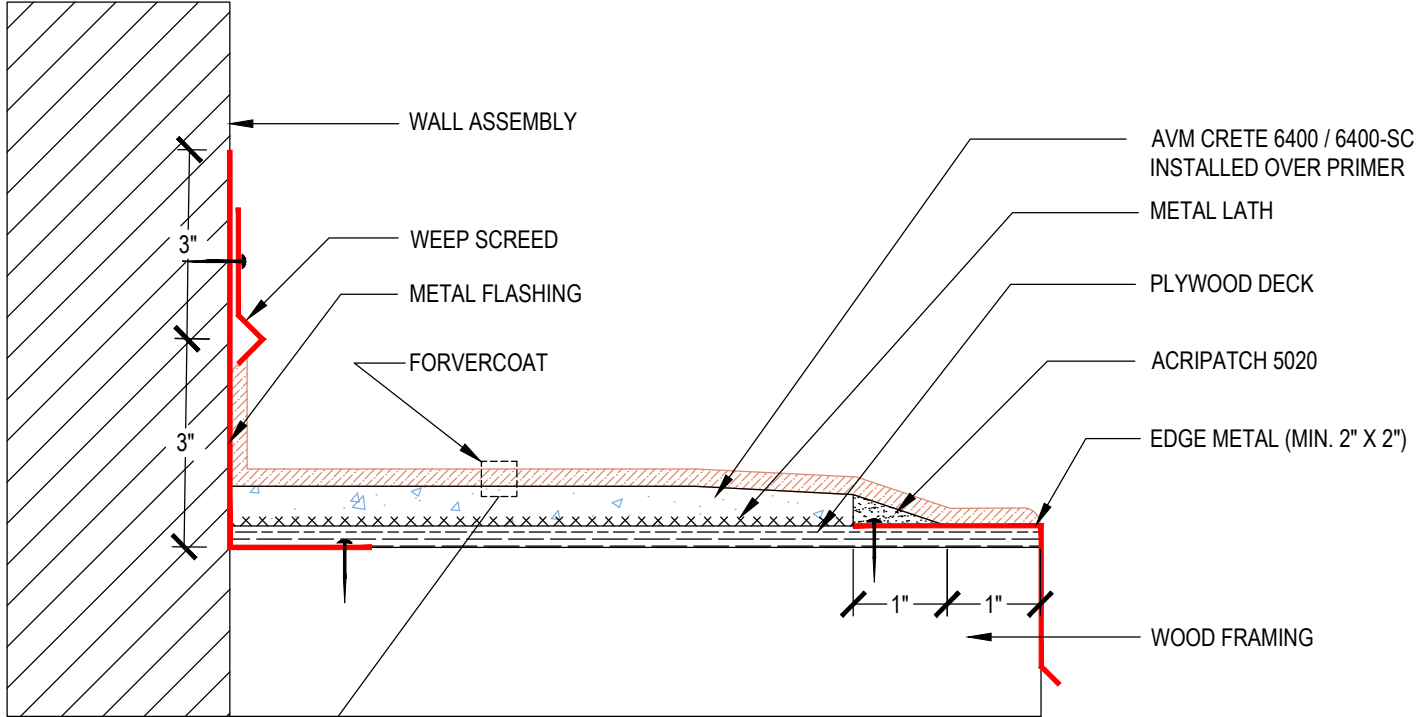

Notes:

1. Extend membrane, texture, and topcoat to edge of sheet metal flashing
2. Membrane to be bonded to sheet metal edge
3. Terminate Acripatch 1" from edge