




DETAIL #:
0100-FEC-001-C-ISO
AVM System 100
Forevercoat

Standard Assembly Over Concrete Substrate AVM System 100 Forevercoat

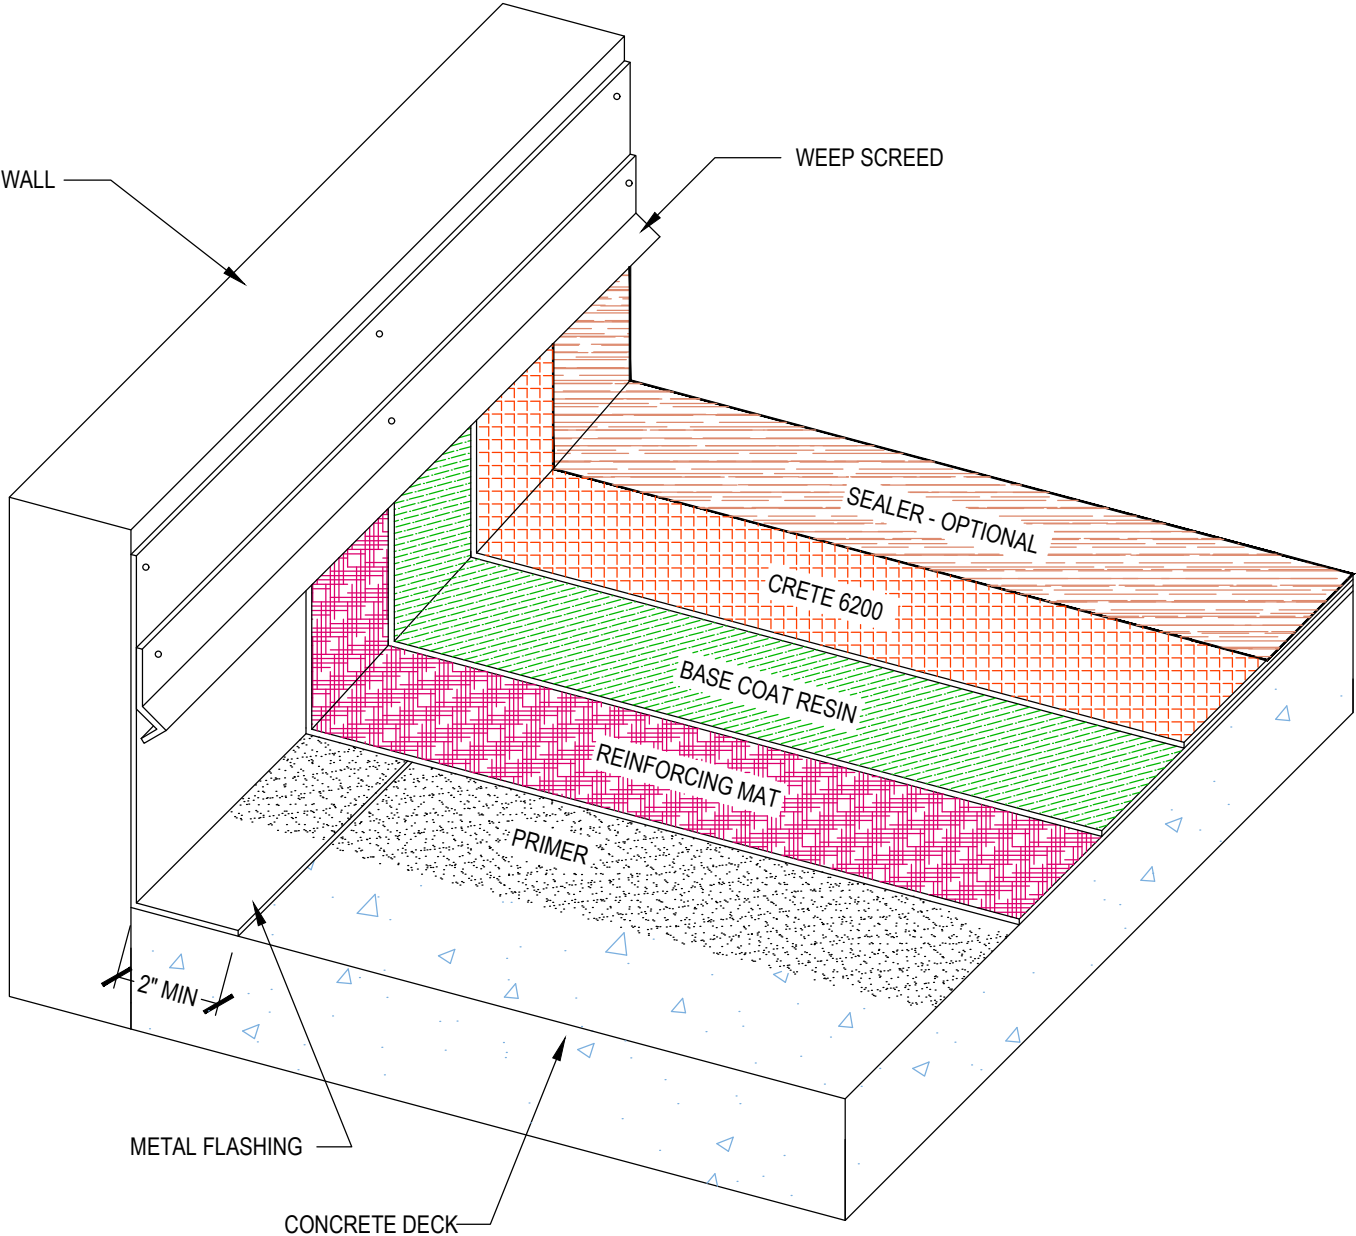

DETAIL #:
0100-FEC-002-C-CS
AVM System 100
Forevercoat

Standard Assembly
Over Concrete Substrate
AVM System 100 Forevercoat

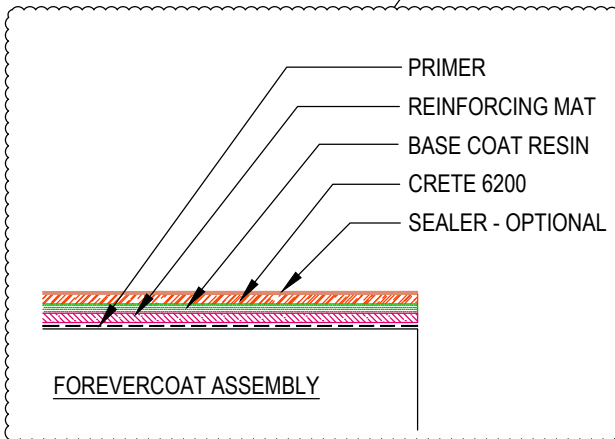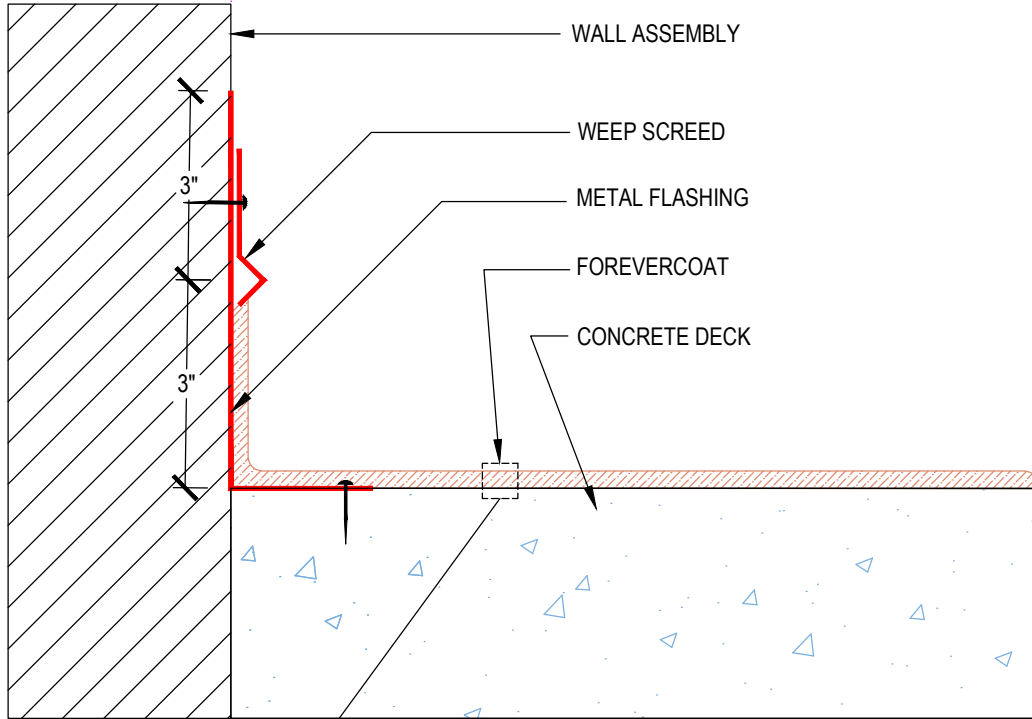



Notes:

1. Edge metals at deck edge of concrete decks is not required
2. Extend deck coating layers (primer, membrane, texture, and sealer) to the slab edge
3. If edge metals are installed on slab edges, contact AVM for details

DETAIL #:
0100-FEC-142-P-CS
AVM System 100
Forevercoat

Threshold Over Concrete Substrate

AVM System 100 Forevercoat

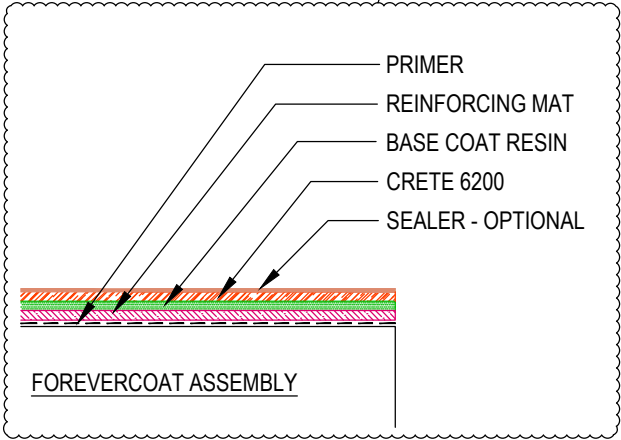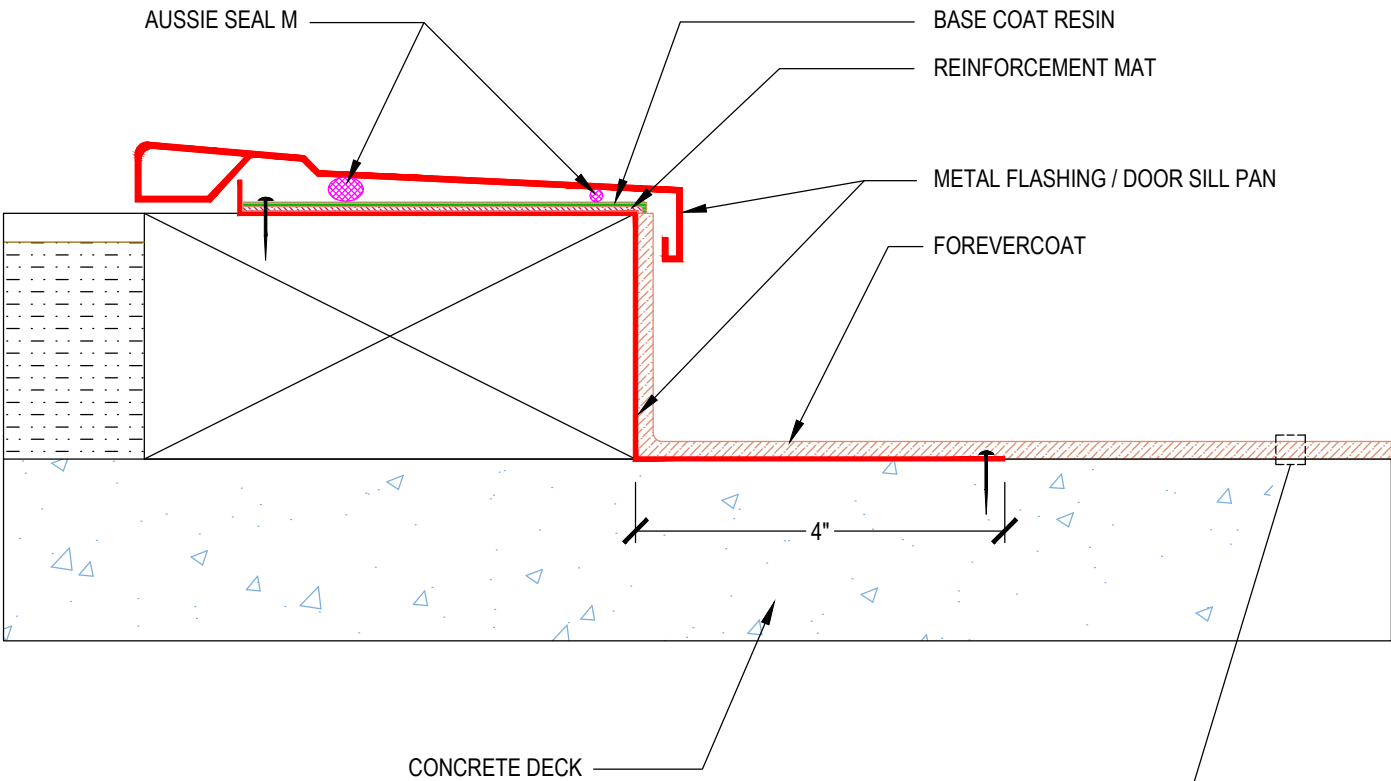

Notes:


1. Extend reinforcing mat and base coat resin to back edge of sheet metal flashing
2. Membrane to be bonded to sheet metal edge

DETAIL #:
0100-FEC-152-P-CS

AVM System 100

Forevercoat

ADA Compliant Sliding Door Over Plywood Substrate AVM System 100 Forevercoat

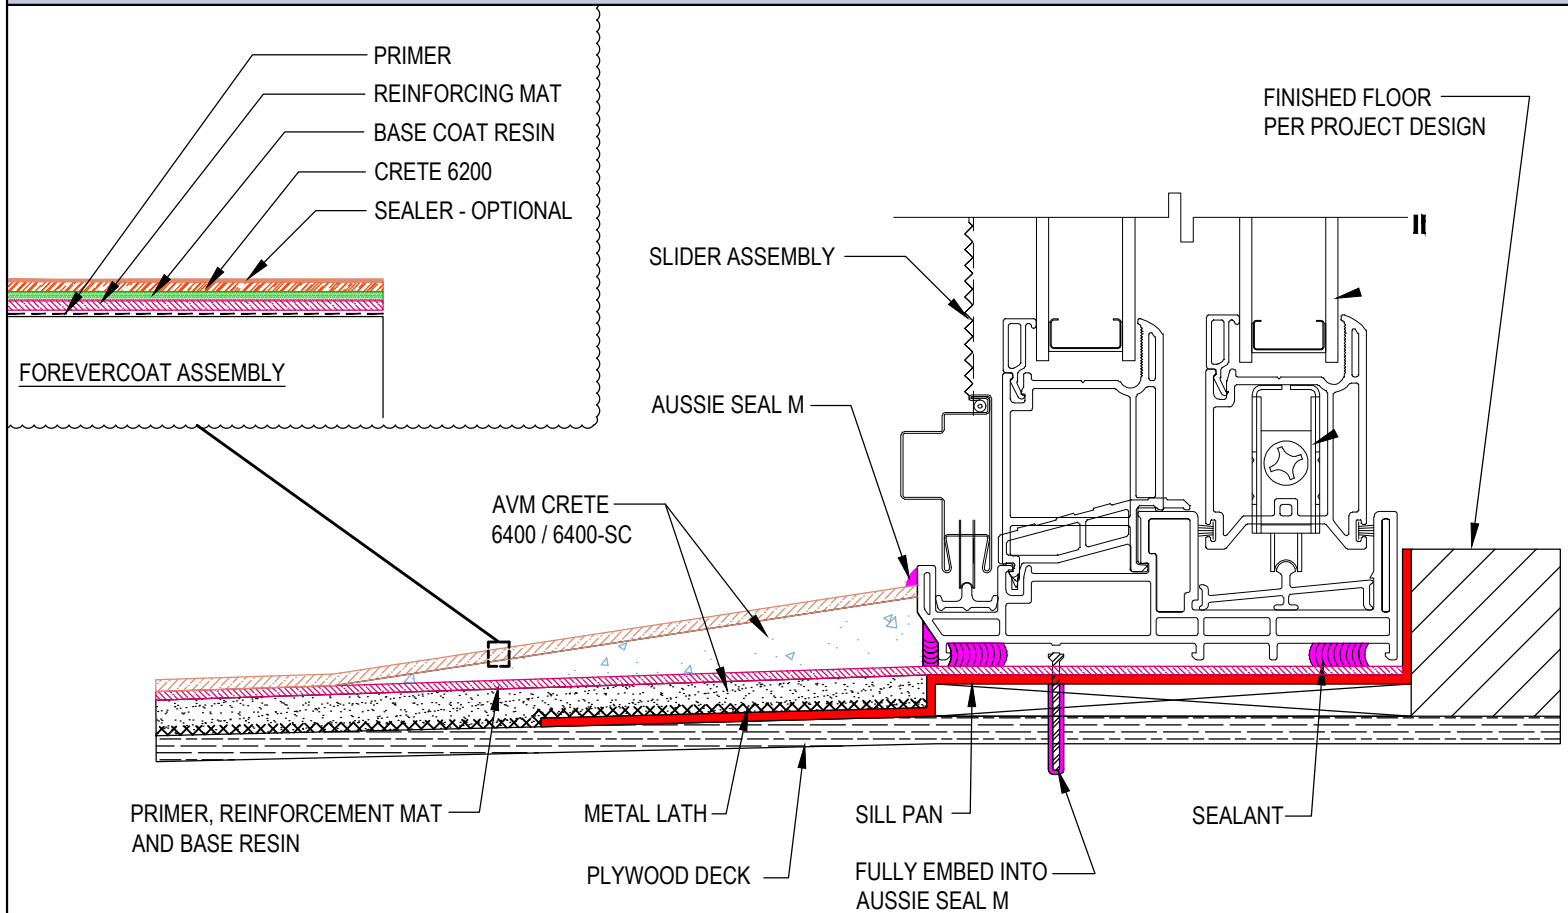


Notes:

1. To ensure proper drainage, do not block the pre-existing weep holes or other drainage openings of the door assembly
2. Ensure water exiting the weep holes drains away from the door

DETAIL #:
0100-FEC-154-P-CS
AVM System 100
Forevercoat

Typical Sliding Door Assembly Over Plywood Substrate - Option 1 AVM System 100 Forevercoat

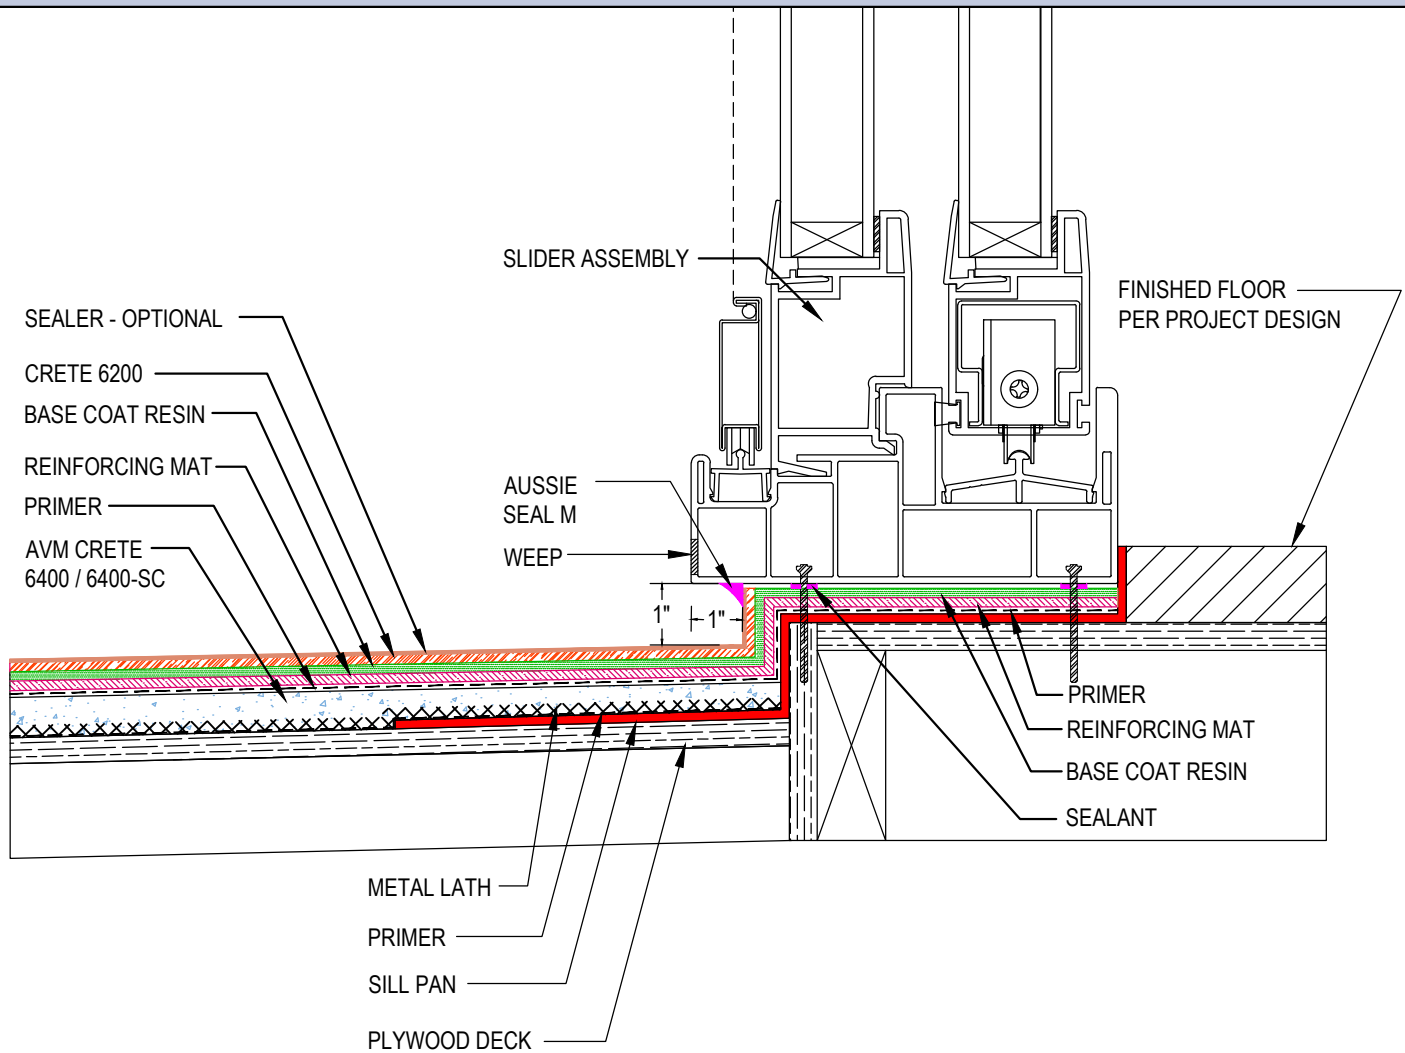


Notes:

1. To ensure proper drainage, do not block the pre-existing weep holes or other drainage openings of the door assembly
2. Ensure water exiting the weep holes drains away from the door

DETAIL #:
0100-FEC-156-P-CS
AVM System 100
Forevercoat

Typical Sliding Door Assembly Over Plywood Substrate - Option 2 AVM System 100 Forevercoat


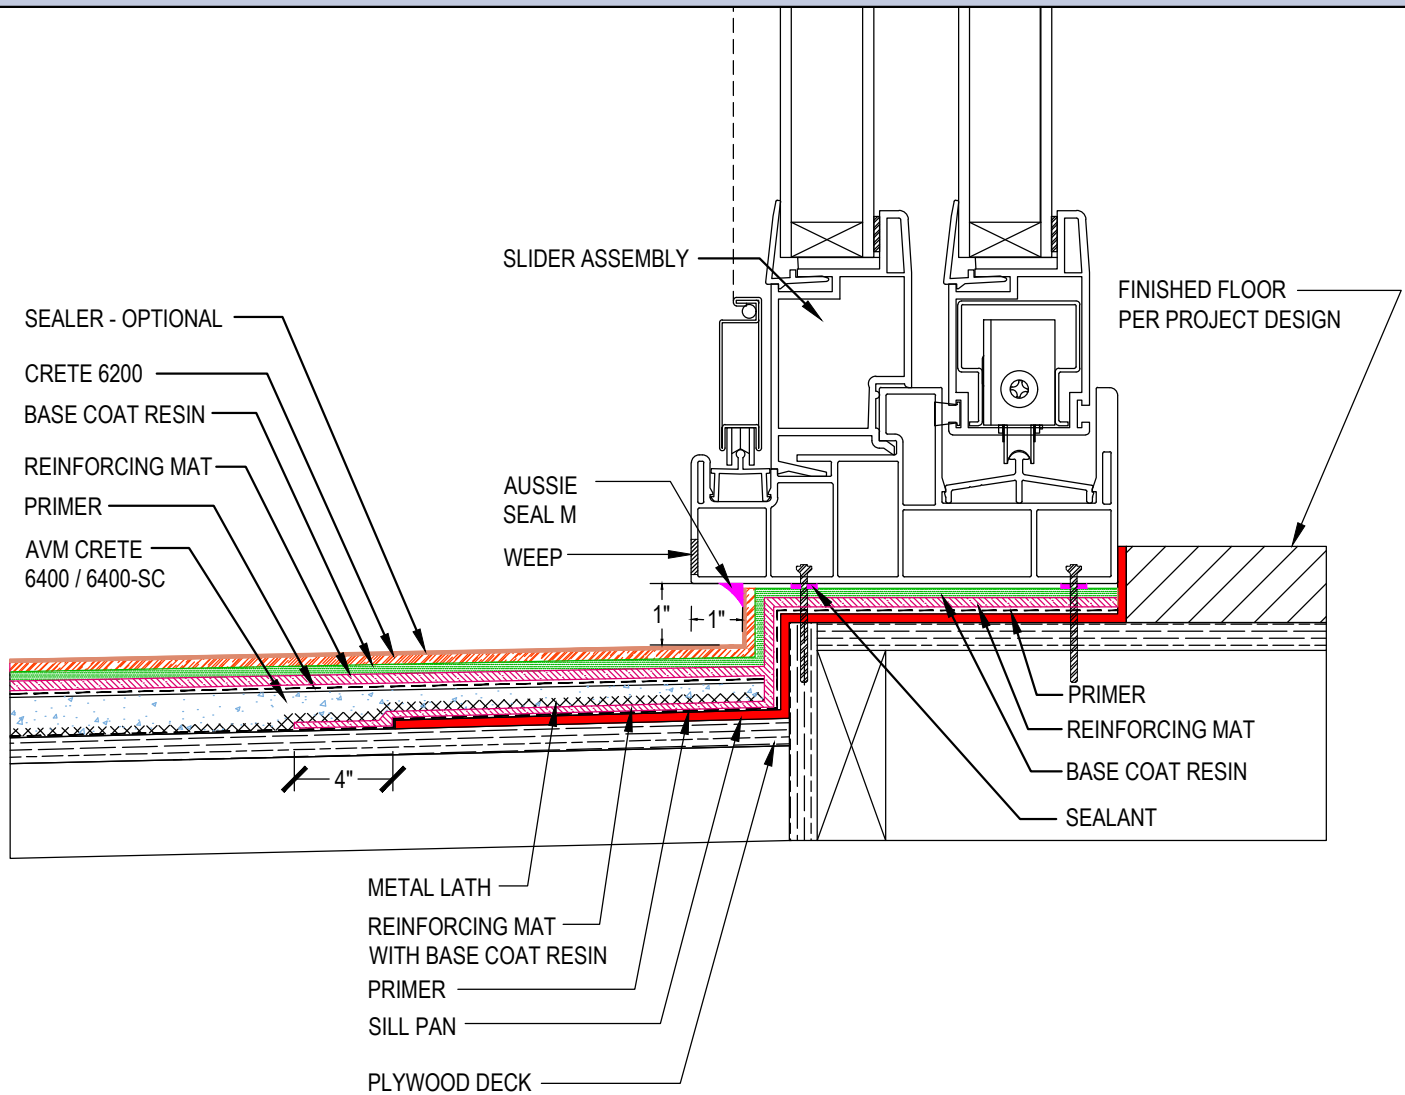


Notes:

1. To ensure proper drainage, do not block the pre-existing weep holes or other drainage openings of the door assembly
2. Ensure water exiting the weep holes drains away from the door

DETAIL #:
0100-FEC-162-P-CS
AVM System 100
Forevercoat

Drain Assembly Over Concrete Substrate AVM System 100 Forevercoat

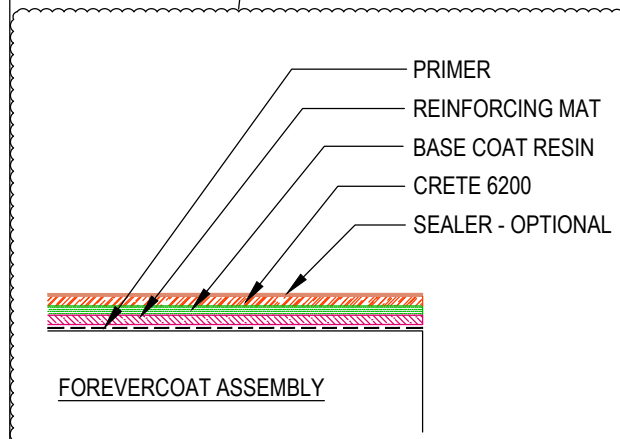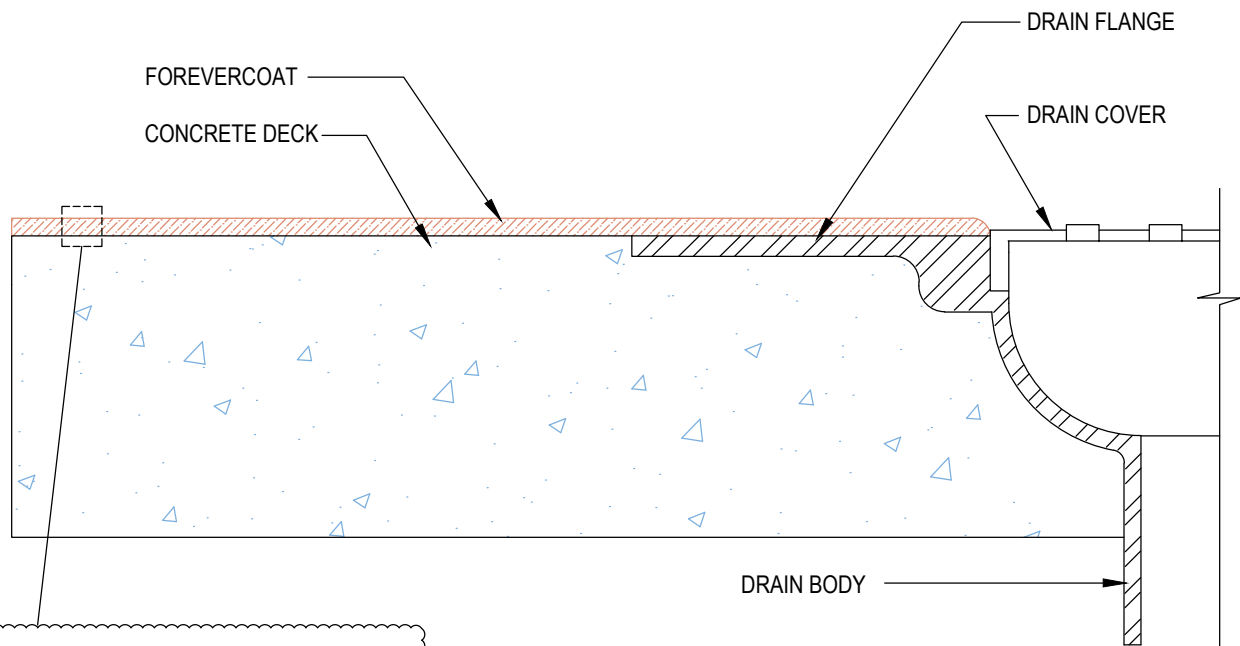


Notes:

1. Remove paint/primer from metal bowl to allow membrane to bond to raw metal
2. Ensure drain sits low enough and that there is sufficient slope to properly drain the water

DETAIL #:
0100-FEC-462-P-CS
AVM System 100
Forevercoat

Assembly Over Concrete Curb


AVM System 100 Forevercoat

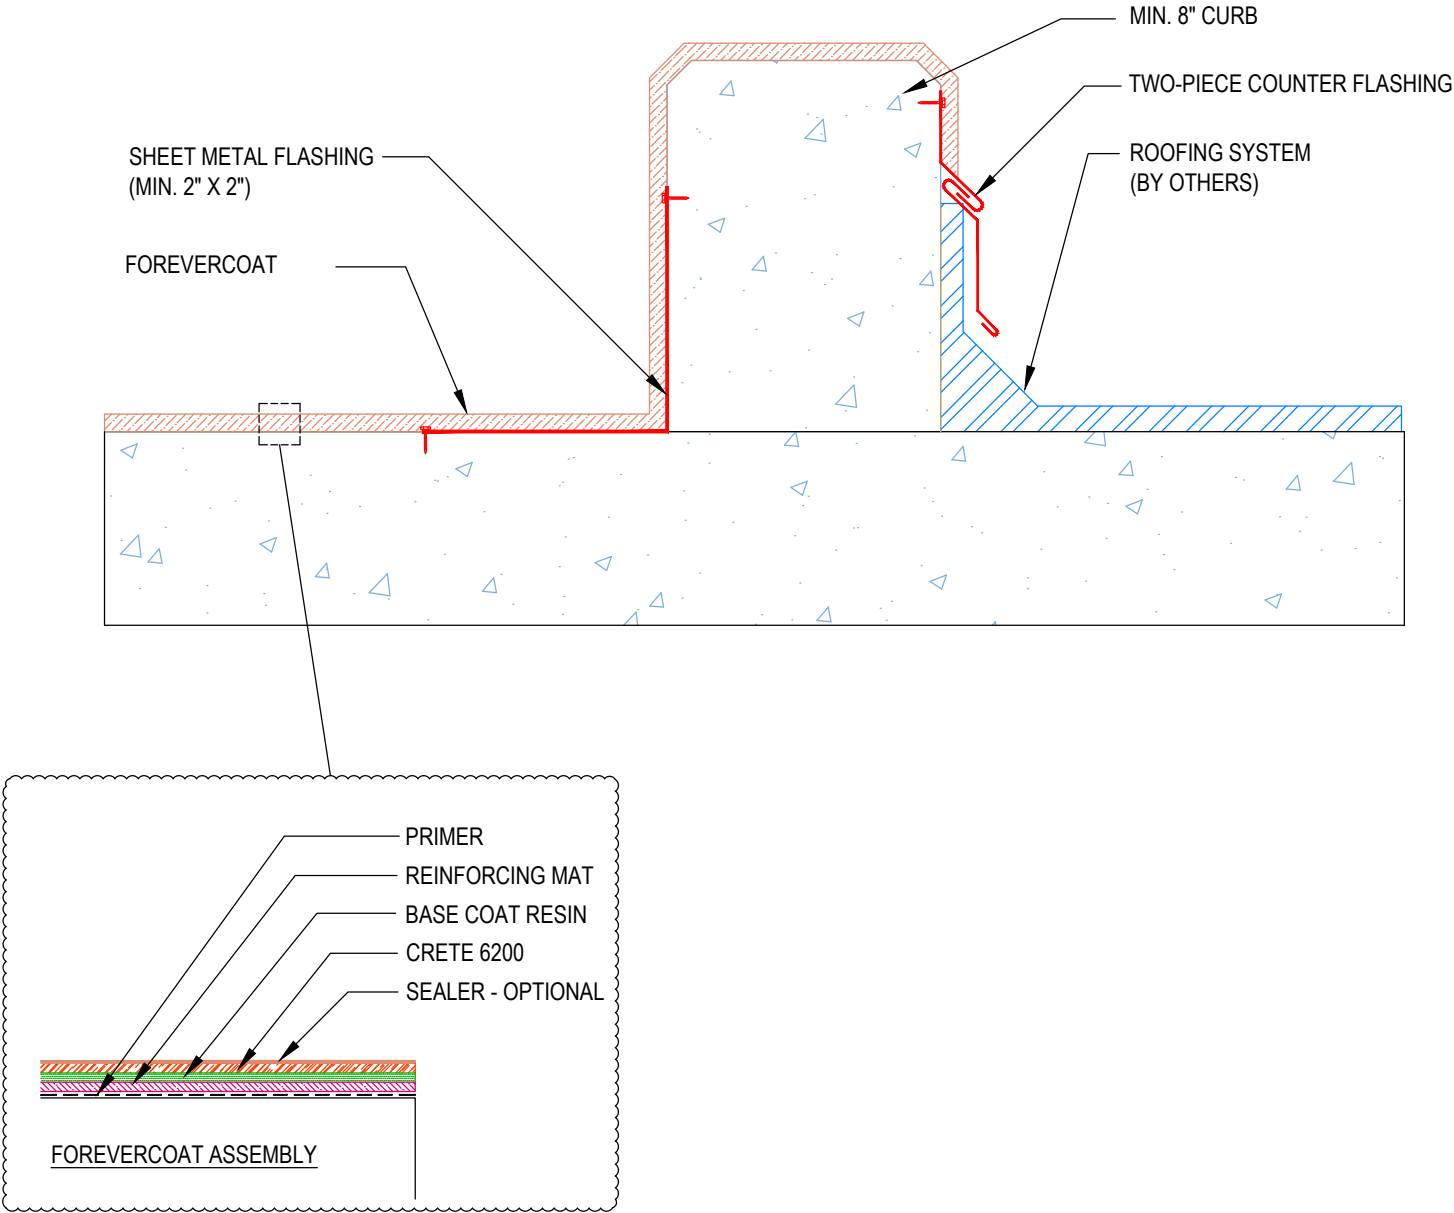

DETAIL #:
0100-FEC-501-P-ISO
AVM System 100
Forevercoat

Assembly Over Plywood Substrate



AVM System 100 Forevercoat

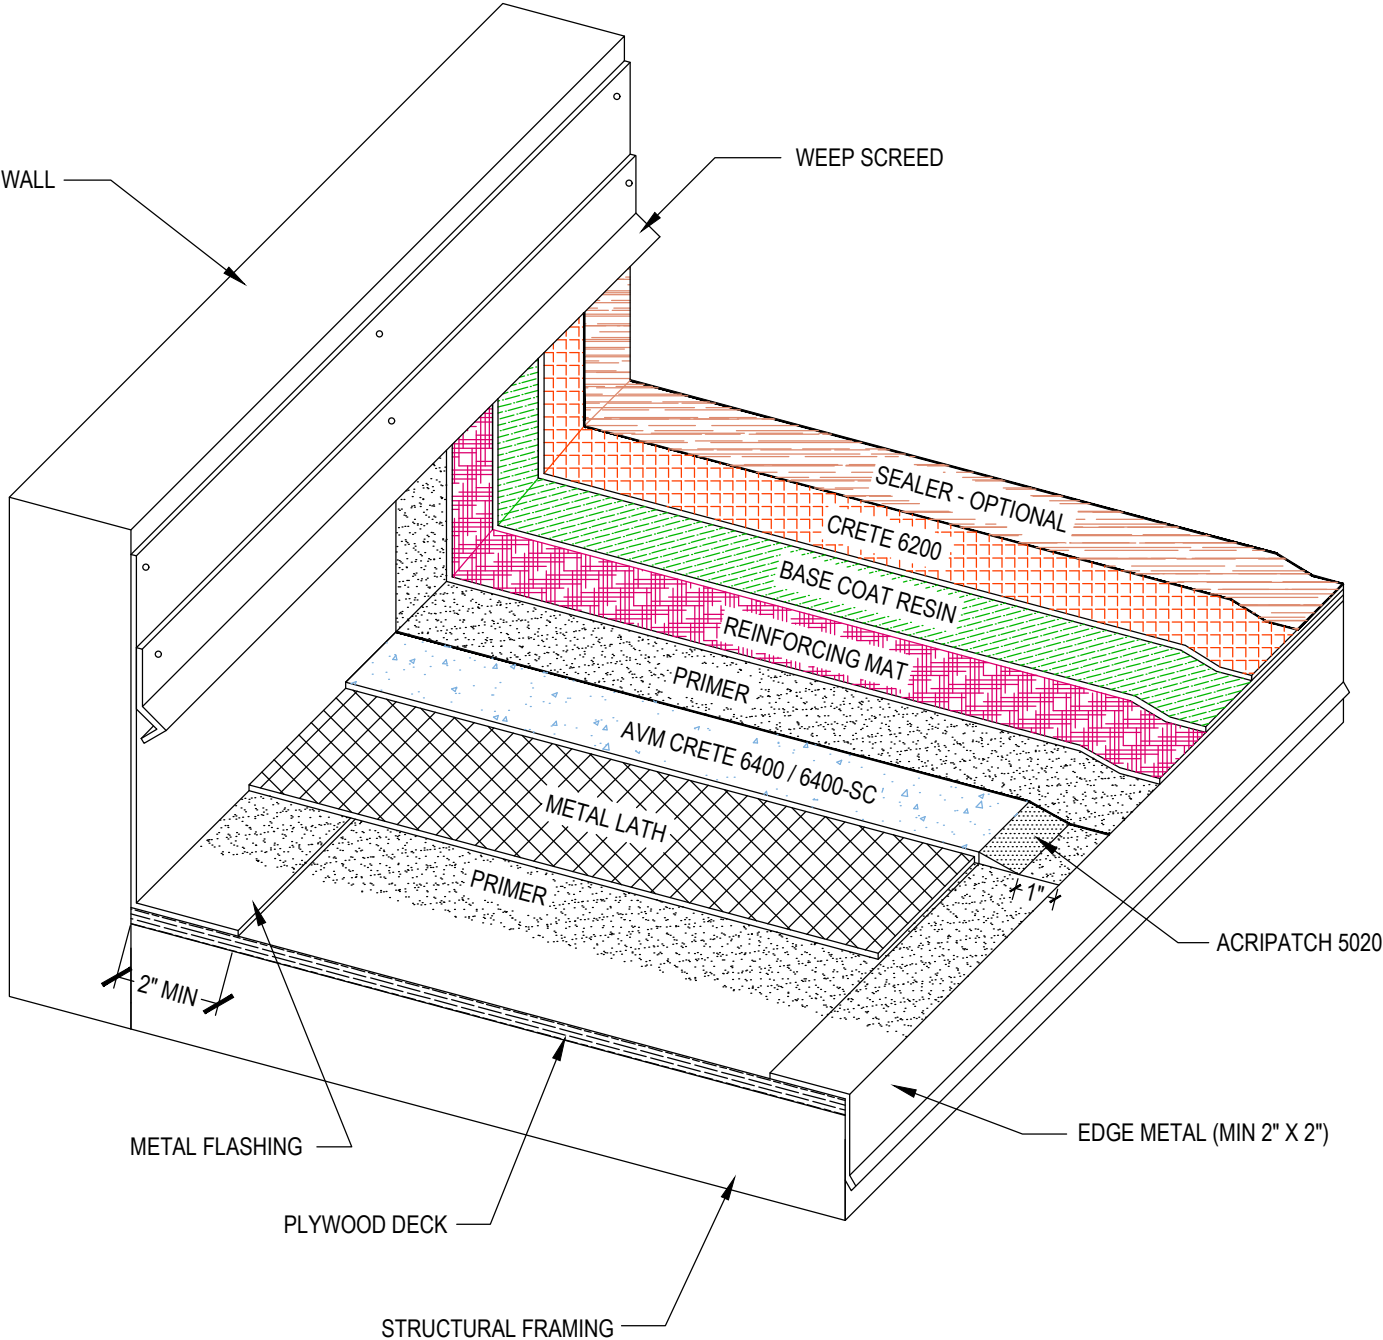

DETAIL #:
0100-FEC-502-P-CS
AVM System 100
Forevercoat

Assembly Over Plywood Substrate

AVM System 100 Forevercoat

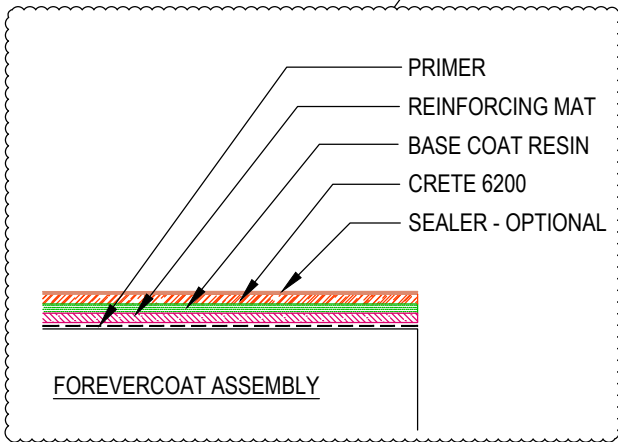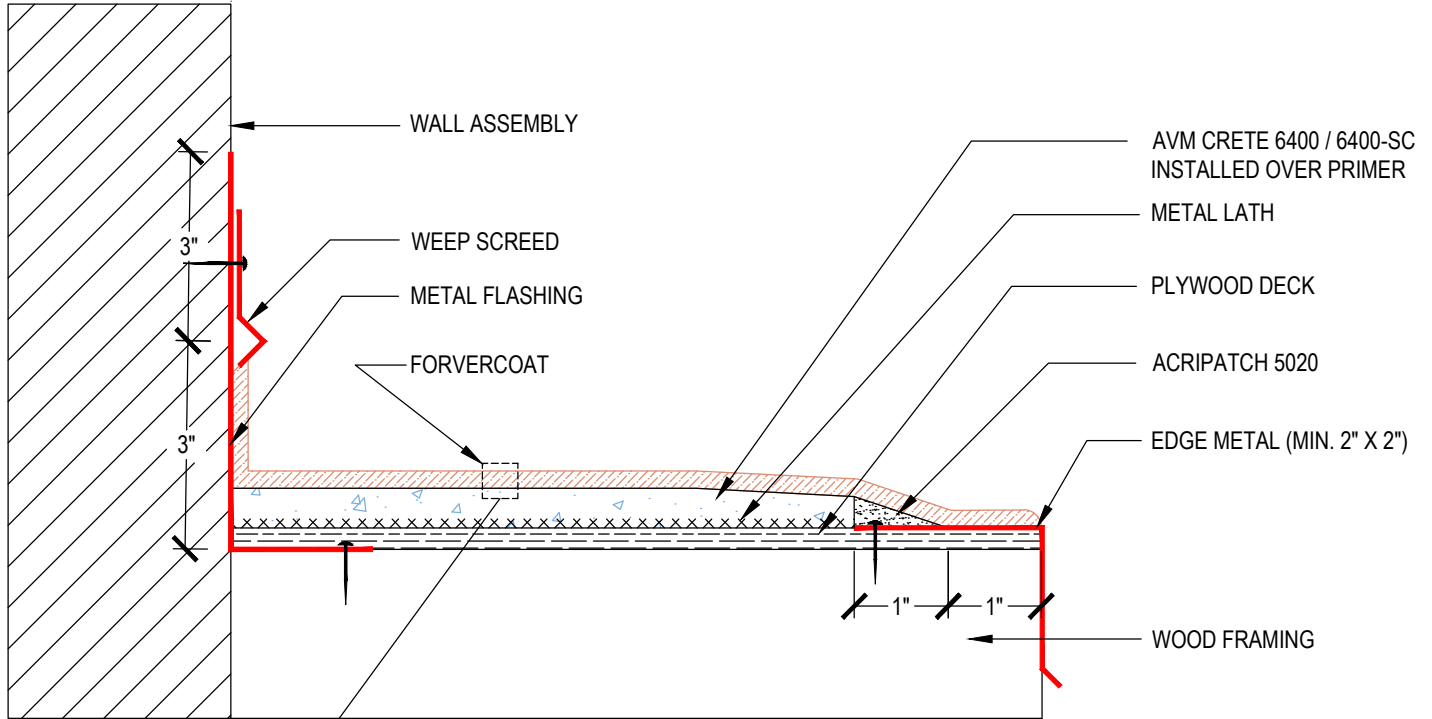


Notes:

1. Extend membrane, texture, and topcoat to edge of sheet metal flashing
2. Membrane to be bonded to sheet metal edge
3. Terminate Acripatch 1" from edge

DETAIL #:
0100-FEC-602-P-CS
AVM System 100
Forevercoat

Stairs Over Plywood Substrate AVM Crete on Tread & Riser AVM System 100 Forevercoat

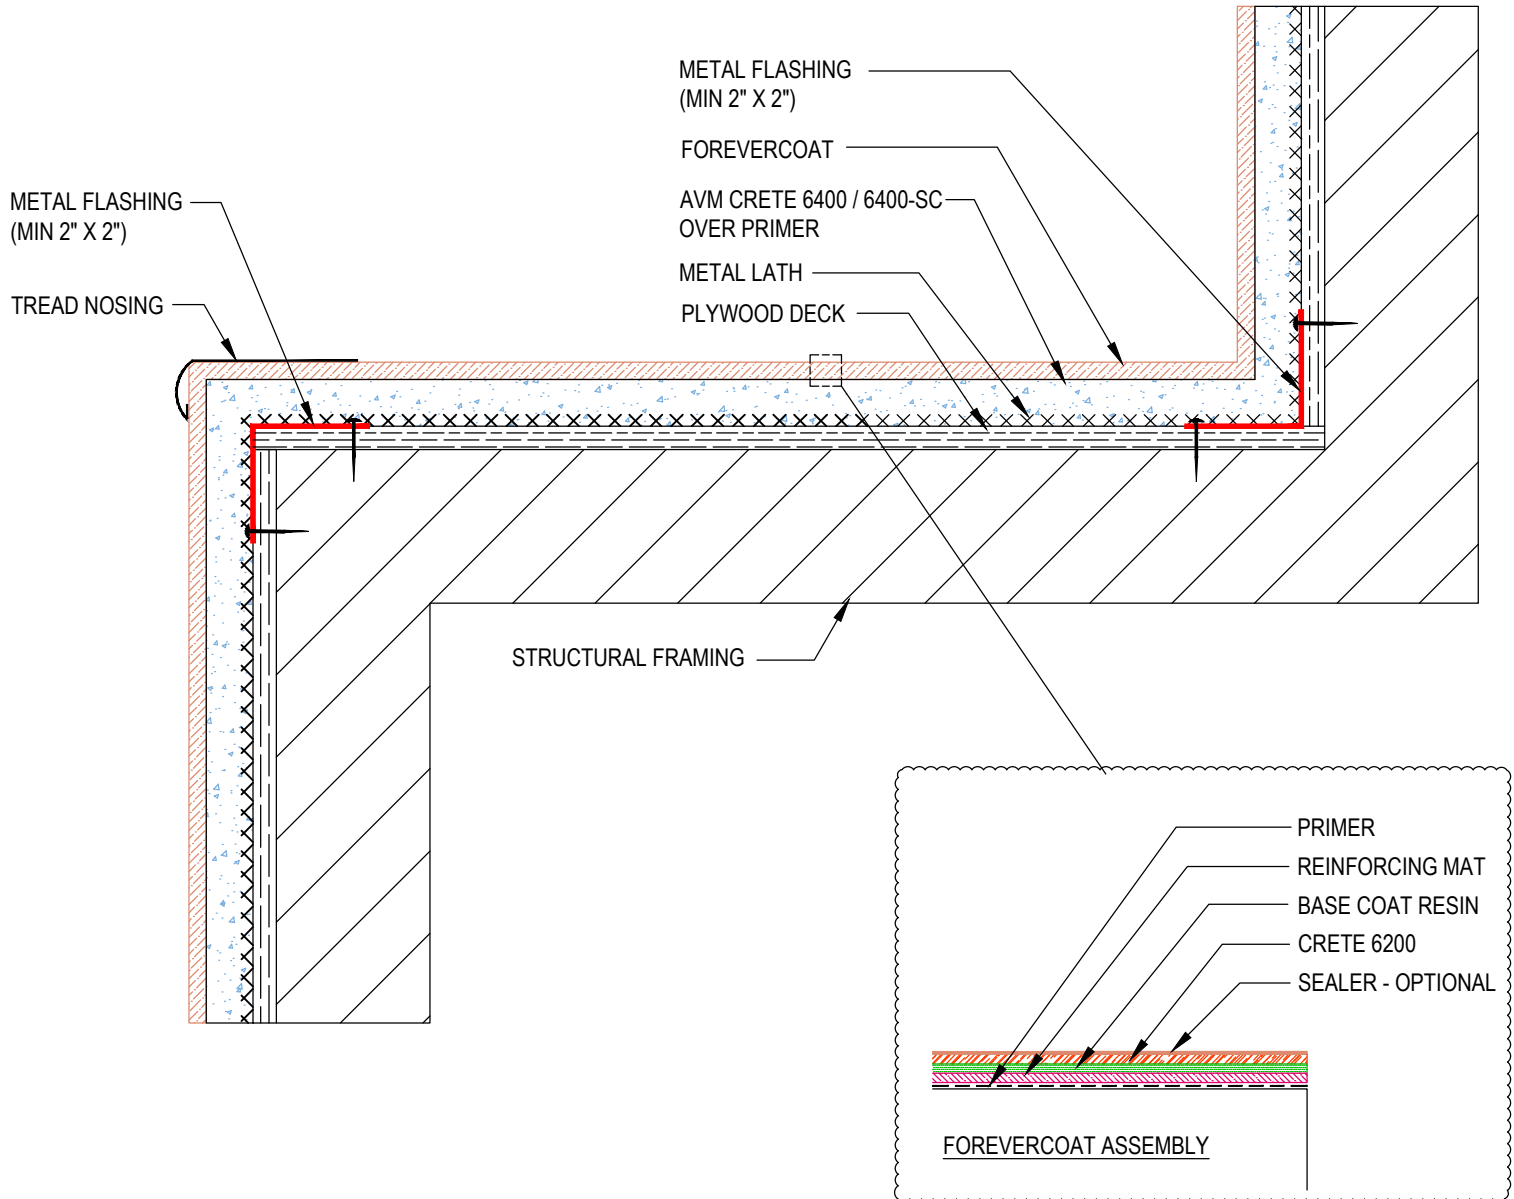


Notes:

1. For sheet metal installation please refer to detail # 0100-FEC-621-P-ISO

DETAIL #:
0100-FEC-604-P-CS
AVM System 100
Forevercoat

Stairs Over Plywood Substrate AVM Crete on Tread Only AVM System 100 Forevercoat

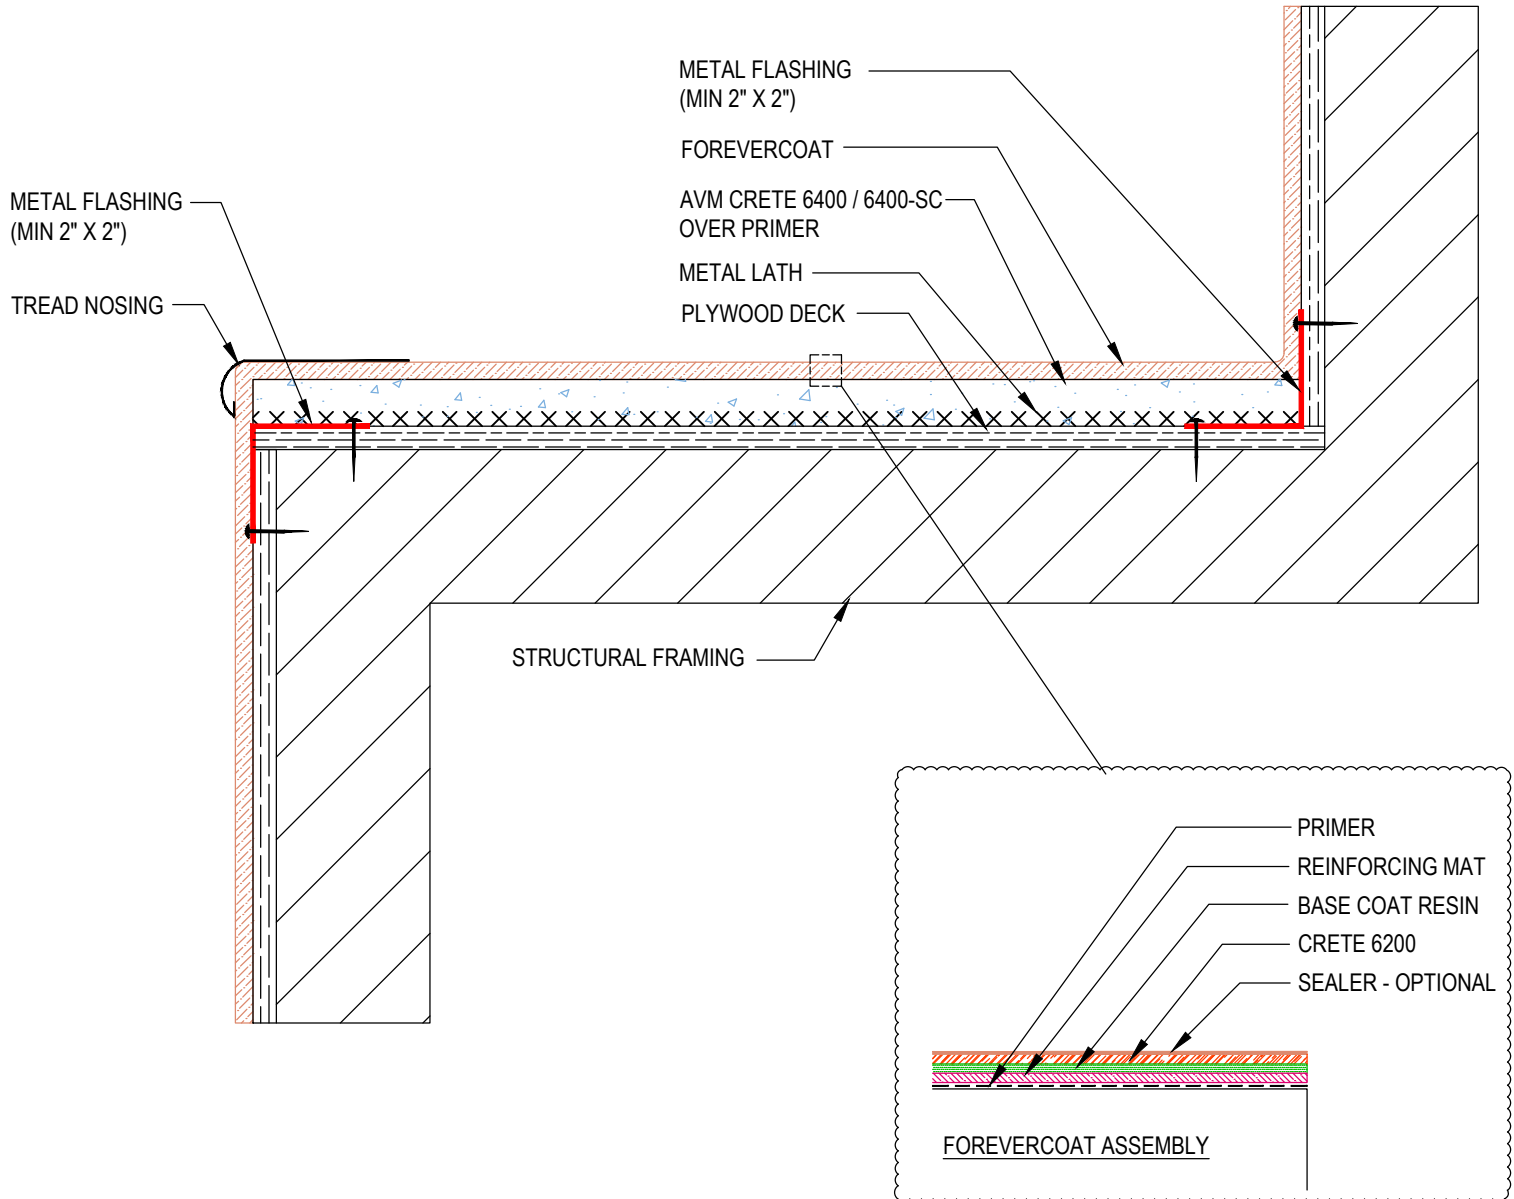


Notes:

1. For sheet metal installation please refer to detail # 0100-FEC-621-P-ISO

DETAIL #:
0100-FEC-621-P-CS
AVM System 100
Forevercoat

Stair Flashing Over Plywood Substrate


AVM System 100 Forevercoat

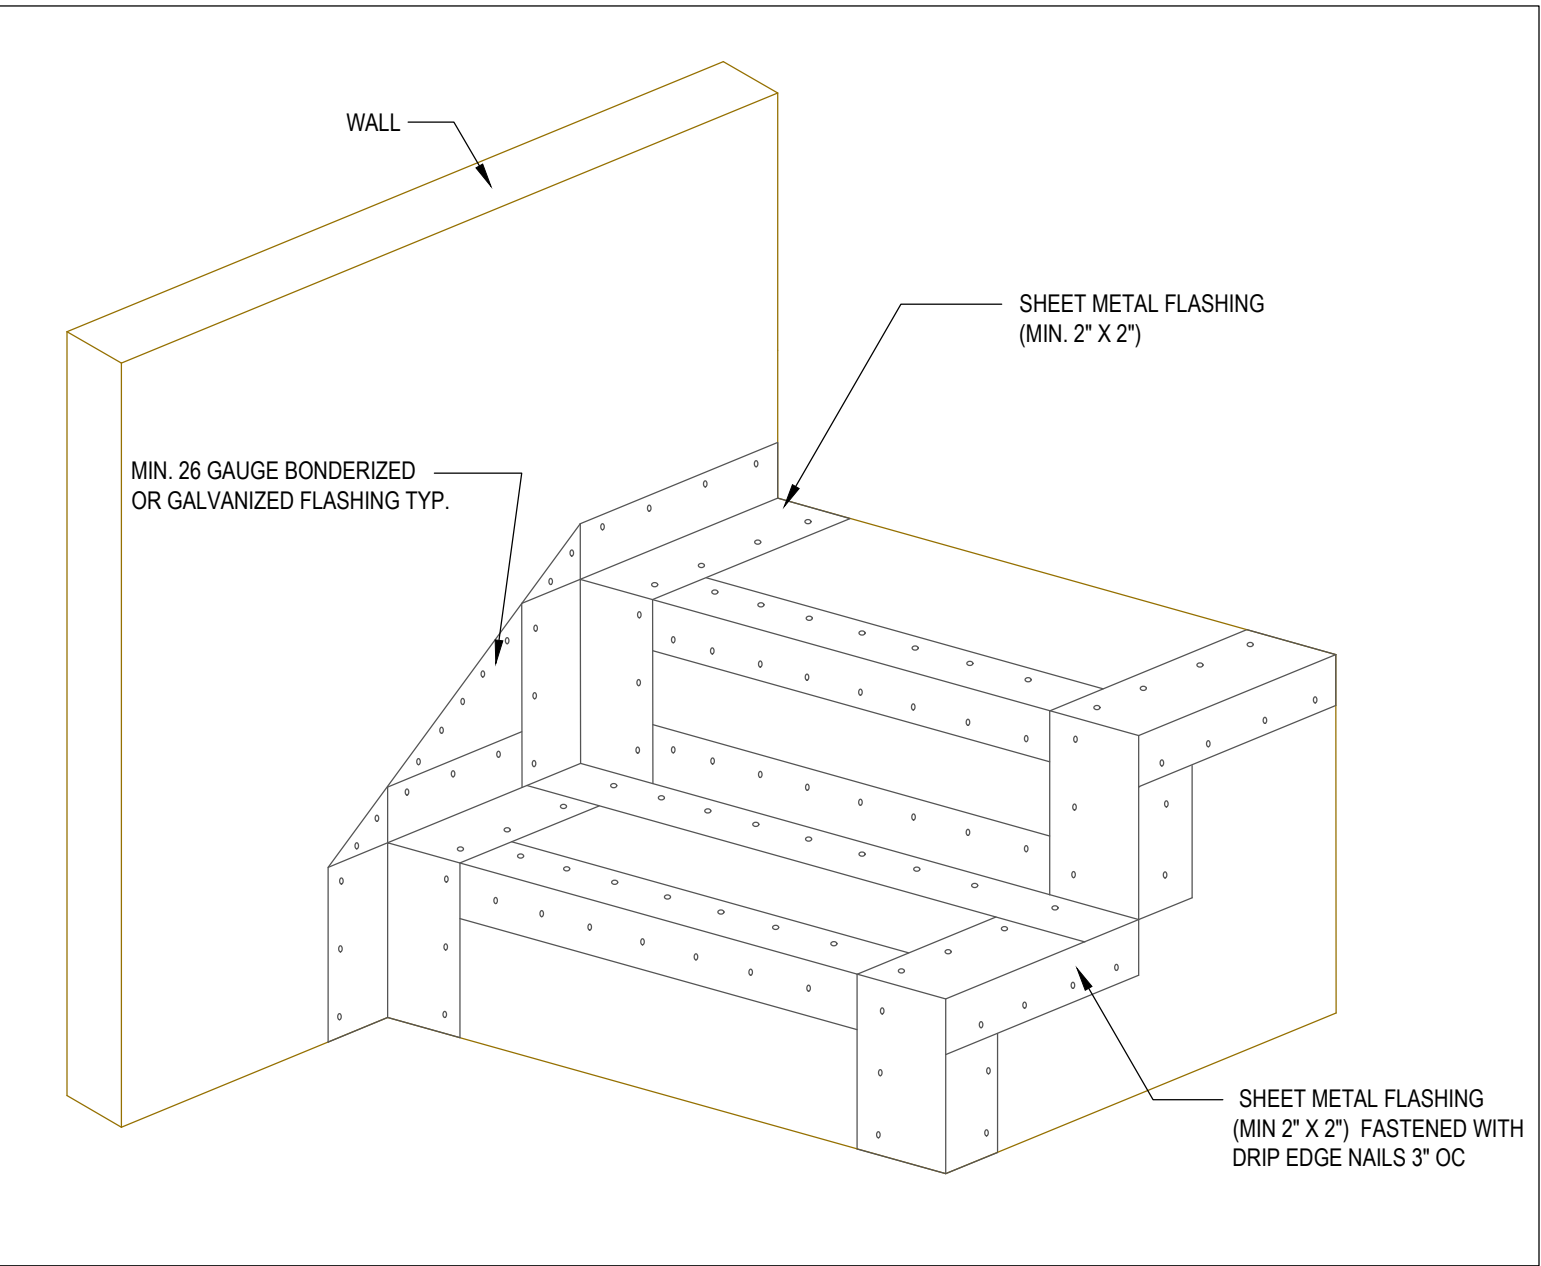

DETAIL #:
0100-FEC-642-P-CS
AVM System 100
Forevercoat

Threshold Over Plywood Substrate

AVM System 100 Forevercoat

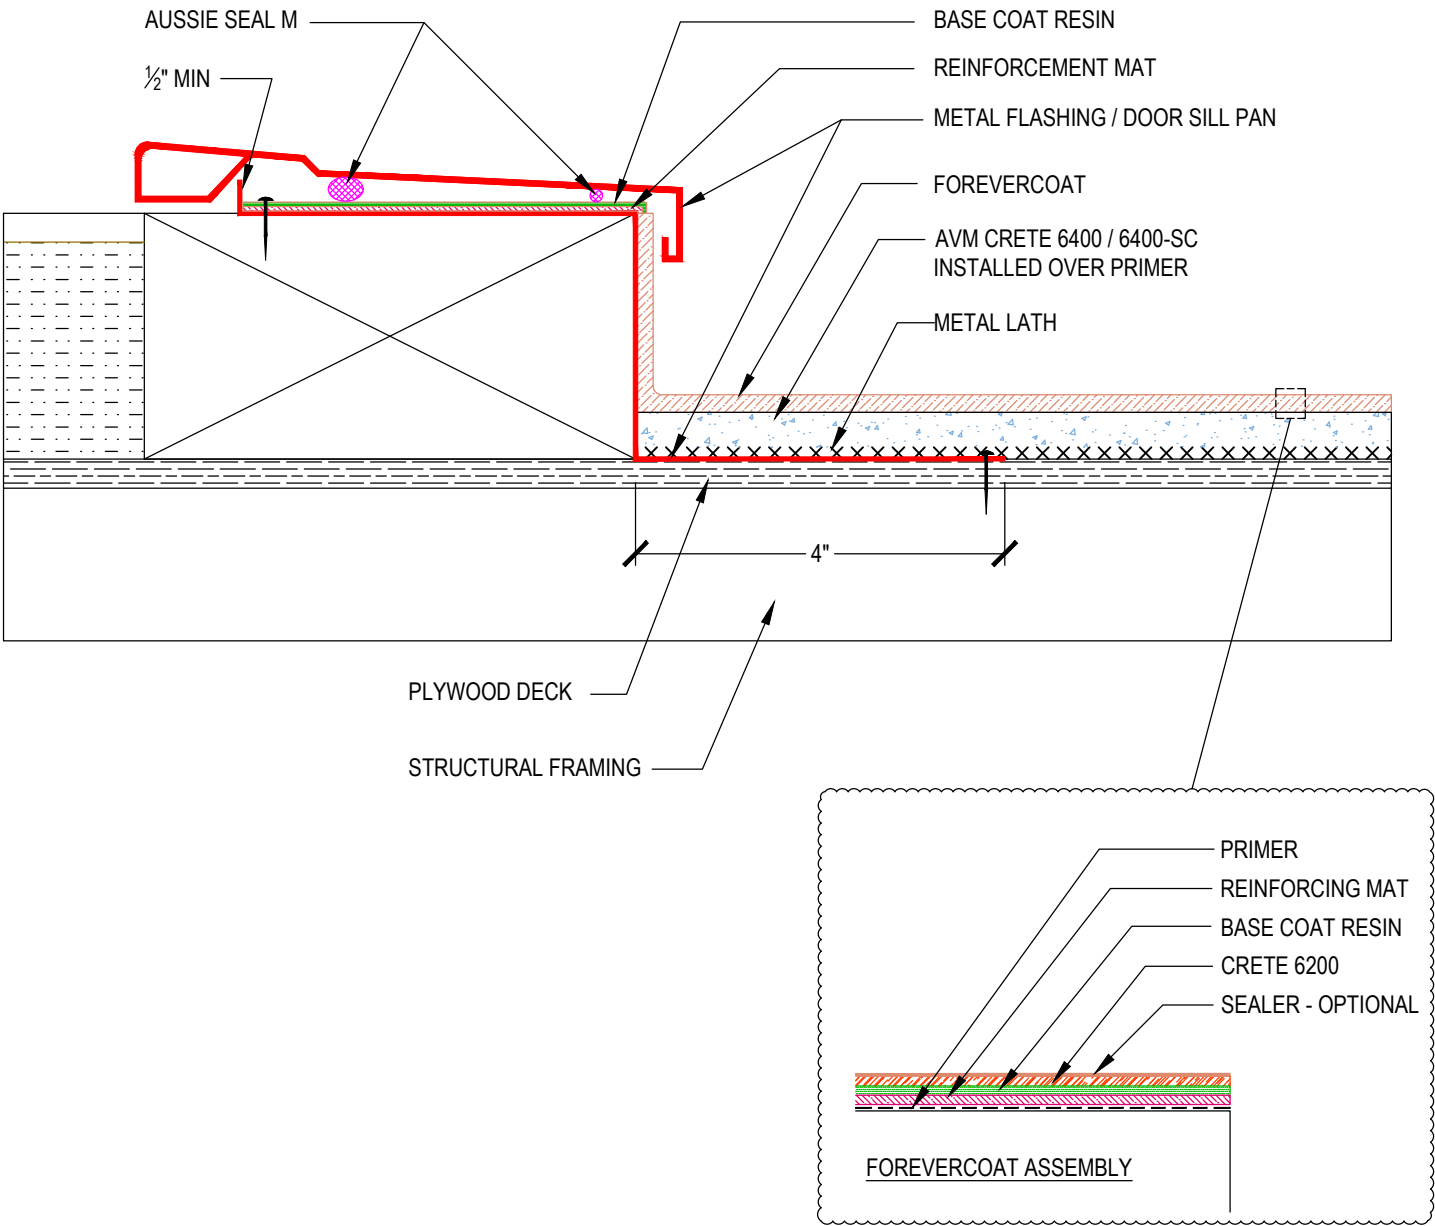

Notes:


1. Extend reinforcing mat and base coat resin to back edge of sheet metal flashing
2. Membrane to be bonded to sheet metal edge

DETAIL #:
0100-FEC-752-P-CS

AVM System 100

Forevercoat

Drain Assembly Over Plywood Substrate AVM System 100 Forevercoat

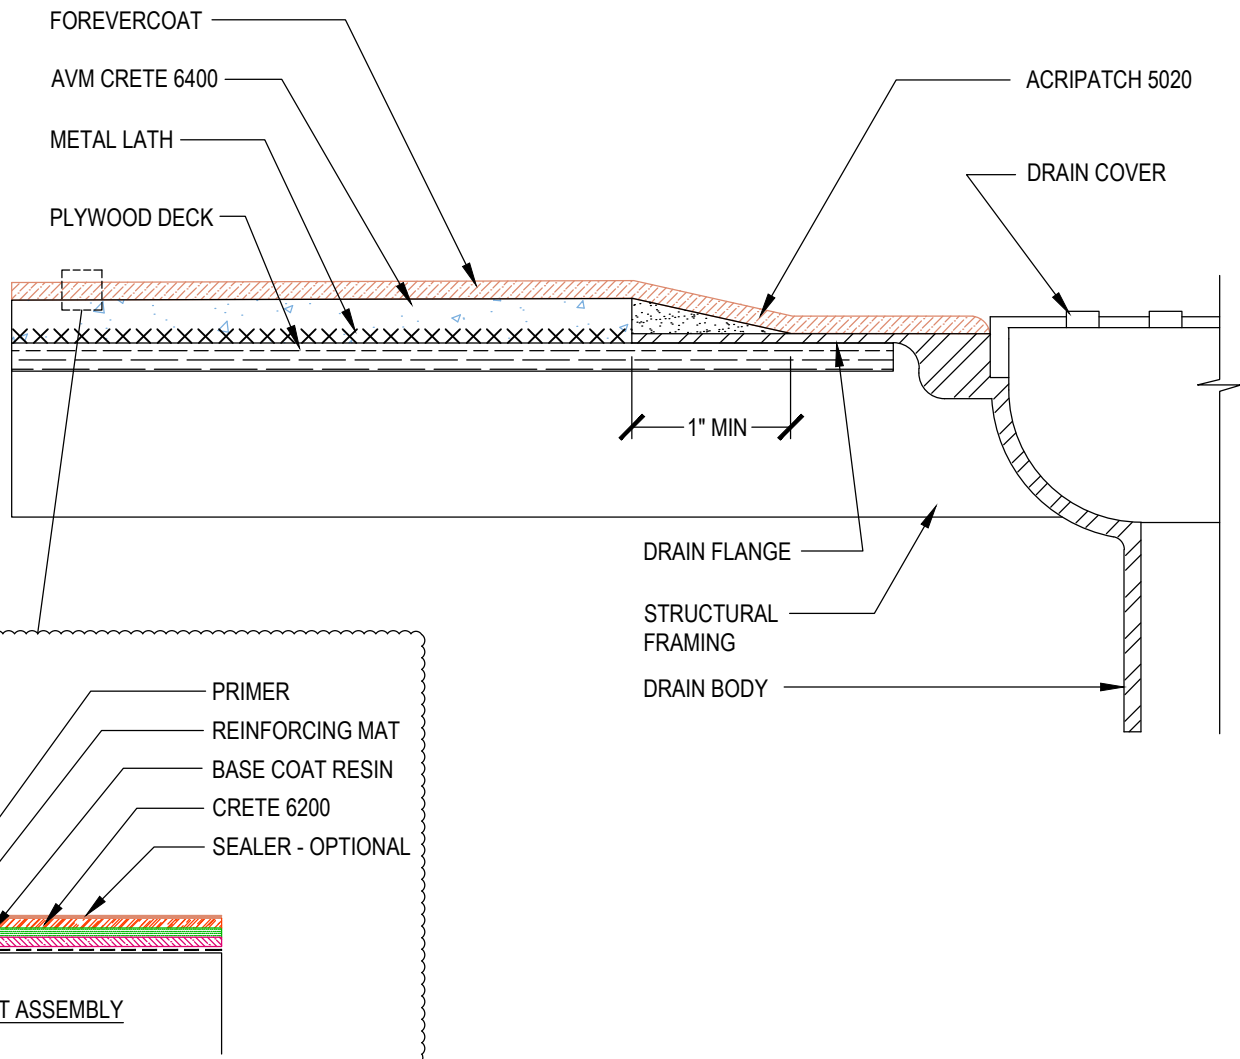

Notes:


1. Stop AVM Crete 6400 at least 2" before drain opening leaving a minimum of 2" exposed flange
2. Install Acripatch 5020 to transition from Crete 6400 to flange leaving a minimum 1" of flange exposed for direct membrane bonding
2. Ensure drain sits low enough and that there is sufficient slope to properly drain the water

DETAIL #:
0100-FEC-862
AVM System 100
Forevercoat

Railing Support with Mounting Plate

AVM System 100

Forevercoat

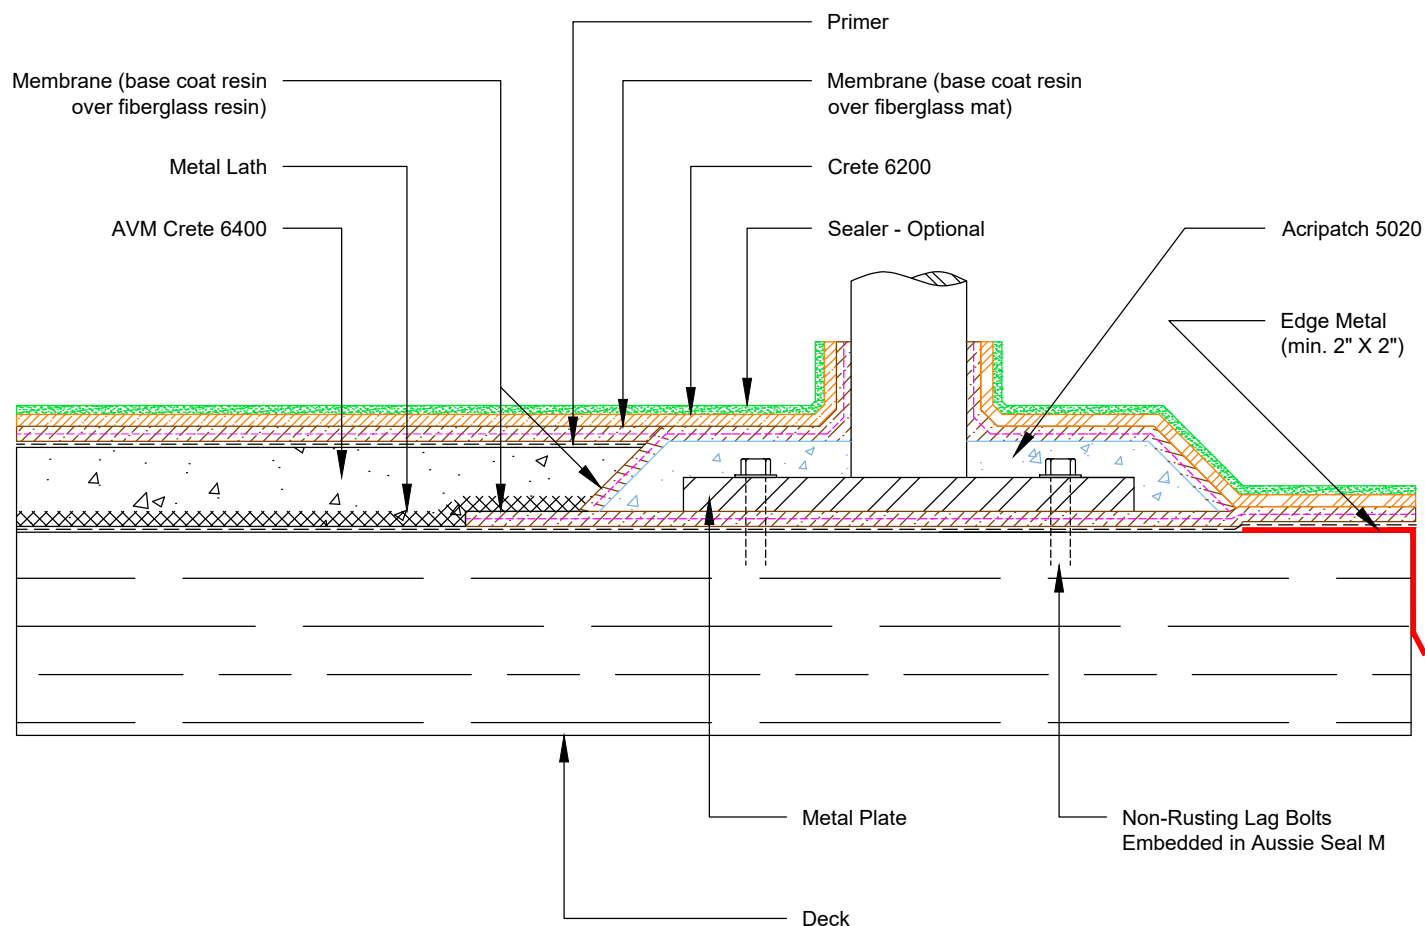

Notes:

1. If there is enough room between outer edge of metal plate and edge metal to install Crete 6400, it must be installed.