


DETAIL #: AVM-0570-6202

AVM SYSTEM 570

CONCRETE DECK

Pipe Penetration with Base Plate
AVM Aussie Membrane 570
Hot Rubber

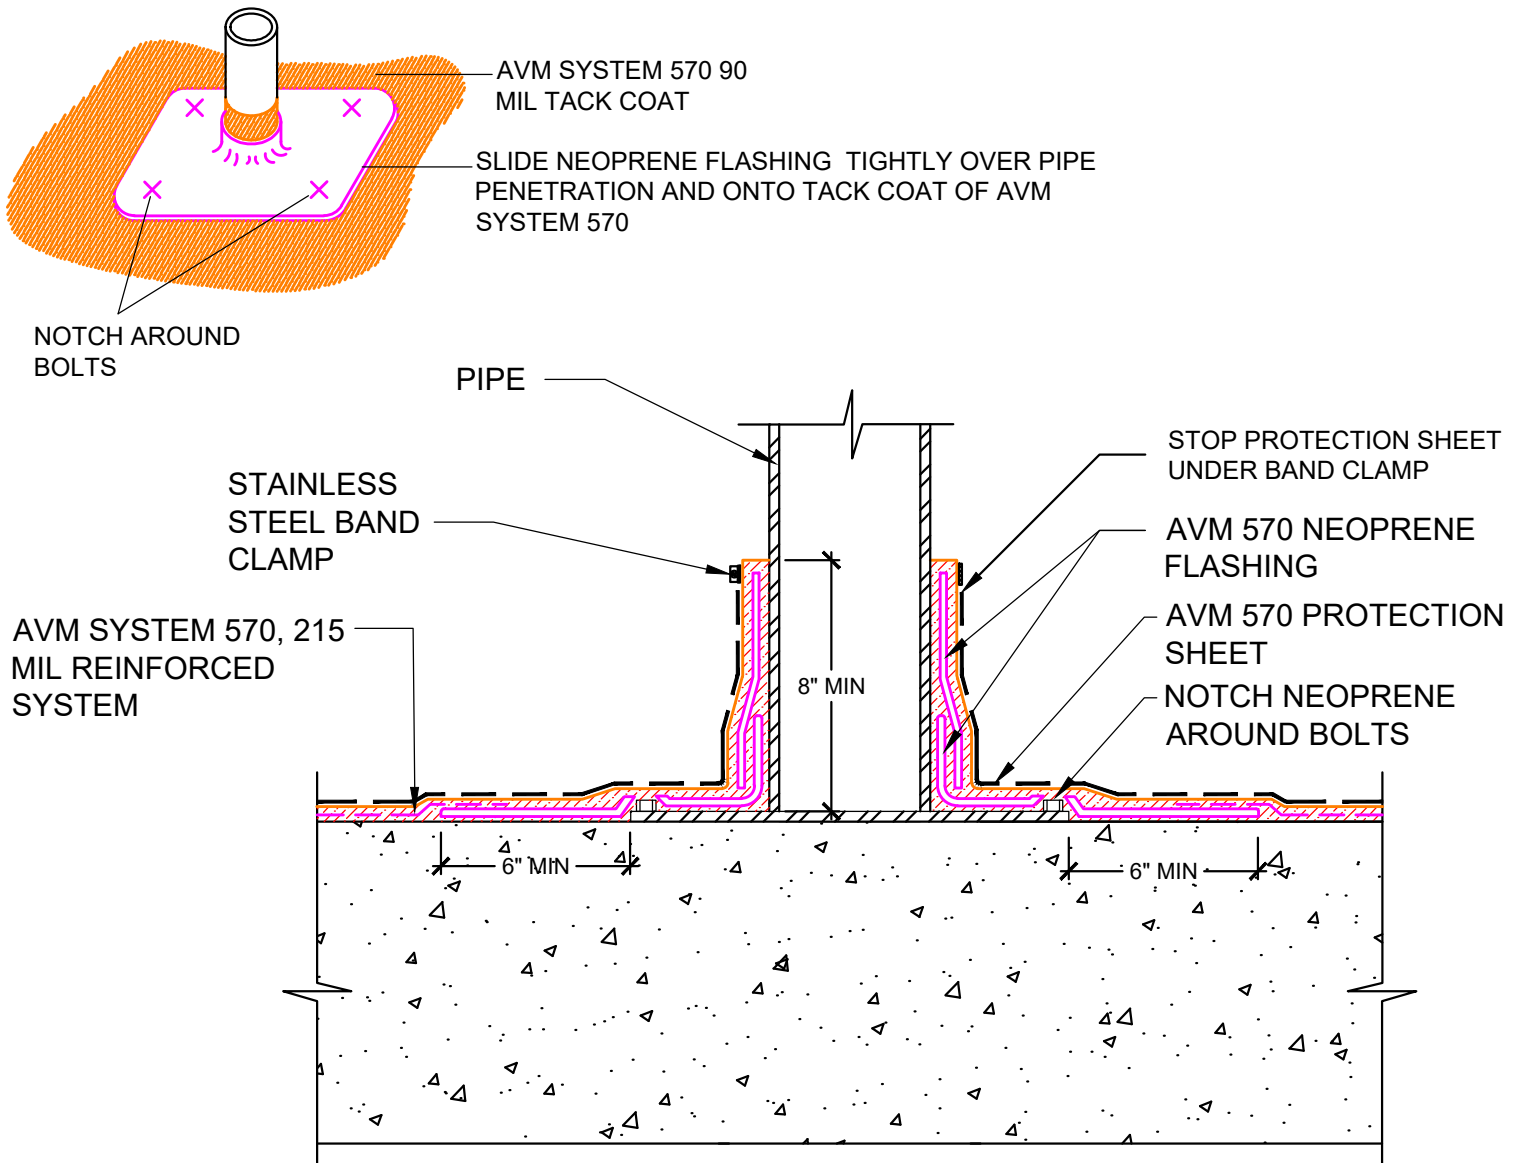

USE AVM ADHESIVE 570 ON CONCRETE RECEIVING AVM SYSTEM 570

NOTE: CLEAN ALL PENETRATIONS OF DIRT, RUST AND OIL. ROUGHEN SURFACE OF PIPE BEFORE APPLYING PRIMER. VERIFY PENETRATION IS PROPERLY SECURED TO DECK OR WALL TO AVOID MOVEMENT OF PIPE.

AVM Industries, Inc.
8245 Remmet Ave, Canoga Park, CA 91304

Quality Waterproofing Products

888.414.1041 818.888.0050
www.avmindustries.com

FILE NAME: **0570-6202-Horizontal-Pipe-Penetration-with-base-plate**

Protected by Copyright - AVM Industries, Inc.

Revision Date 2/25/2019