


DETAIL #:
 0100-EFD-900
 System:
 Elasto Fiberdeck

Scupper Flashing Detail

AVM System 100 Elasto Fiberdeck

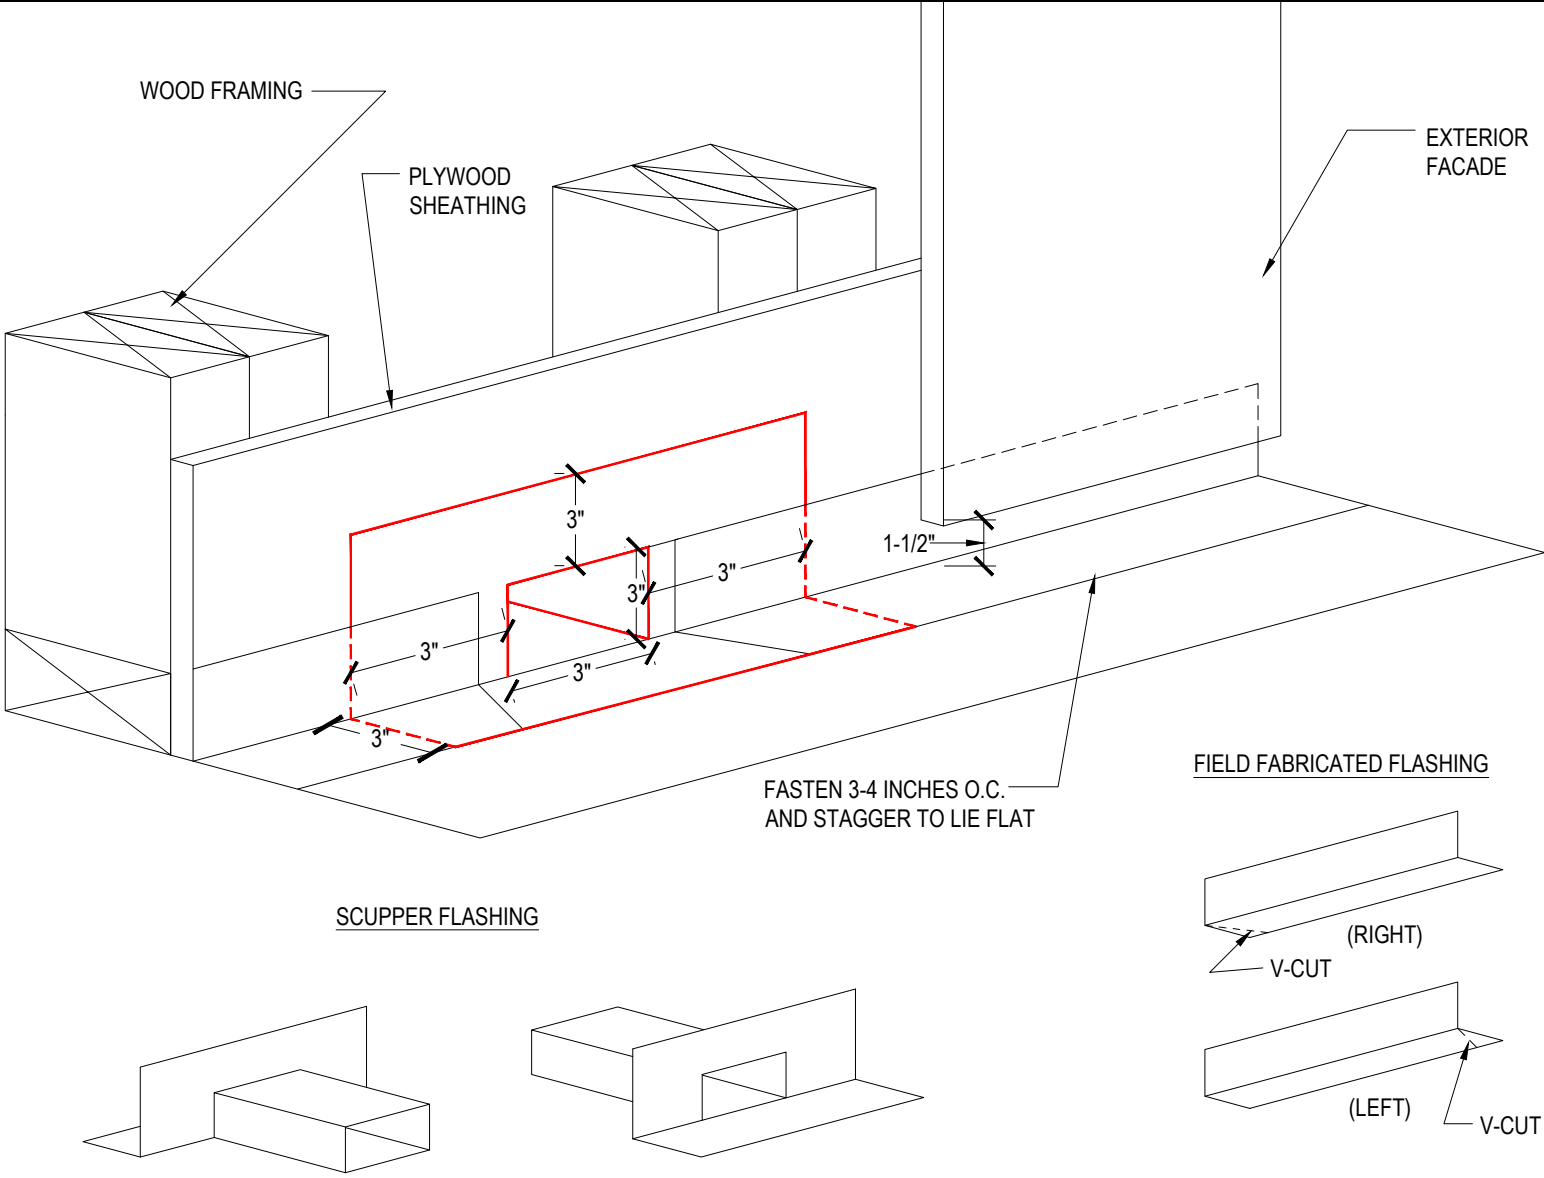

Notes:

1. Min. 2" 26 gauge metal (3-4" onto deck preferred)
2. Lightly abrade/sand to bare metal
3. Wet set in Aussie Seal M sealant & stagger to lie flat
4. Concrete substrates wet set in Aussie Seal M & fasten as needed with shot pins. Be sure not to spall concrete