


DETAIL #:  
**0100-FEC-154-P-CS**  
 AVM System 100  
 Forevercoat

# Typical Sliding Door Assembly Over Plywood Substrate - Option 1

AVM System 100 Forevercoat

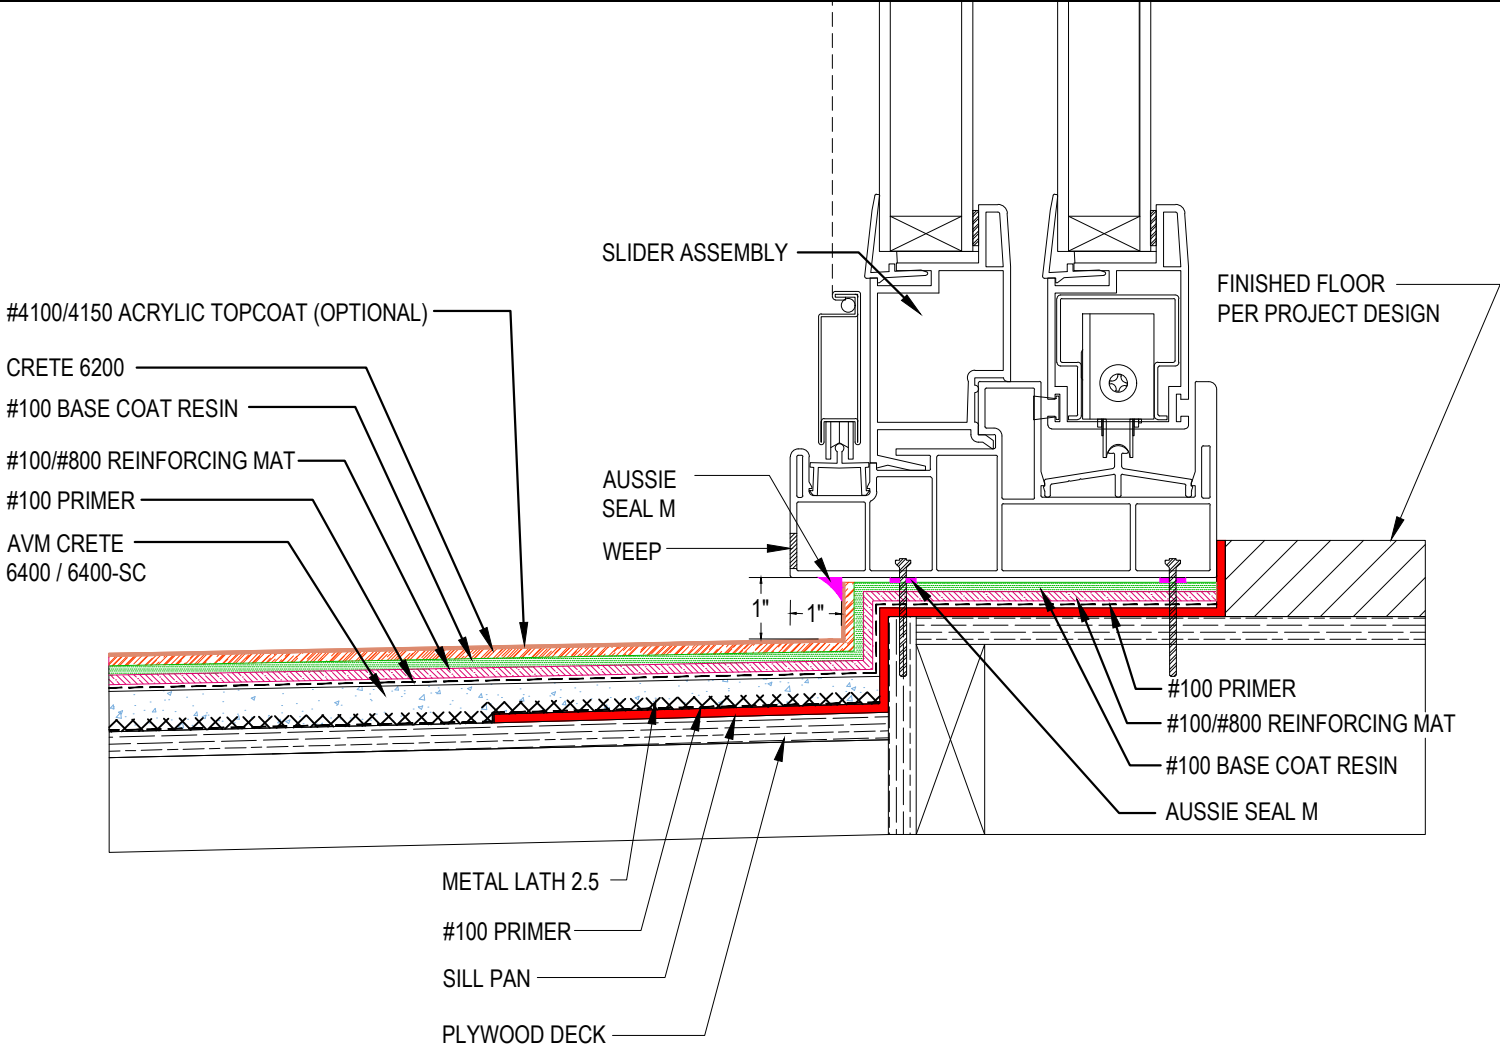

**Notes:**

1. To ensure proper drainage, do not block the pre-existing weep holes or other drainage openings of the door assembly
2. Ensure water exiting the weep holes drains away from the door
3. See application instructions for full system recommendations and requirements.
4. Sealant - Must use AVM approved sealant.