


DETAIL #:  
0100-FEC-621-P-CS  
AVM System 100  
Forevercoat

# Stair Flashing Over Plywood Substrate

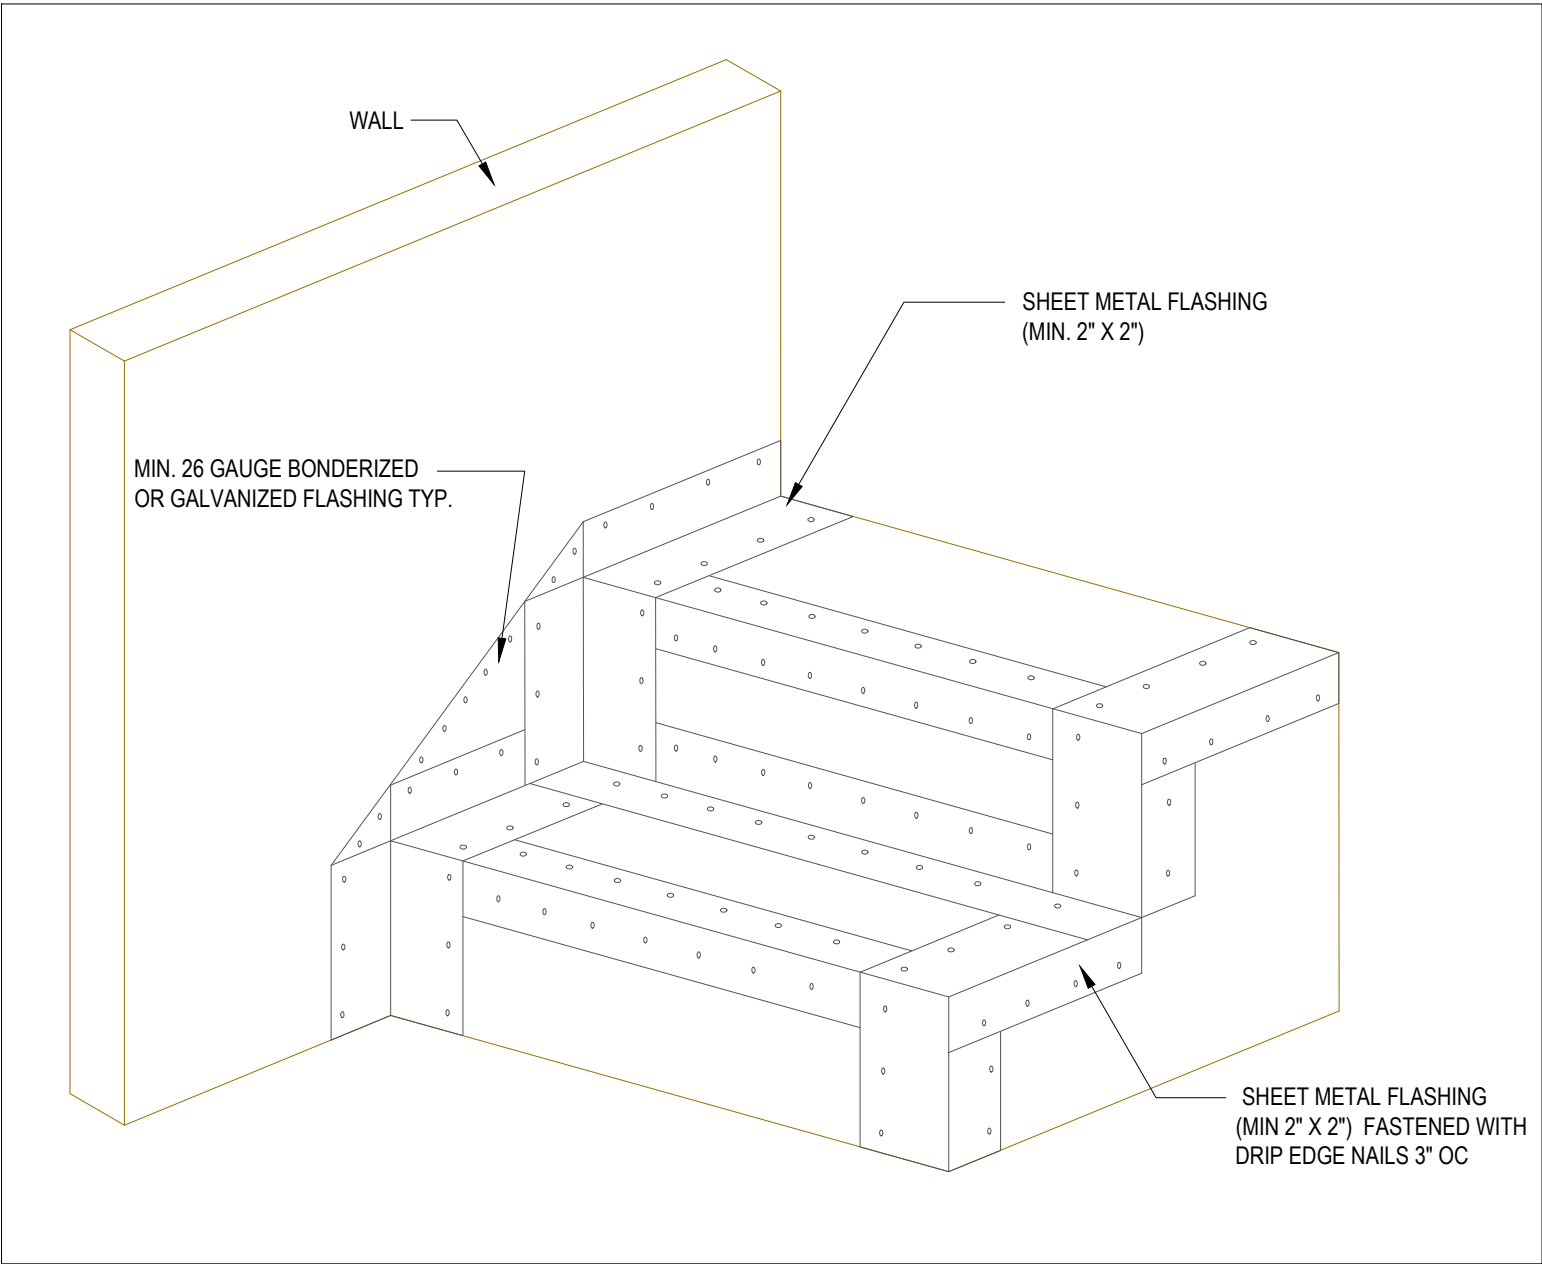

AVM System 100 Forevercoat



**Notes:**

- 1. Min 2" 26 gauge metal flashing.
- 2. Lightly abrade / sand to bare metal.
- 3. Fasten every 3-4" staggered to lie flat.
- 4. See application instructions for full system recommendations and requirements.