


DETAIL #:
0100-FEC-001-C-ISO
AVM System 100
Forevercoat

Standard Assembly Over Concrete Substrate AVM System 100 Forevercoat

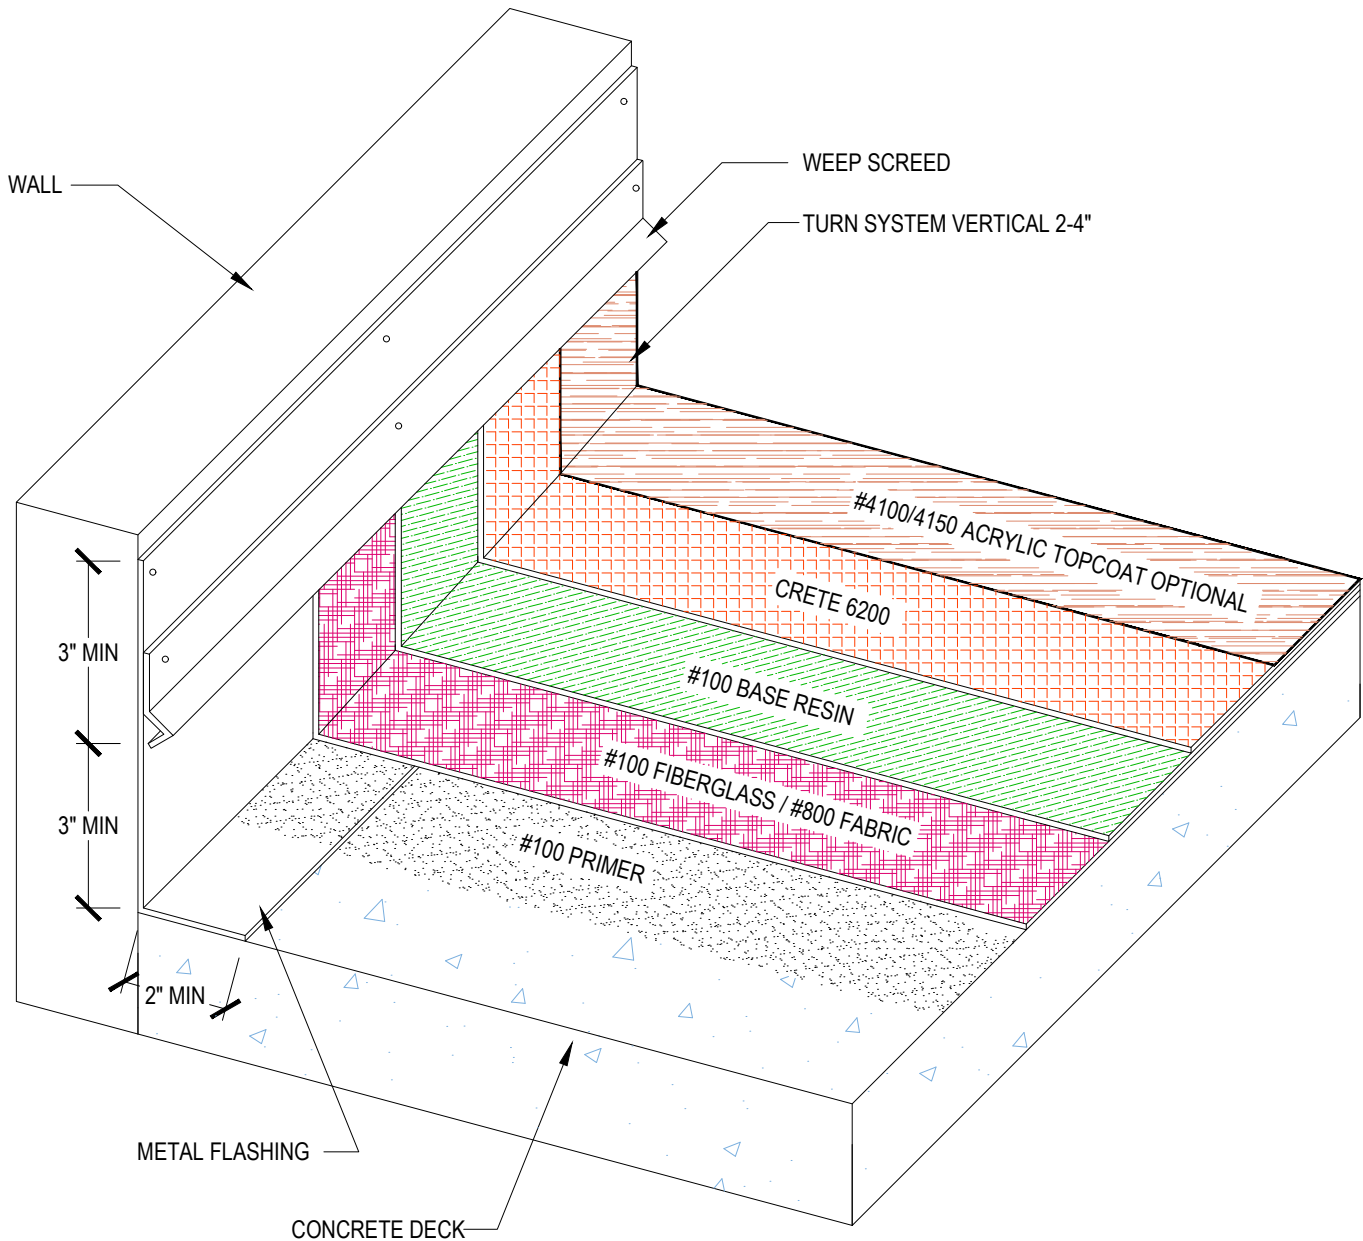

Notes:


1. Concrete substrate to be minimum 2" thick at 2,000 psi.
2. Metal flashing to be minimum 2" 26 gauge (3-4" on to deck preferred) min 6" on vertical.
3. #100 Fiberglass or #800 Fabric may be used for resin coat.
4. See application instructions for full system recommendations and requirements.

DETAIL #:
0100-FEC-002-C-CS

AVM System 100

Forevercoat

Standard Assembly Over Concrete Substrate AVM System 100 Forevercoat

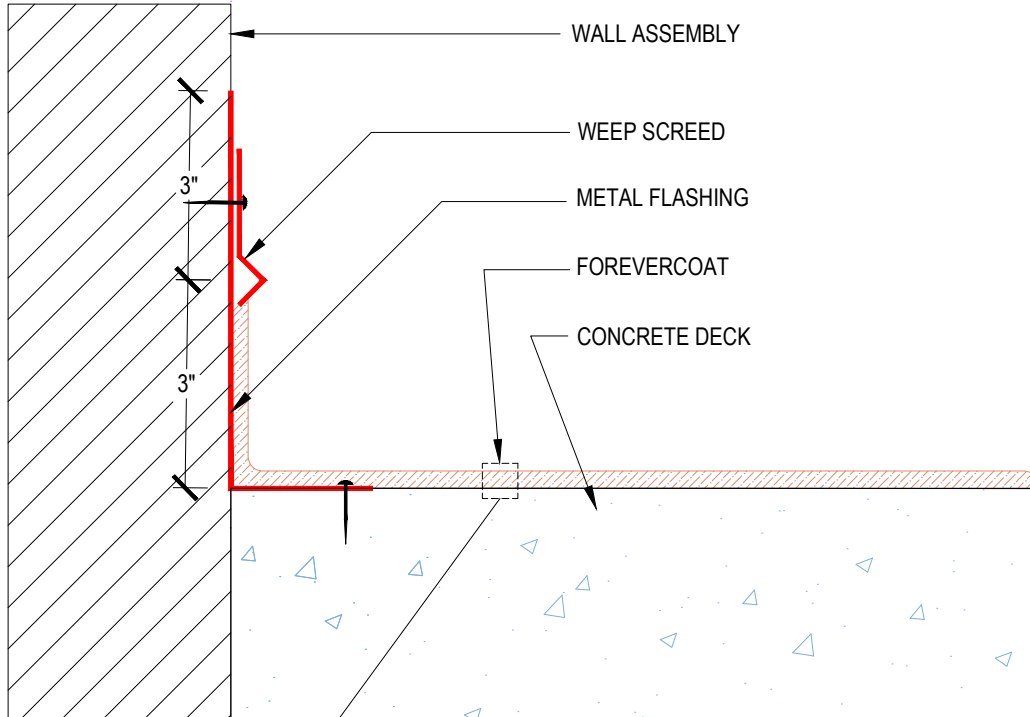

#100 PRIMER
#100/800 REINFORCING
#100 BASE RESIN
CRETE 6200/6200 SC
#4100/4150 ACRYLIC TOPCOAT
(OPTIONAL)



FOREVERCOAT ASSEMBLY


Notes:

1. Edge metals at deck edge of concrete decks is not required
2. Extend deck coating layers (primer, membrane, texture, and sealer) to the slab edge
3. If edge metals are installed on slab edges, contact AVM for details
4. L Metal to extend above top of screed
5. See application instructions for full system recommendations and requirements.

DETAIL #:
0100-FEC-142-P-CS
AVM System 100
Forevercoat

Threshold Over Concrete Substrate

AVM System 100 Forevercoat

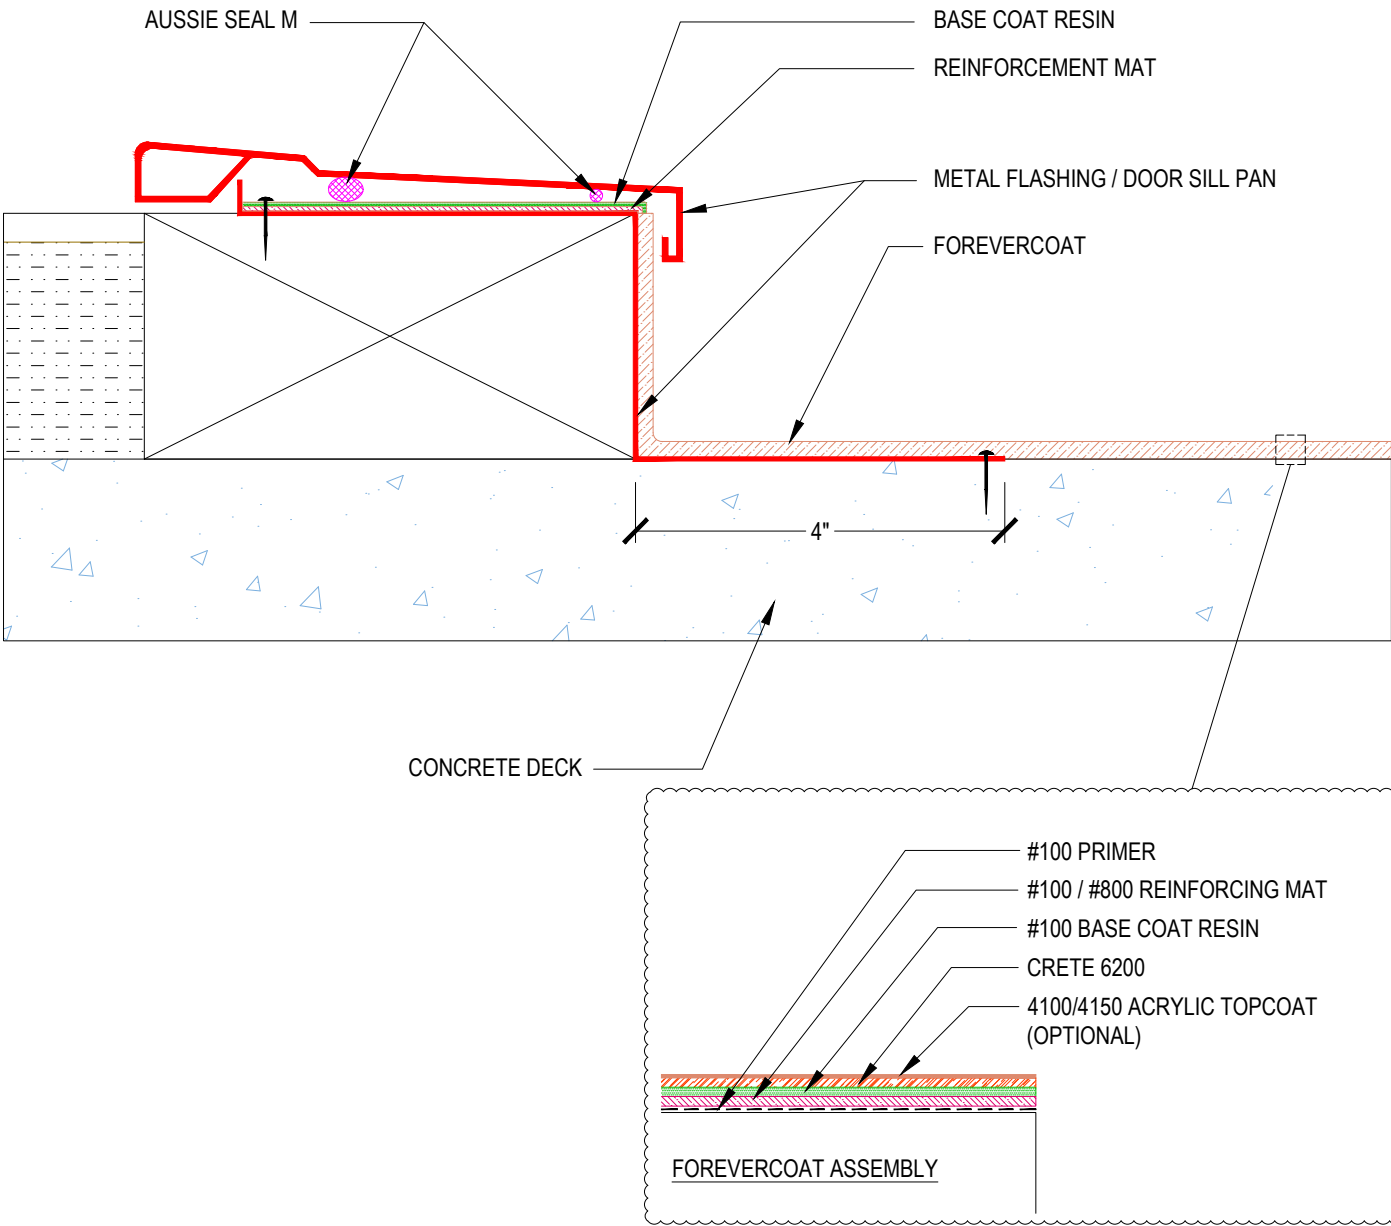


Notes:

1. Extend reinforcing mat and base coat resin to back edge of sheet metal flashing
2. Membrane to be bonded to sheet metal edge
3. See application instructions for full system recommendations and requirements.

DETAIL #:
0100-FEC-154-P-CS
AVM System 100
Forevercoat

Typical Sliding Door Assembly Over Plywood Substrate - Option 1 AVM System 100 Forevercoat

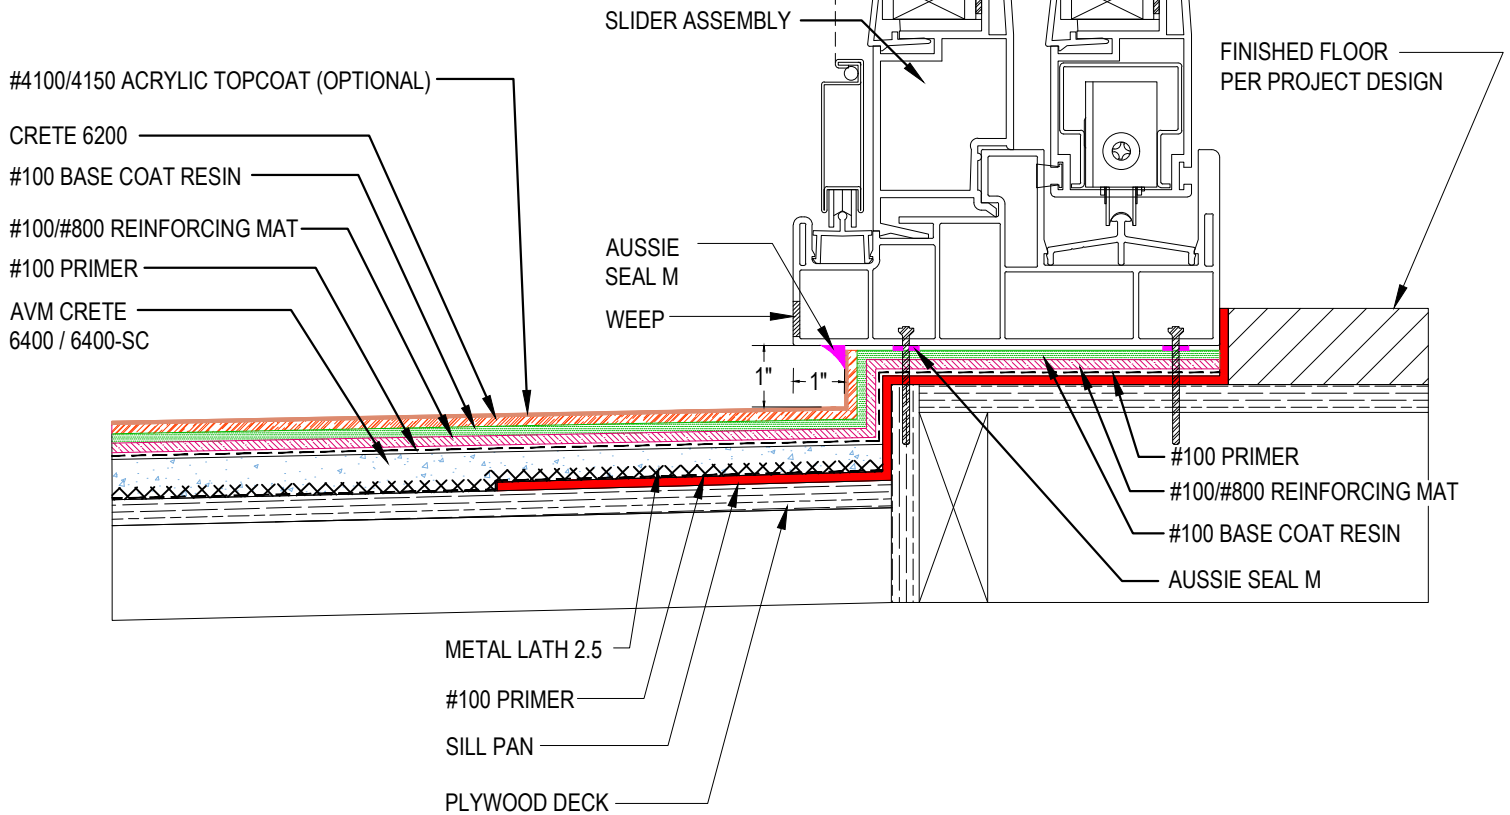

Notes:


1. To ensure proper drainage, do not block the pre-existing weep holes or other drainage openings of the door assembly
2. Ensure water exiting the weep holes drains away from the door
3. See application instructions for full system recommendations and requirements.
4. Sealant - Must use AVM approved sealant.

DETAIL #:
0100-FEC-156-P-CS

AVM System 100

Forevercoat

Typical Sliding Door Assembly Over Plywood Substrate - Option 2 AVM System 100 Forevercoat


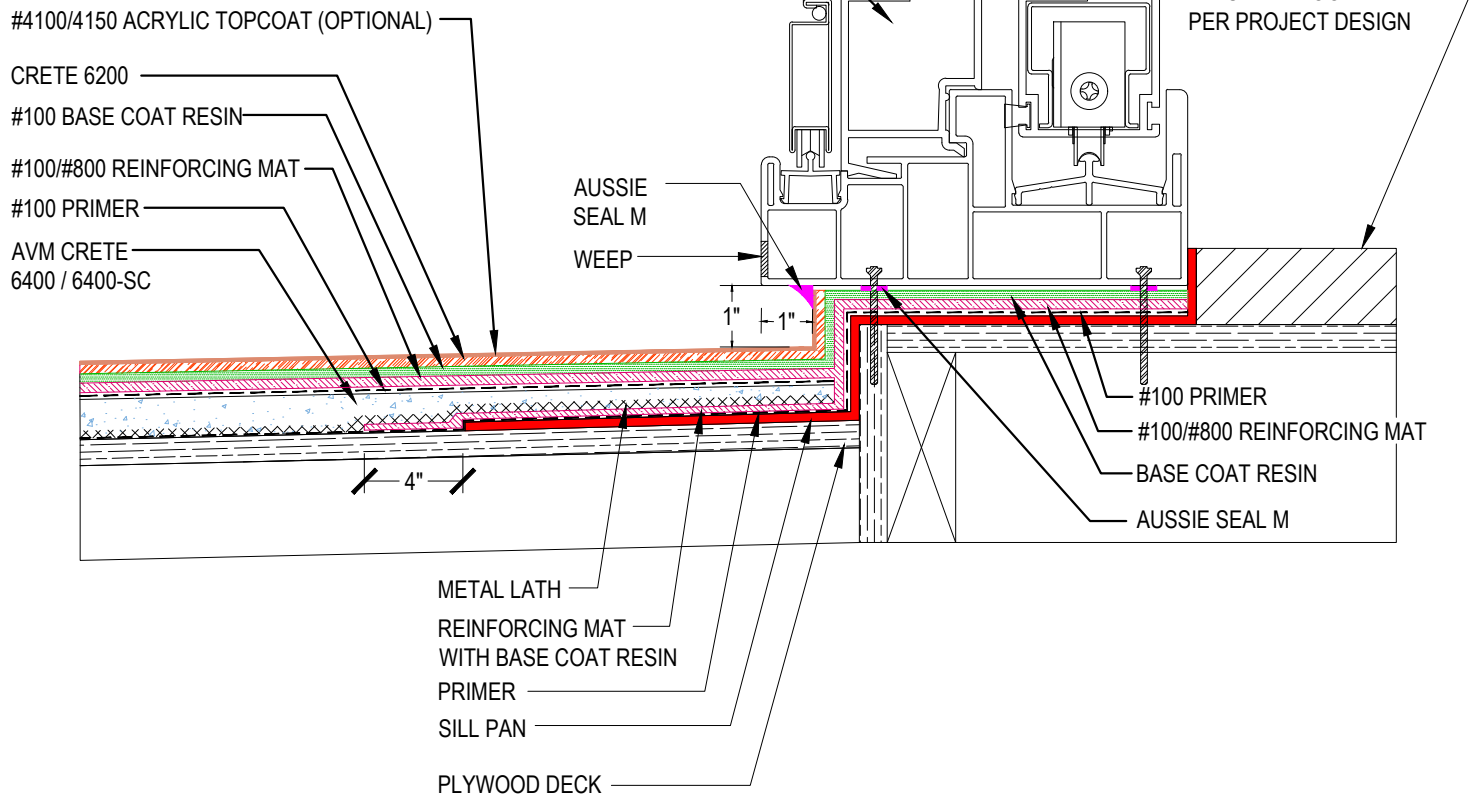


Notes:

1. To ensure proper drainage, do not block the pre-existing weep holes or other drainage openings of the door assembly
2. Ensure water exiting the weep holes drains away from the door
3. See application instructions for full system recommendations and requirements.
4. Sealant - Must use AVM approved sealant.

DETAIL #:
0100-FEC-162-P-CS
AVM System 100
Forevercoat

Drain Assembly Over Concrete Substrate AVM System 100 Forevercoat

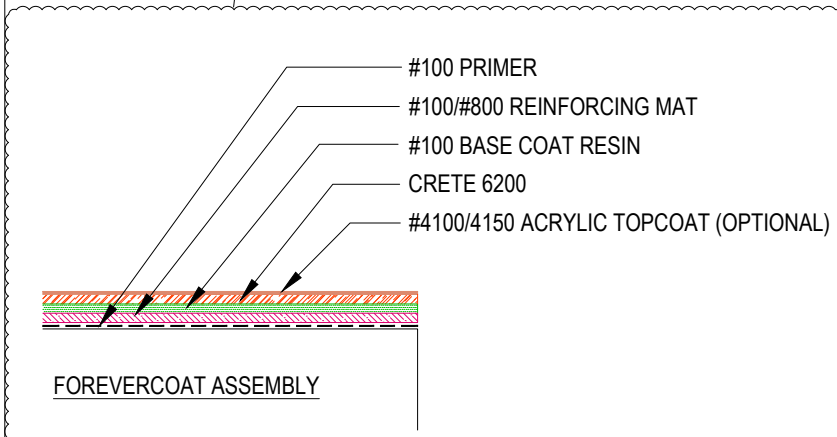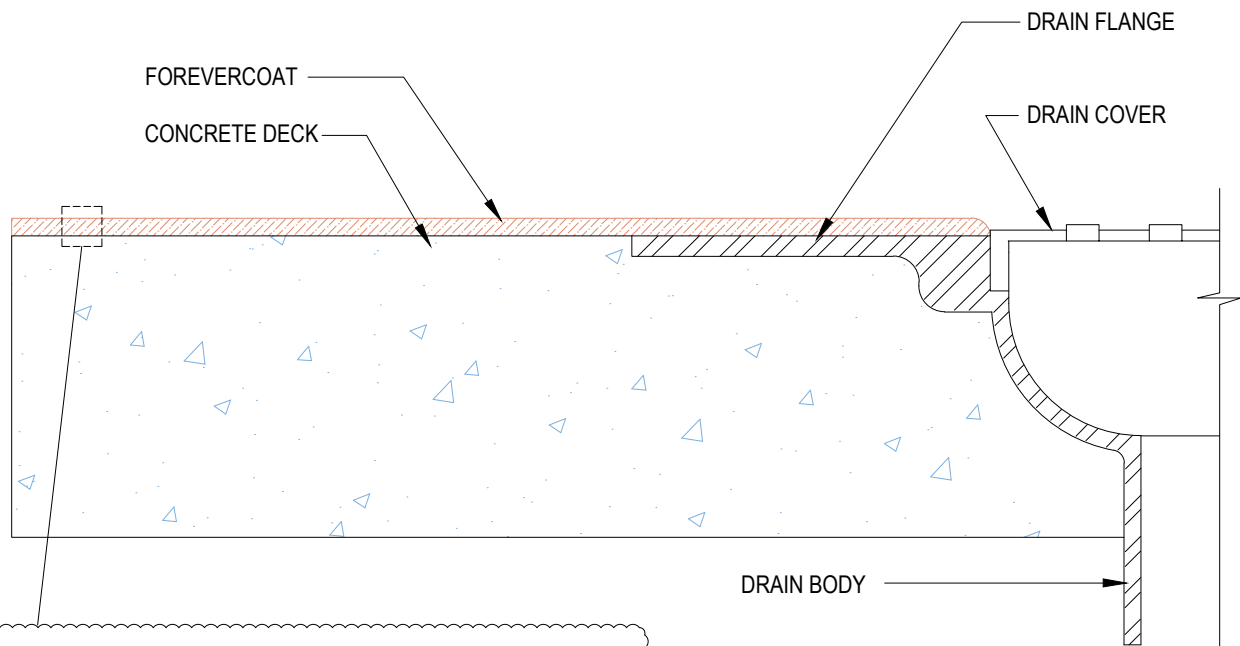


Notes:

1. Remove all paints, primer, oils or any foreign matter by abrading /sanding to bare metal prior to full system application.
2. Base resin and reinforcement may be installed into properly repaired drain body.
3. Drains should have a minimum 2" flange.
4. Ensure drain sits low enough for sufficient slope.
5. Do not block weep holes.
6. See application instructions for full system recommendations and requirements.

DETAIL #:
0100-FEC-462-P-CS
AVM System 100
Forevercoat

Assembly Over Concrete Curb


AVM System 100 Forevercoat

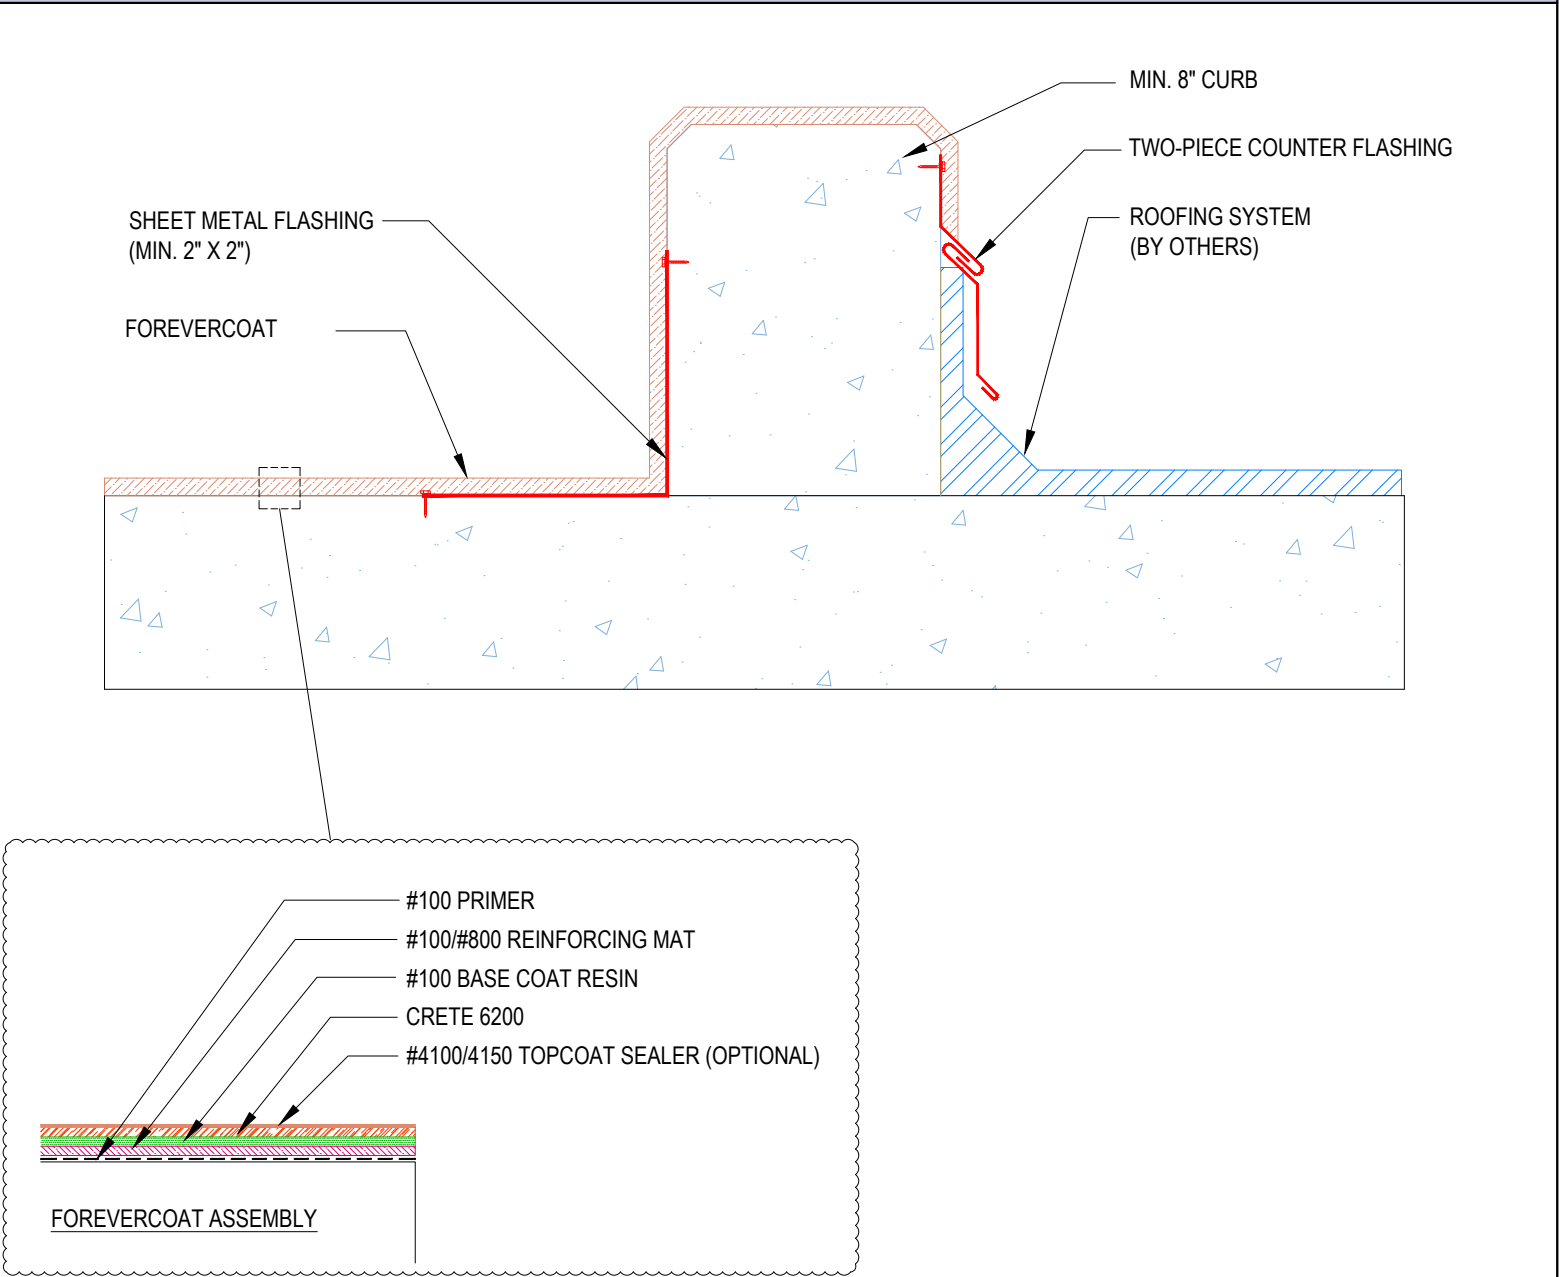

DETAIL #:
0100-FEC-501-P-ISO
AVM System 100
Forevercoat

Assembly Over Plywood Substrate

AVM System 100 Forevercoat

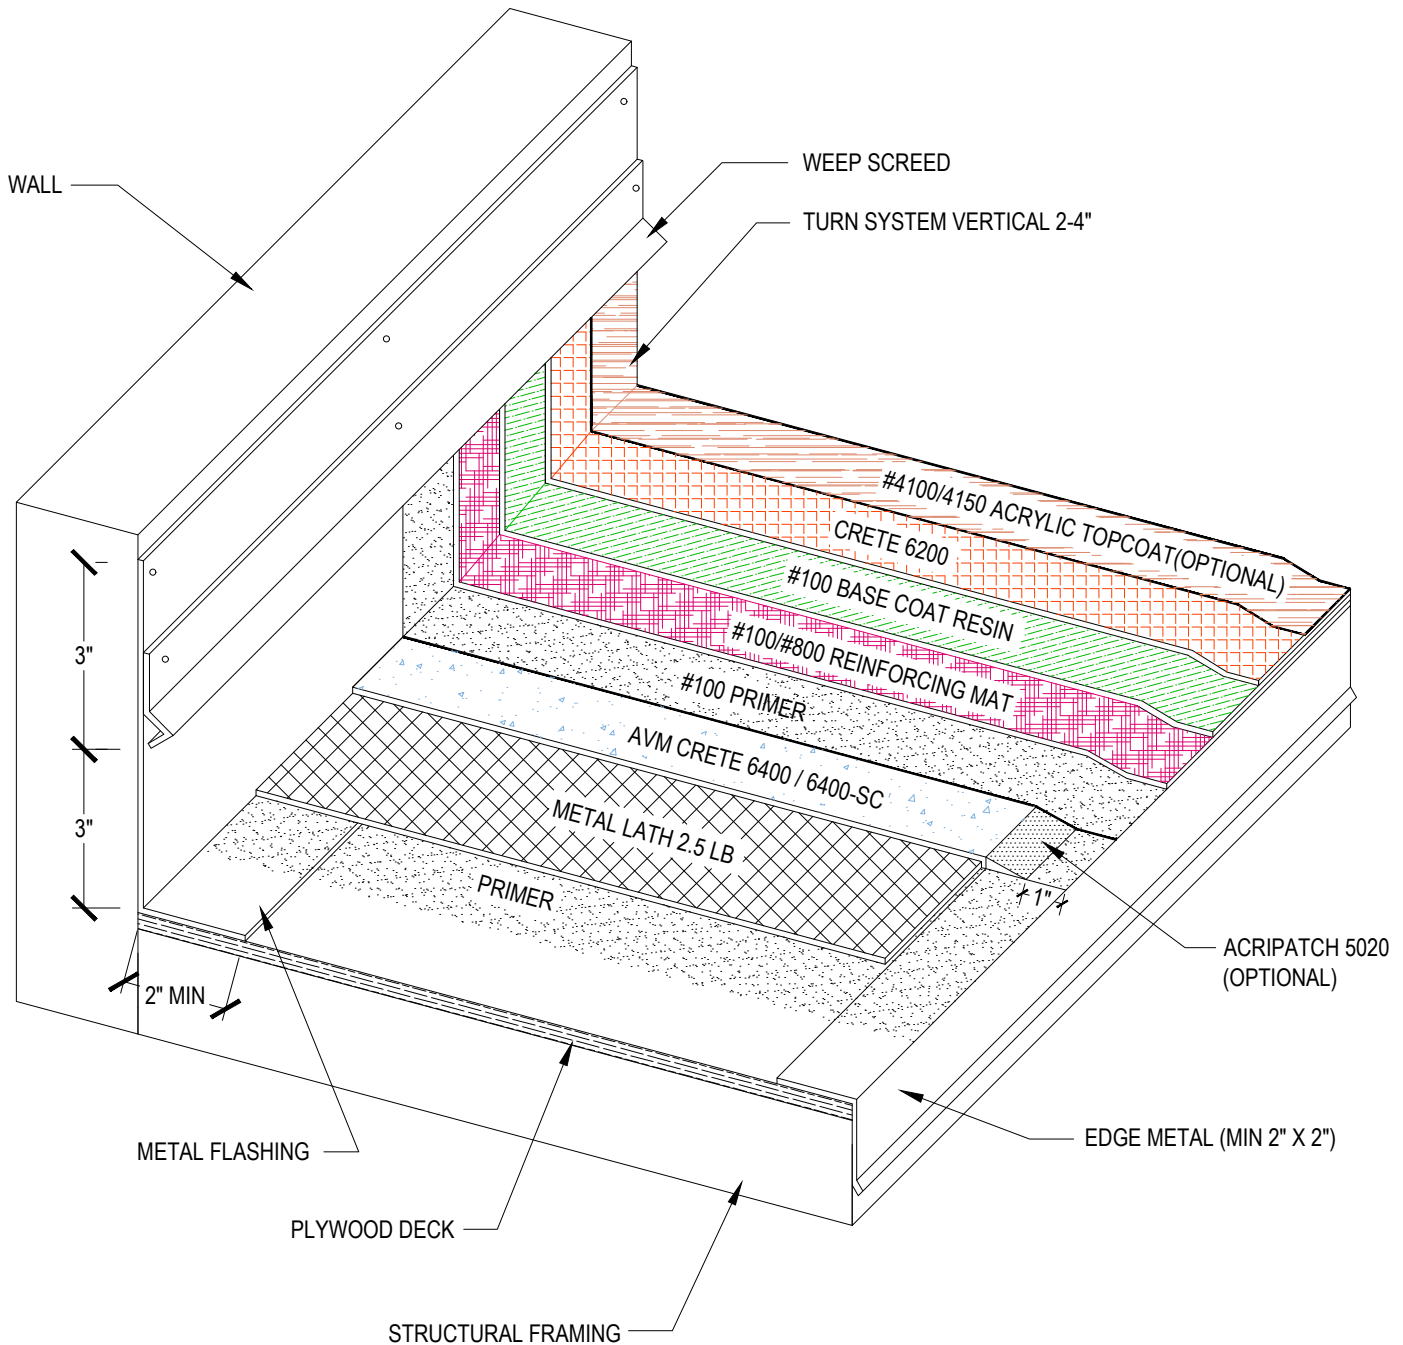



Notes:

1. Plywood to be minimum 5/8" thick.
2. Metal flashing to be 2" 26 gauge (3-4" onto deck preferred) min 6" on vertical.
3. #100 Fiberglass or #800 Fabric may be used for resin coat.
4. See application instructions for full system recommendations and requirements.

DETAIL #:
0100-FEC-502-P-CS
AVM System 100
Forevercoat

Assembly Over Plywood Substrate

AVM System 100 Forevercoat

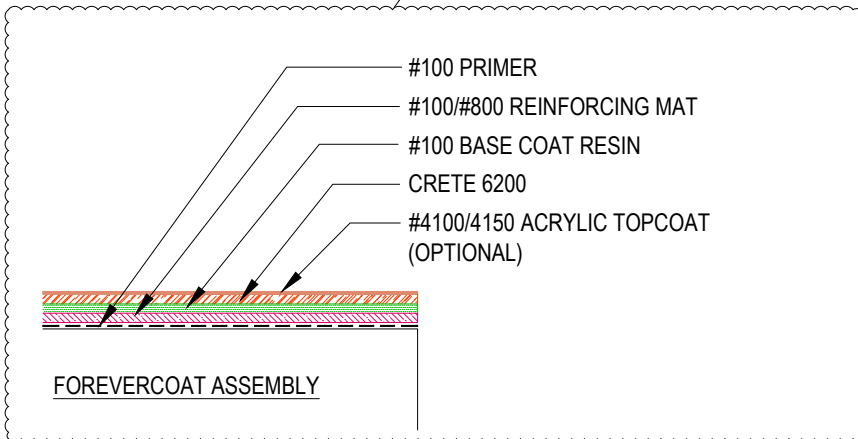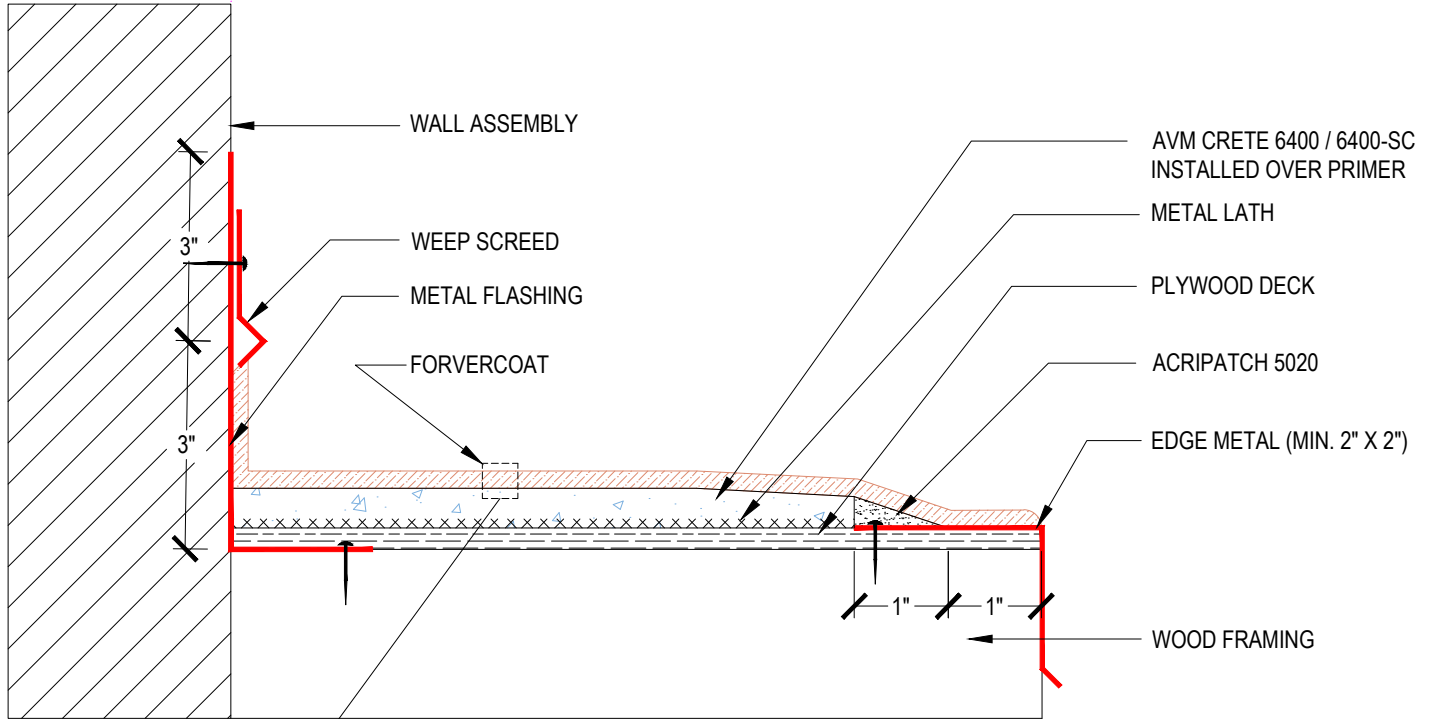

Notes:


1. Extend membrane, texture, and topcoat to edge of sheet metal flashing
2. Membrane to be bonded to sheet metal edge
3. Terminate Acripatch 1" from edge
4. L Metal to extend above top of screed
5. See application instructions for full system recommendations and requirements

DETAIL #:
0100-FEC-602-P-CS

AVM System 100

Forevercoat

Stairs Over Plywood Substrate AVM Crete on Tread & Riser AVM System 100 Forevercoat

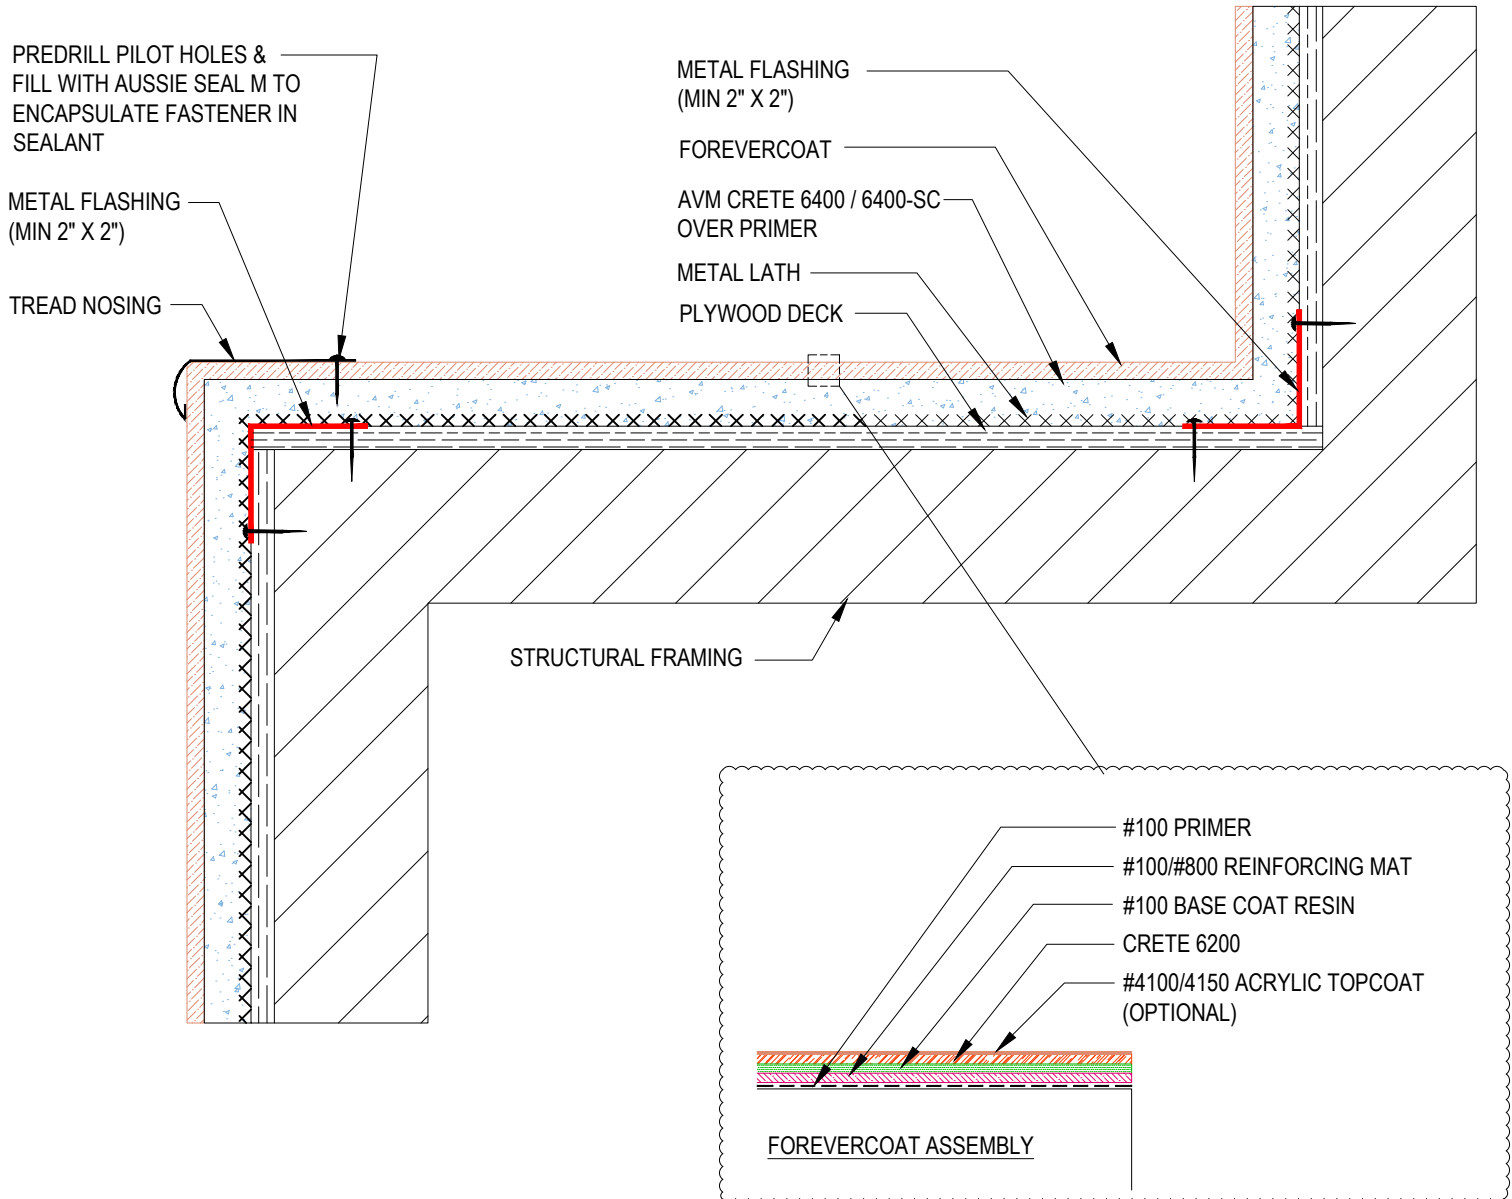

Notes:


1. For sheet metal installation please refer to detail # 0100-EFD-621-P-ISO
2. AVM Crete 6400 - #400 Aggregate with 7400 Additive.
3. See application instructions for full system recommendations and requirements.

DETAIL #:
0100-FEC-604-P-CS
AVM System 100
Forevercoat

Stairs Over Plywood Substrate

AVM Crete on Tread Only

AVM System 100 Forevercoat

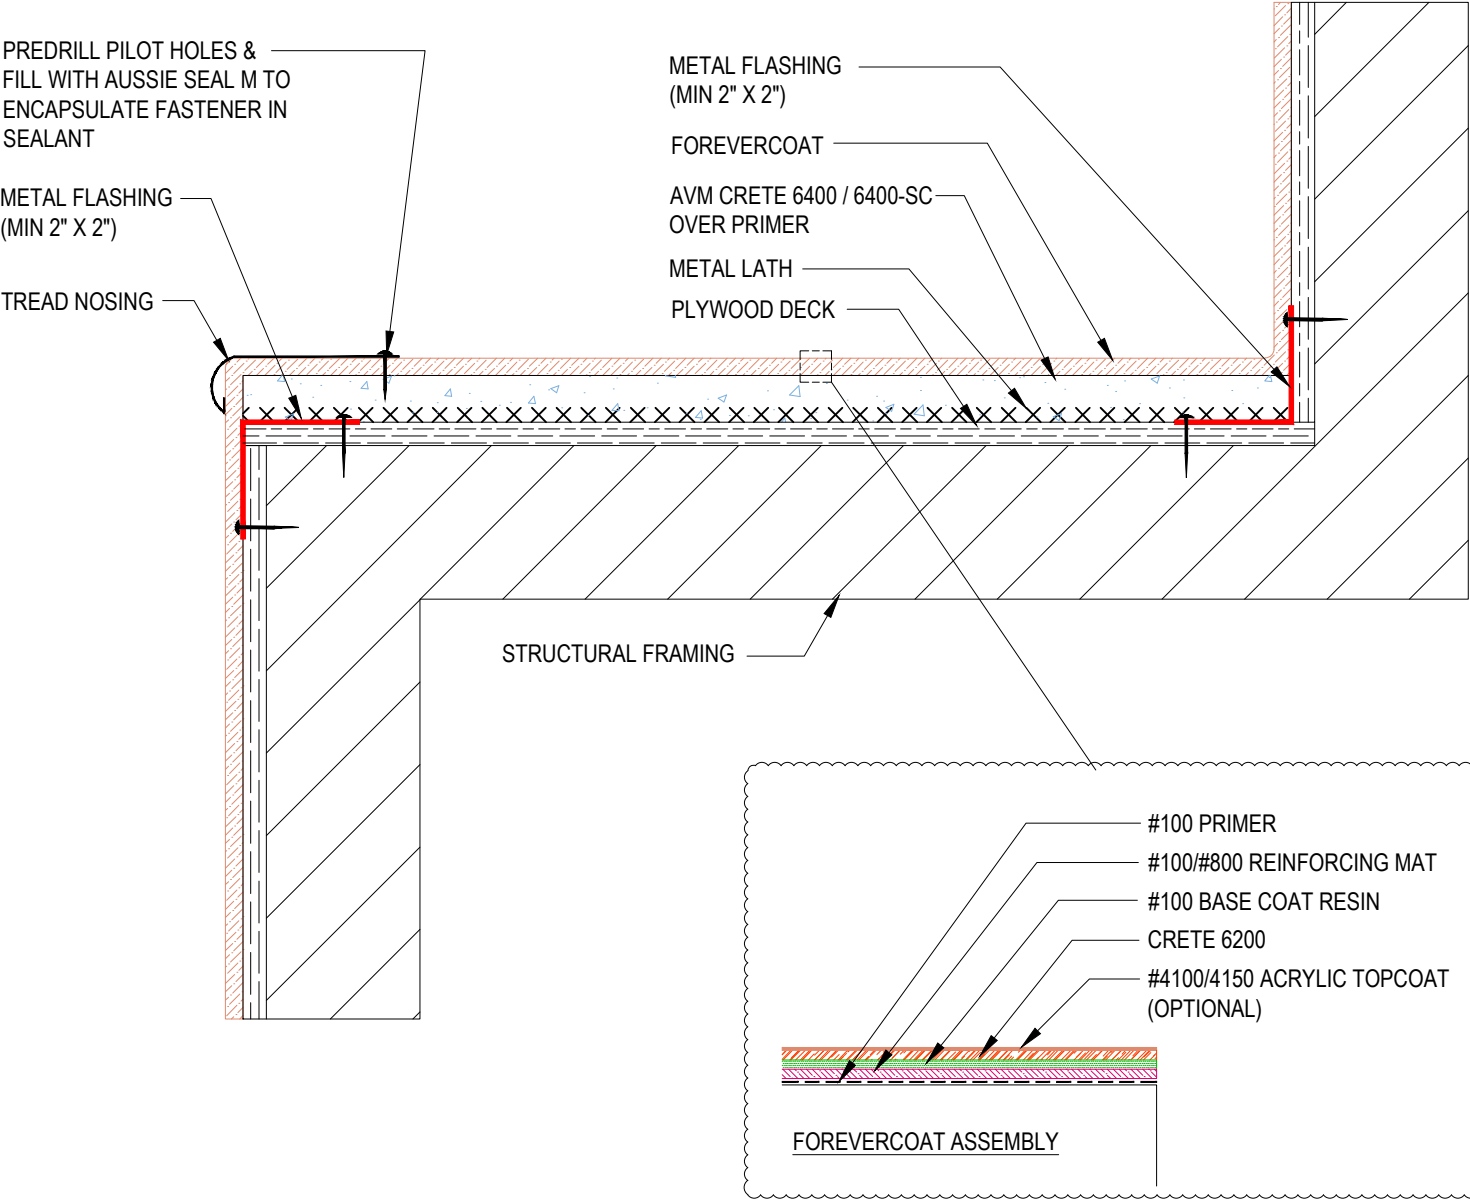


- Notes:**
1. For sheet metal installation please refer to detail # 0100-EFD-621-P-ISO
 2. AVM Crete 6400 - #400 Aggregate with 7400 Additive.
 3. See application instructions for full system recommendations and requirements.

DETAIL #:
0100-FEC-621-P-CS
AVM System 100
Forevercoat

Stair Flashing Over Plywood Substrate

AVM System 100 Forevercoat

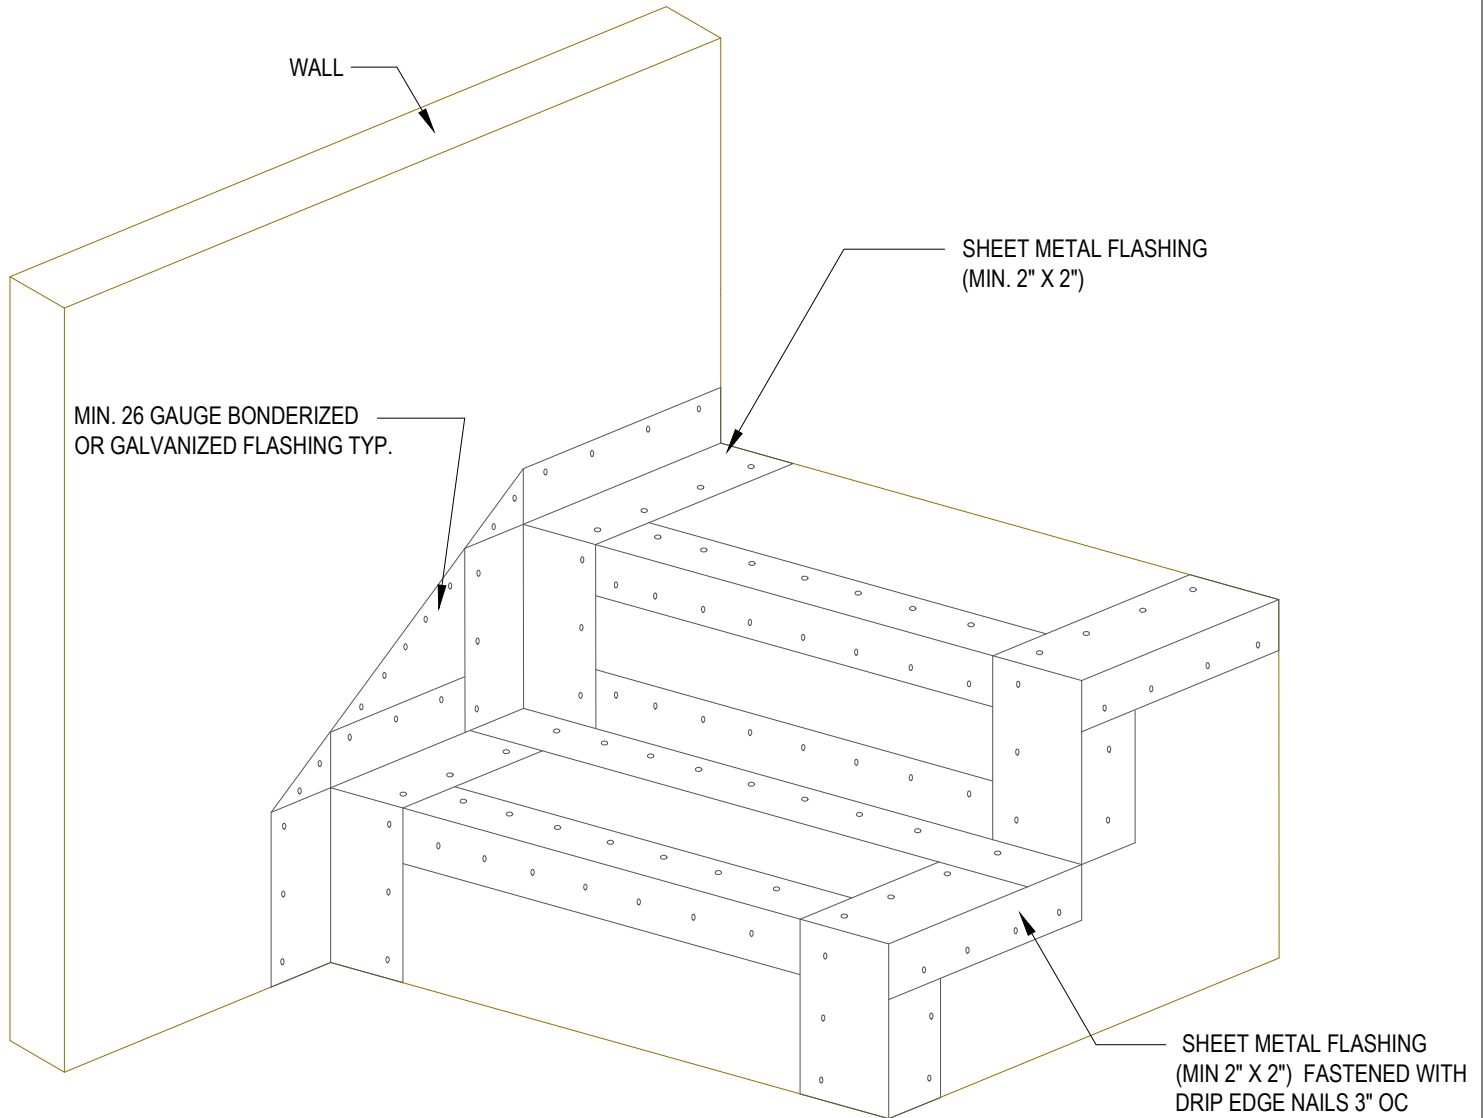


Notes:

1. Min 2" 26 gauge metal flashing.
2. Lightly abrade / sand to bare metal.
3. Fasten every 3-4" staggered to lie flat.
4. See application instructions for full system recommendations and requirements.

DETAIL #:
0100-FEC-642-P-CS
AVM System 100
Forevercoat

Threshold Over Plywood Substrate

AVM System 100 Forevercoat

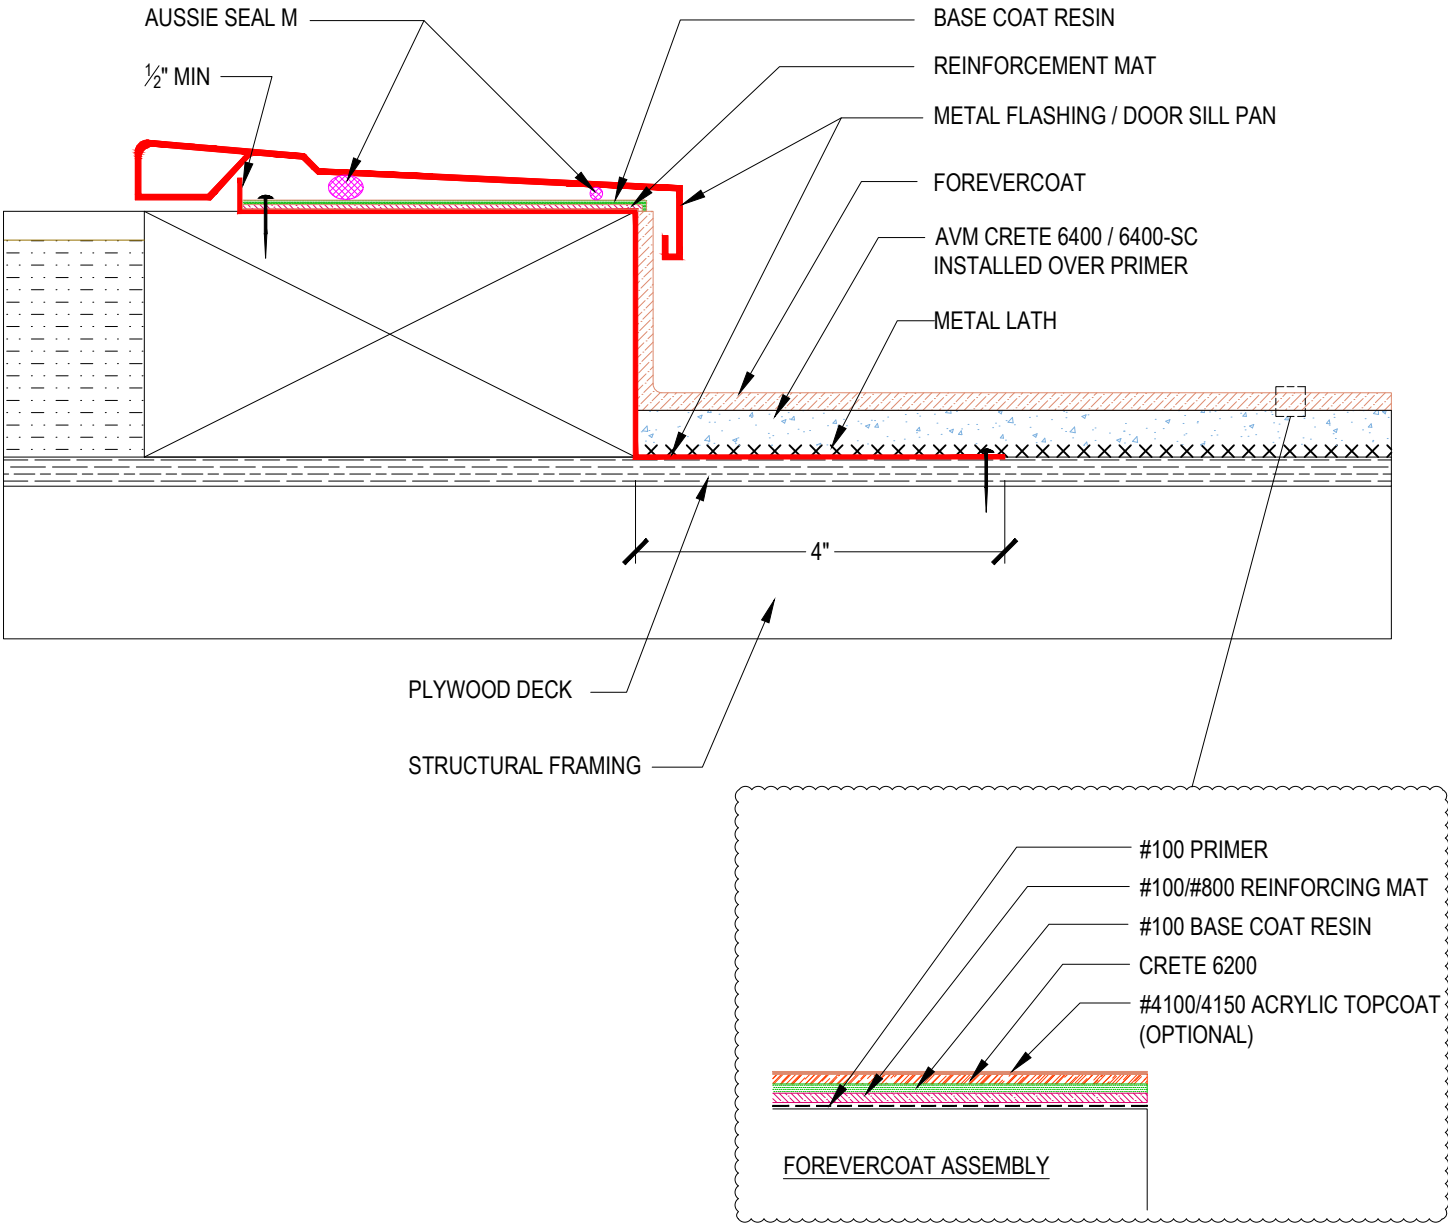

Notes:


1. Extend reinforcing mat and base coat resin to back edge of sheet metal flashing
2. Membrane to be bonded to sheet metal edge
3. AVM Crete 6400 - #400 Aggregate with 7400 Additive.
4. See application instructions for full system recommendations and requirements.

DETAIL #:
0100-FEC-752-P-CS

AVM System 100

Forevercoat

Drain Assembly Over Plywood Substrate AVM System 100 Forevercoat

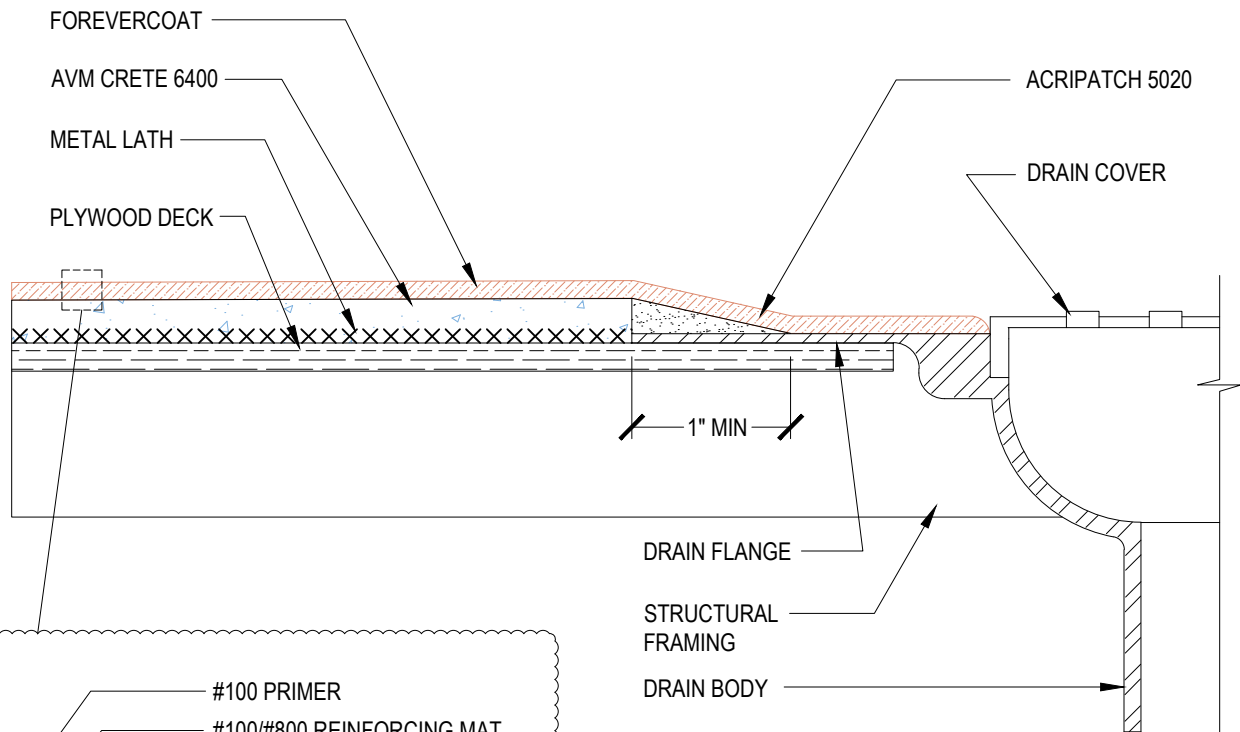

#100 PRIMER
#100/#800 REINFORCING MAT
#100 BASE COAT RESIN
CRETE 6200
#4100/4150 ACRYLIC TOPCOAT
(OPTIONAL)


FOREVERCOAT ASSEMBLY

Notes:

1. Stop AVM Crete 6400 at least 2" before drain opening leaving a minimum of 2" exposed flange.
2. Install Acripatch 5020 to transition from Crete 6400 to flange leaving a minimum 1" of flange exposed for direct membrane bonding.
3. Ensure drain sits low enough and that there is sufficient slope to properly drain the water.
4. Drain Flange - Remove all paints, primers, oils or foreign material by abrading / sanding to bare steel prior to full system application.
5. Base resin and reinforcement may be installed into properly prepared drain body.
6. Do not block weep holes.
7. See application instructions for full system recommendations and requirements.

DETAIL #:
0100-FEC-862
AVM System 100
Forevercoat

Railing Support with Mounting Plate AVM System 100 Forevercoat

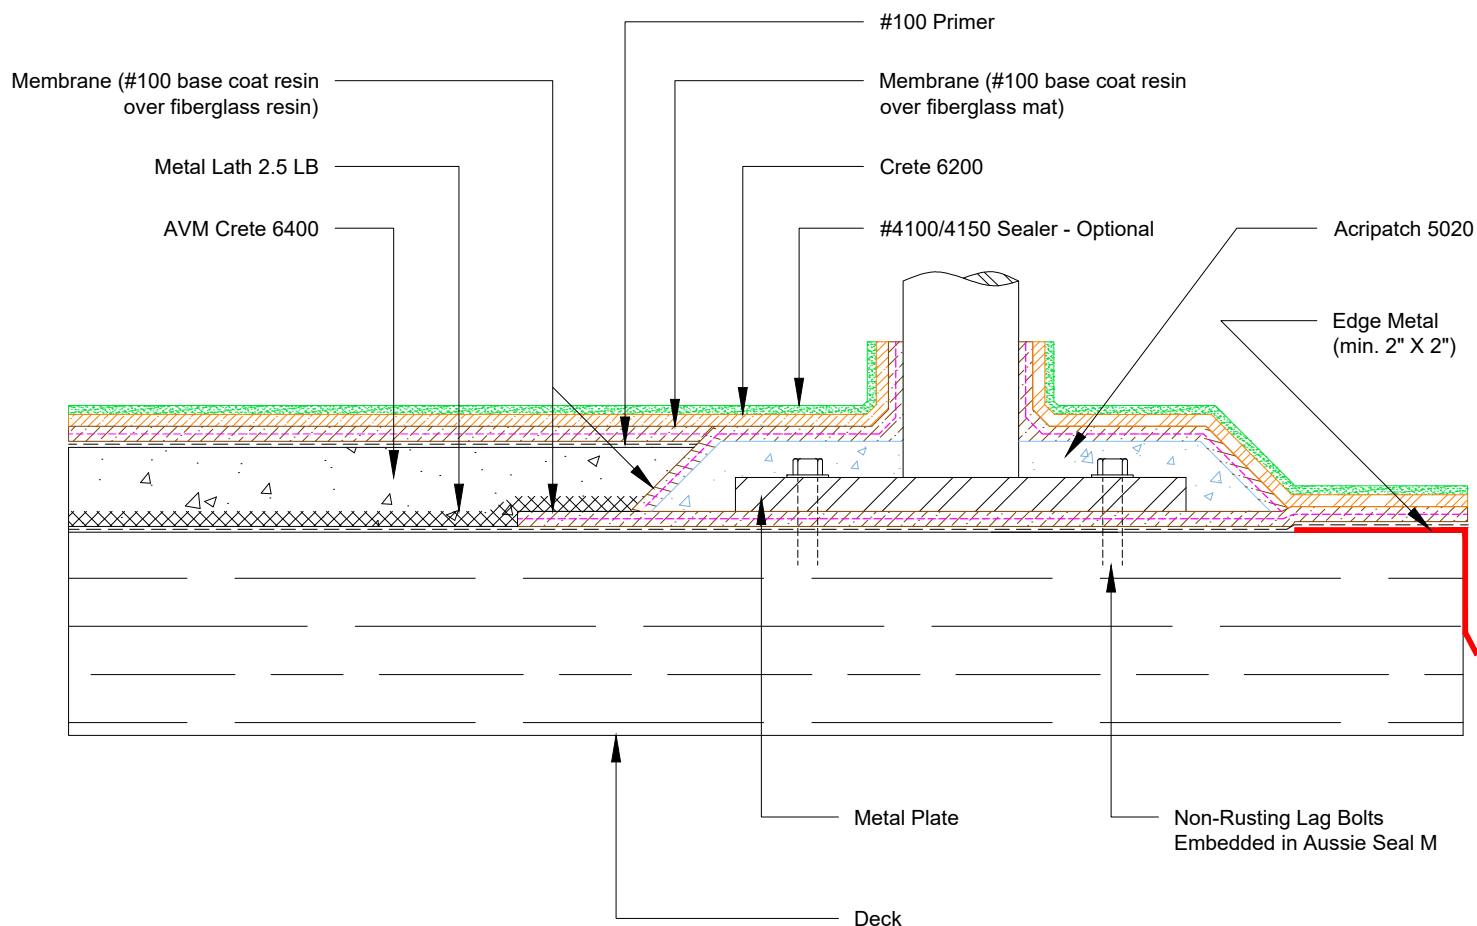



Notes:

1. If there is enough room between outer edge of metal plate and edge metal to install Crete 6400, it must be installed.
2. Face mount railing is the optimal installation for railing systems.

DETAIL #:
0100-FEC-870-P-CS
AVM System 100
Forevercoat

Tooled Control Joint

AVM System 100 Forevercoat

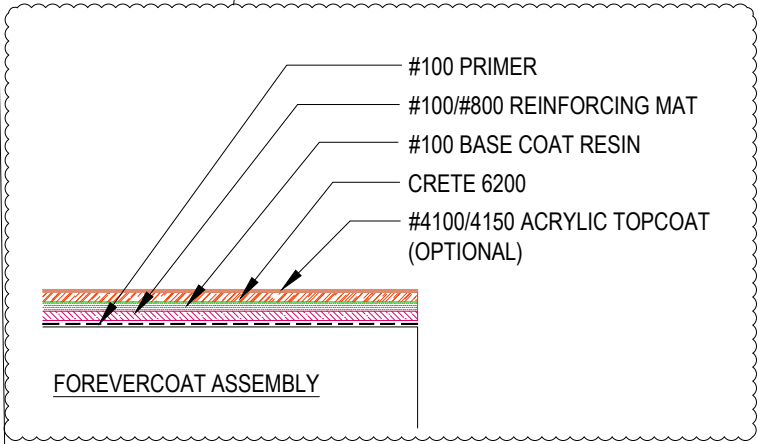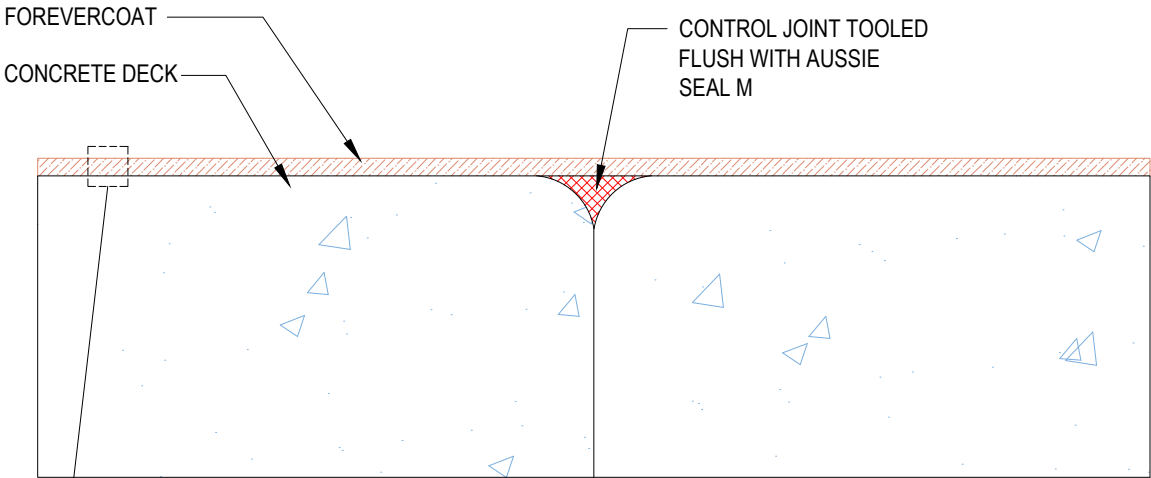


- Notes:**
- Excessive movement at the joint may cause the deck coating above the sealant to crease, deform or fail. Additional Periodic inspections and maintenance of these joints may be required.

DETAIL #:
0100-FEC-900
System:
Forevercoat

Scupper Flashing Detail

AVM System 100 Forevercoat

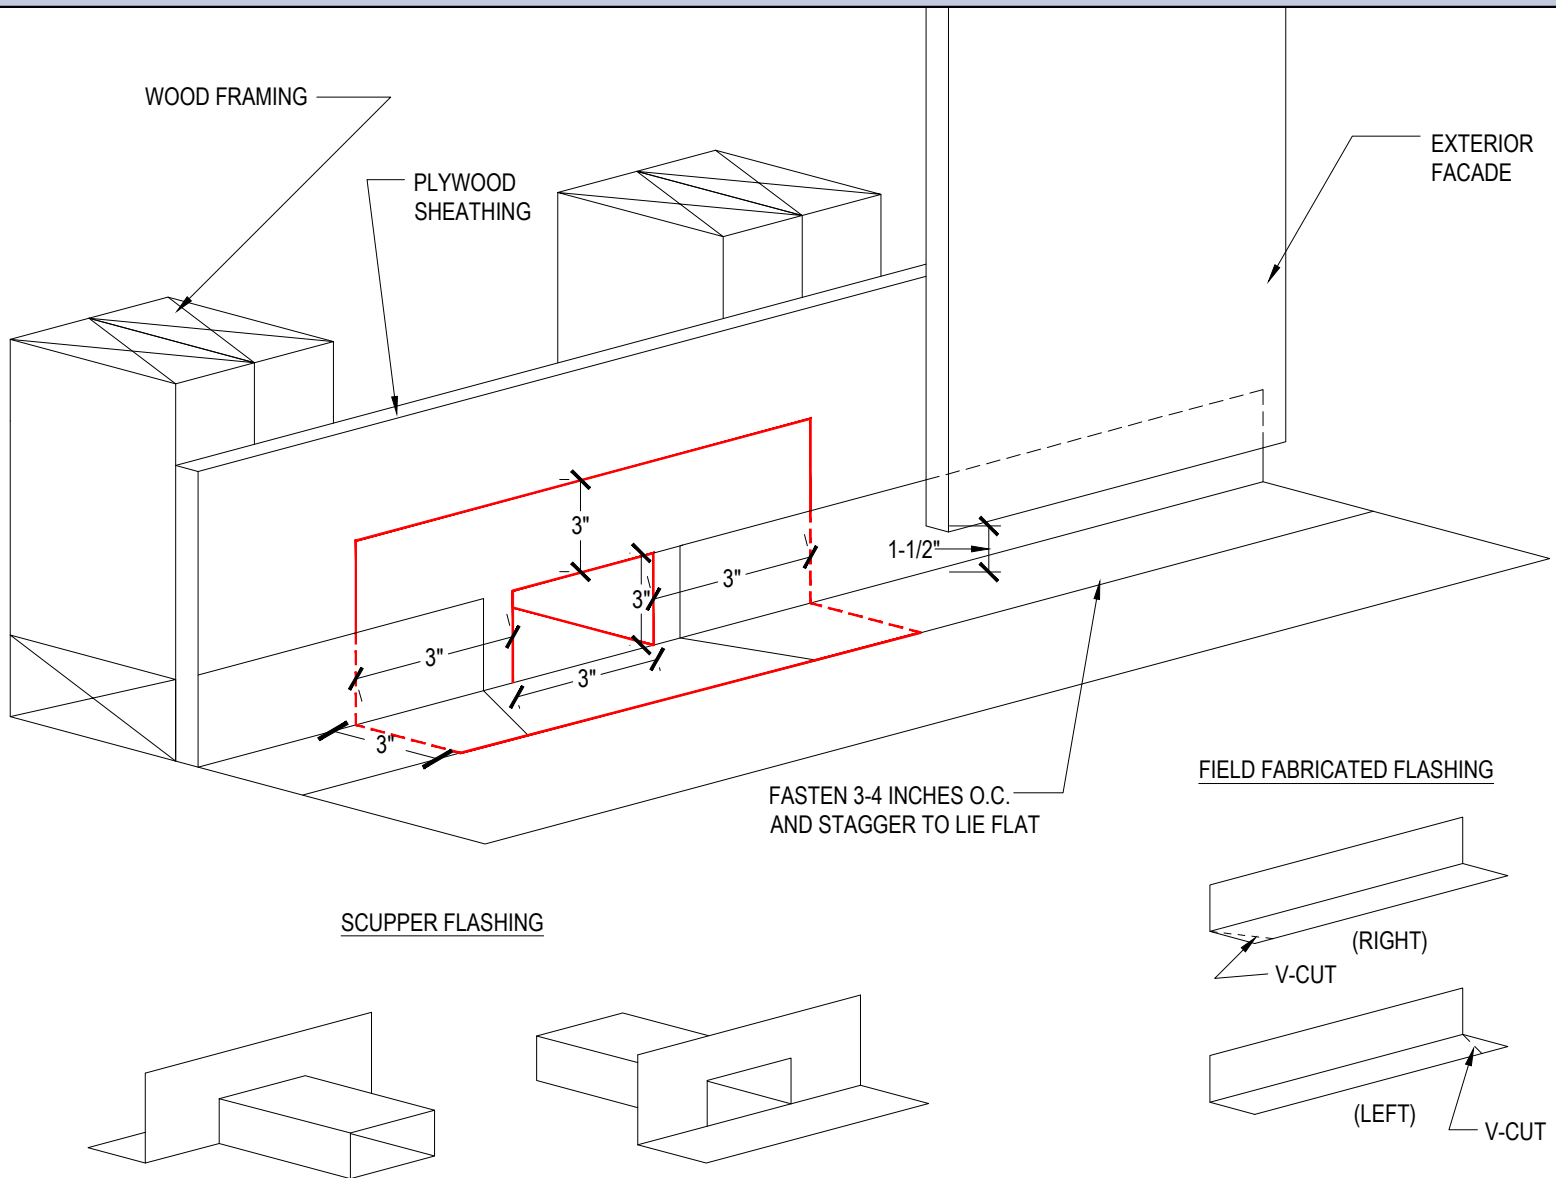

Notes:

1. Min. 2" 26 gauge metal (3-4" onto deck preferred)
2. Lightly abrade/sand to bare metal
3. Wet set in Aussie Seal M sealant & stagger to lie flat
4. Concrete substrates wet set in Aussie Seal M & fasten as needed with shot pins. Be sure not to spall concrete