


DETAIL #:
0520-0006
System:
Aussie Membrane 520

Transition to Aussie Skin Flush Footing

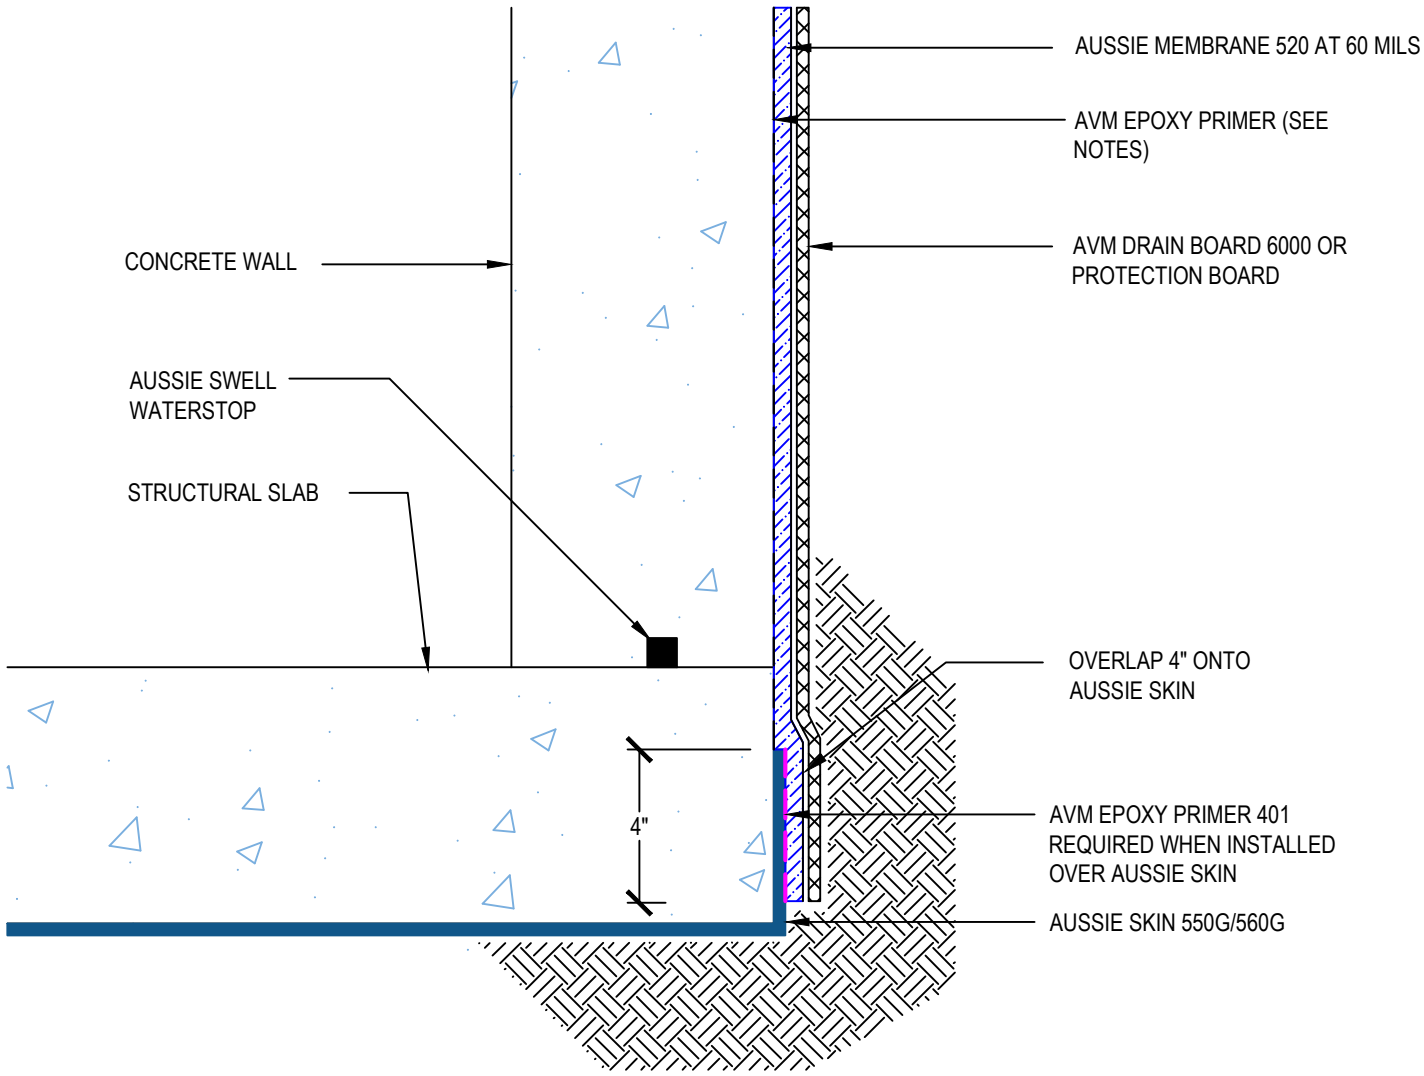

AUSSIE MEMBRANE 520



Notes:

- 1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
- 2. Epoxy primer may be required if proper adhesion is not achieved - see installation instructions for further information
- 3. Contact AVM if no drain board or protection board is specified