DETAIL #:
0580-AL-7004

AUSSIE MATE® 580-AL

Standard Overlap

AVM AUSSIE MATE 580-AL

AVM INDUSTRIES INC

FACTORY LAP

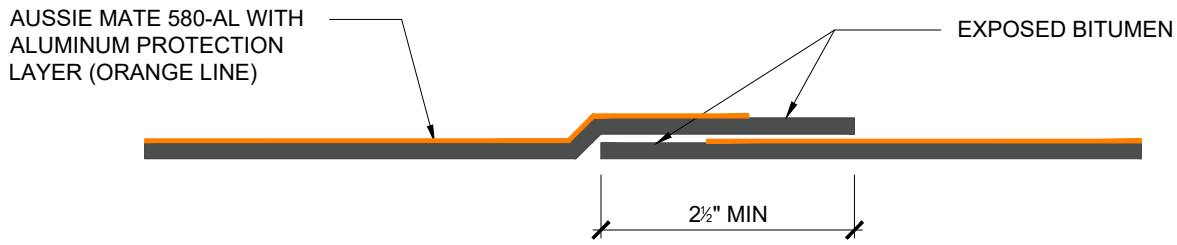

Important Note: When installing the "Factory Lap", The Installation procedure should be as follows:

1. Before bonding the next layer of Aussie Mate 580-AL to an existing layer, Remove both clear plastic films from the factory laps (Where the aluminum protection layer ends)
2. Make sure surfaces are clean before bonding overlaps.
3. Install the next sheet of Aussie Mate 580-AL with a minimum 2-1/2" overlap.
4. Roll the steel roller over the lap several times while applying pressure to ensure proper adhesion.
5. In cold weather, using heat gun will improve adhesion.

NON-FACTORY LAP

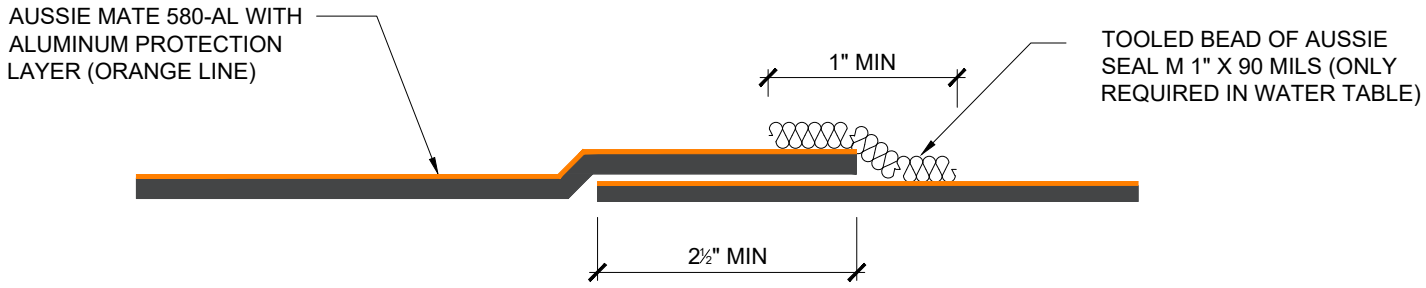

Important Note: When installing the "Non-Factory Lap", The Installation procedure should be as follows:

1. Make sure surfaces are clean before bonding overlaps.
2. Install the next sheet of Aussie Mate 580-AL with a minimum 2-1/2" overlap.
3. Roll the steel roller over the lap several times while applying pressure to ensure proper adhesion.
4. In cold weather, using heat gun will improve adhesion.
5. In the water-table, on non-factory laps Apply Sealant (Aussie Seal M) over the seam.

NOTES:

1. Aussie Mate 580-AL is an LARR approved Waterproofing membrane and Methane Barrier.
2. Aussie Mate 580-AL is a UV stable, 60-mil heavy duty bituminous sheet membrane with aluminum protection layer for Below-Grade waterproofing applications. Aussie Mate 580-AL may also be used as a methane and/or vapor barrier under horizontal slabs on grade.
3. See "Aussie Mate 580-AL Installation Instructions" for system requirements.

AVM Industries, Inc.
8245 Remmet Ave, Canoga Park, CA 91304

Quality Waterproofing Products

888.414.1041 818.888.0050
www.avmindustries.com

FILE NAME: 0580-AL-7004

Revision Date: 10/20/2020

Protected by Copyright @ AVM Industries, Inc.